

BECKHOFF


Last Changed : 13.02.2013

New Messageline




Activation

To activate the new Messageline, set the setting in "General" in the entry "NewMessageLine" to "True":

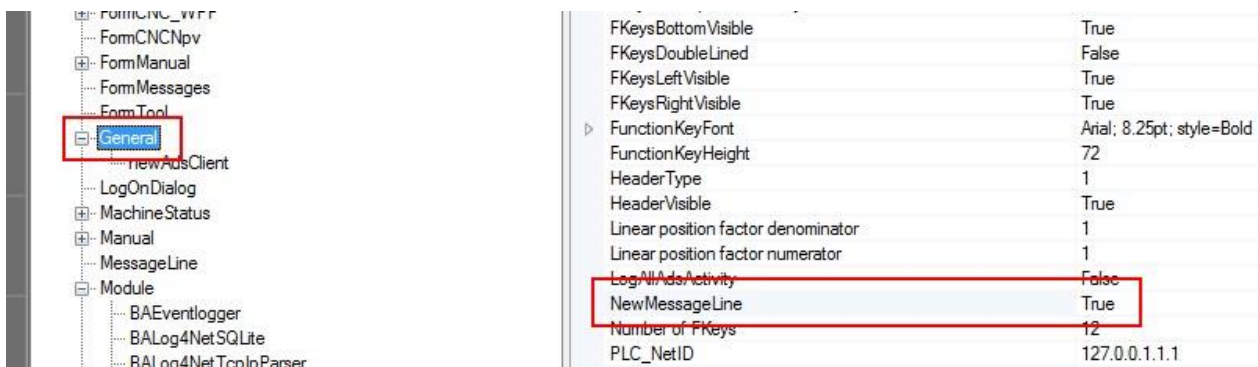

Parameterization

In the Settings area in Module.BAEventlogger you find some settings concerning the message line:

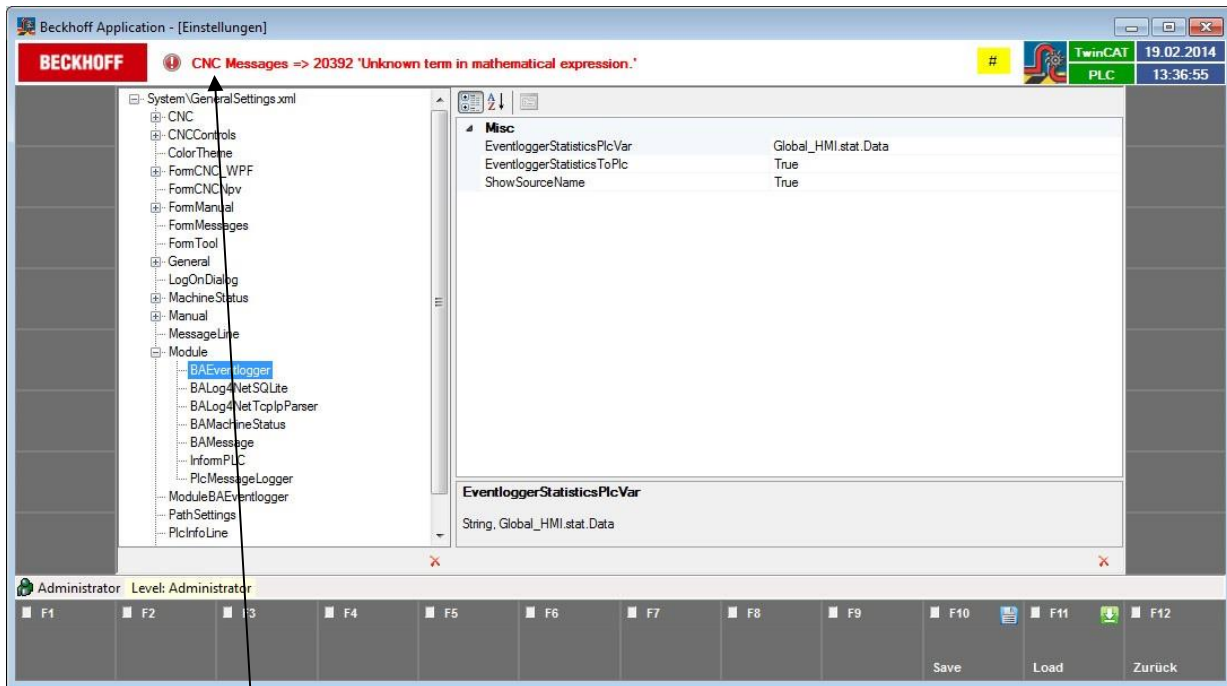

- **ShowSourceName:** When viewing the messages the "Event Source" is associated with the displayed text.
- **EventloggerStatisticsToPlc:** If "True" Event Logger statistics will be transferred to the PLC. The number of fault messages per error class and the transfer status of all messages in this class are sent to the PLC in a data structure.
- **EventloggerStatisticsPlcVar:** PLC variable name of the structure in which the data is transmitted. The structure shall be constructed as follows:

Example:

Data : Array[0..8] of EventStatistikData

With

```
TYPE EventStatistikData:
STRUCT
    ///Anzahl Meldugen - Klasse
    Count: INT;
    ///Logische Verknuepfung des Status alier Meldungen der Klasse
    Status: INT;
END_STRUCT
END_TYPE
```