

Firmware Upgrade Procedure

30/08/07




1.1 Upgrade Procedure

Telit will provide you with the firmware upgrade you've required in the zip format by e-mail.

- Unzip the xxxxxxxx_TFI.zip file in your own folder.
- Launch the xxxxxxxx_TFI.exe

A new window will appear like on the picture below:

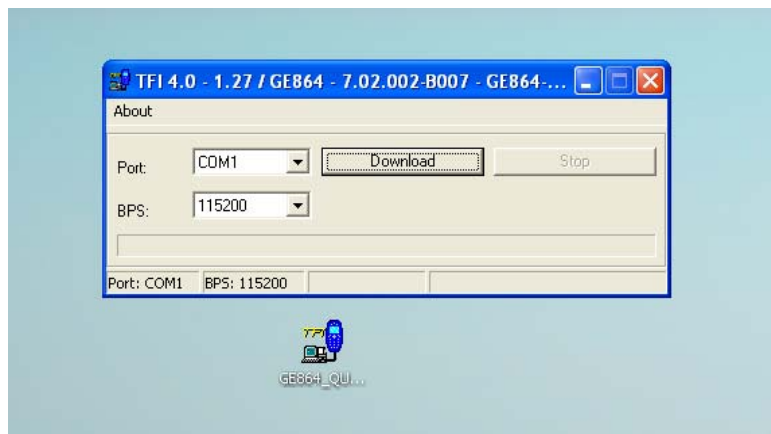

- Remove the supply from the module.
- Connect the COM used port to the module RS232 connector in the EVK.
- Select the baudrate and the COM port used.

NOTE: unless you have a special fast hardware the max speed to be used is 115200.

Now you should proceed with the following steps:

- Click over the "Download" button.
- A bar starts blinking.
- The message "Power ON the MS: Linking..." is shown on the right corner of the window.
- Supply the module.
- Put the ON pin to low state for 5sec.
- Release the ON pin.
- the message "Programming flash..." is shown on the right corner of the window.
- Wait until the window "Download successfully completed" appears.

Please do not hesitate to contact us for any further questions on the e-mail: ts-modules@telit.com

