


Restore the default configuration description

1. There is a DEFAULT port next to the converter terminal, as shown in the following figure

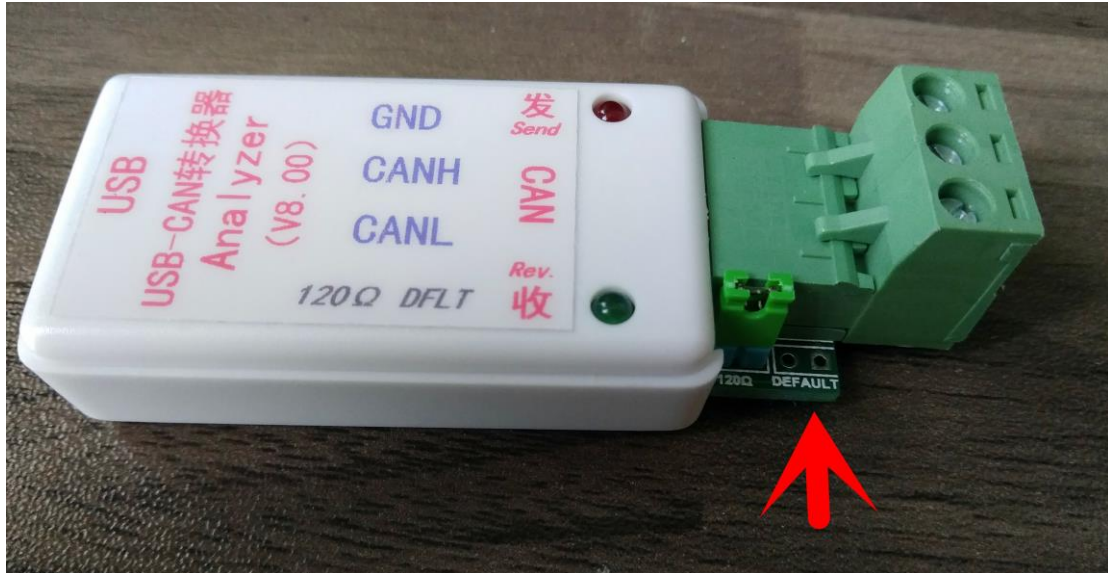

2. Shortens the converter terminal DEFAULT with tweezers and the like.



3. And then power the converter



4. The converter will be restored to the default configuration.

The converter will switch off transparent transmission, offline sending, offline Reply, configuration accepting ID enabled and so on by default configuration, only a simple and normal USB (232) -CAN converter.