


# Bus Monitoring

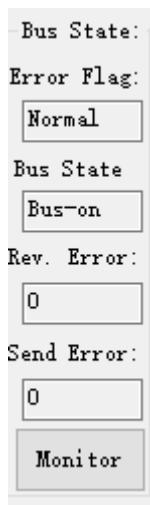

Bus State:  
Error Flag:  
Normal  
Bus State  
Bus-on  
Rev. Error:  
0  
Send Error:  
0  
Monitor

Click on the bus *Monitor* button to view the bus status and see if there is a send or receive count.

The normal acceptance error or the send counter is 0