


Simple tool to test stepper board output.

The tool puts a load on the stepper output board so you can see if the 4 outputs work correctly. When using the board for a longer time it is advisable to remove fuse E3.

When stepping forward, the LED's must light up in this sequence: A4 & B3, then A3 & B3, then A3 & B4 and then A4 & B4.

machine's rear view

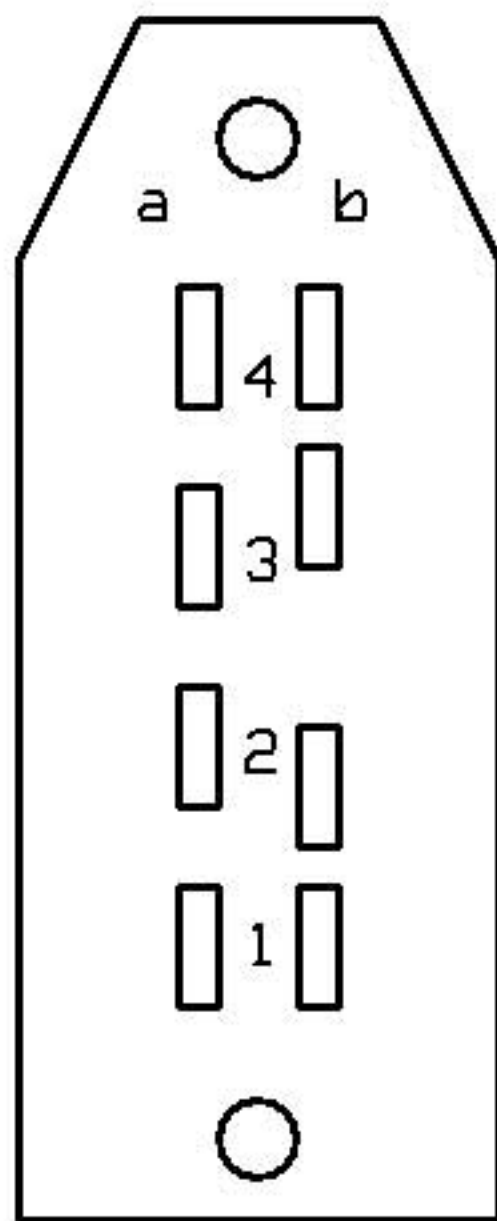

Axis motor connector

