

# Change the provisioning URL

---

**URL:** <https://docs.grassfish.com/grassfish/docs/change-provisioning-url>

**Archiviert am:** 2025-07-17 18:41:51

---

You can change the provisioning server URL during or after initializing your player. This may be necessary, for example, if you use your own provisioning server. There are two ways to do this:


- [Change the URL via a configuration file](#)
- [Edit the URL in the InitBox](#)

## Change the URL via configuration file


---

To change the URL, perform the following steps:

1. Use a text editor to create a file named **provisioning.conf**.
2. In the configuration file, enter the URL of your custom provisioning server.



3. Save the file in the Android installation package folder.

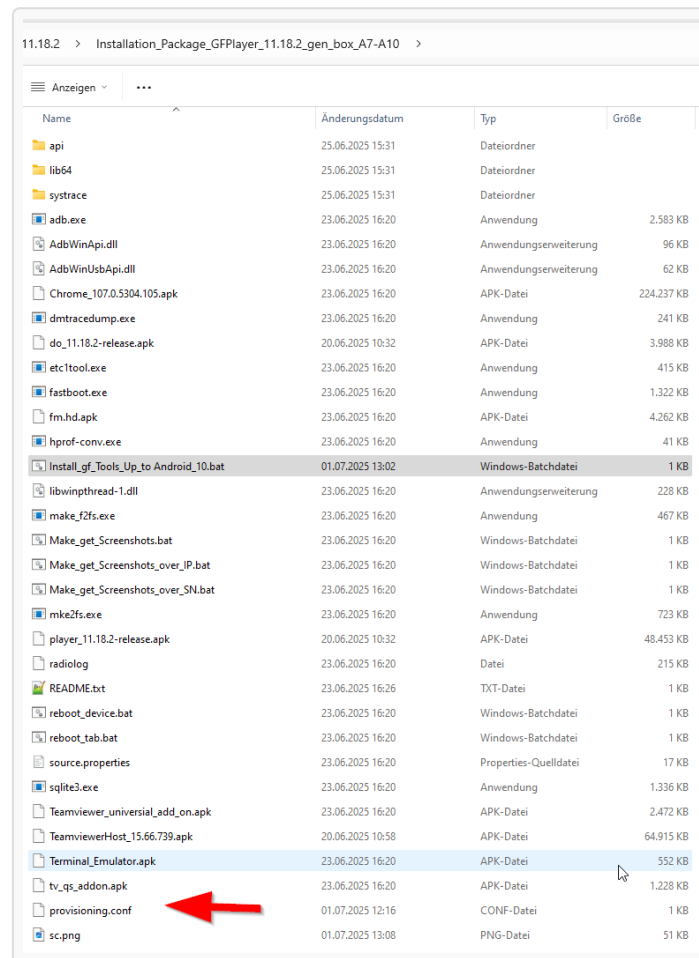

4. Open the script file **Install\_gf\_Tools\_from\_Android\_[version]-on.bat**.

5. Add the following command to copy the file to the Android device: `adb push provisioning.conf /sdcard/Download/GF/config/`

```
timeout 1
adb push provisioning.conf /sdcard/Download/GF/config/provisioning.conf
```

6. Save your changes and close the file.

## Edit the URL in the InitBox

You can also edit the provisioning server URL once you've installed and configured the Android Player. The player automatically opens the InitBox where you can do the following:

1. In the InitBox, click **EDIT** next to **Provisioning host**.
2. Enter you custom URL.
3. [Continue the initialization](#), to connect player and server.

Provisioning  
Connecting...

Open your provisioning website and start the initialisation remote with the **TPID**:

EXIT

START CLASSIC INITBOX

Provisioning host

<https://s32grass01.vie-i.local/gv2/webser>

EDIT

ip address

192.168.168.192