

Connect Wi-Fi

URL: <https://docs.grassfish.com/docs/connect-wi-fi-hw02200>

Archiviert am: 2025-07-17 18:42:08

This article describes how to connect a HW02200 device to your Wi-Fi network.

Prerequisites

Ensure that you meet the following prerequisites:

- HW02200 connected to power and a monitor
- Keyboard with F keys (We recommend Logitech K400.)


Connect the device to Wi-Fi

To connect the device to Wi-Fi, perform the following steps:

1. Connect the keyboard to one of the device's USB ports.
2. Press **F10** on the keyboard. On Logitech K400, press **FN** and **F10** simultaneously.



3. In the **Screen Orientation** window, click on **SAVE AND CONTINUE**.

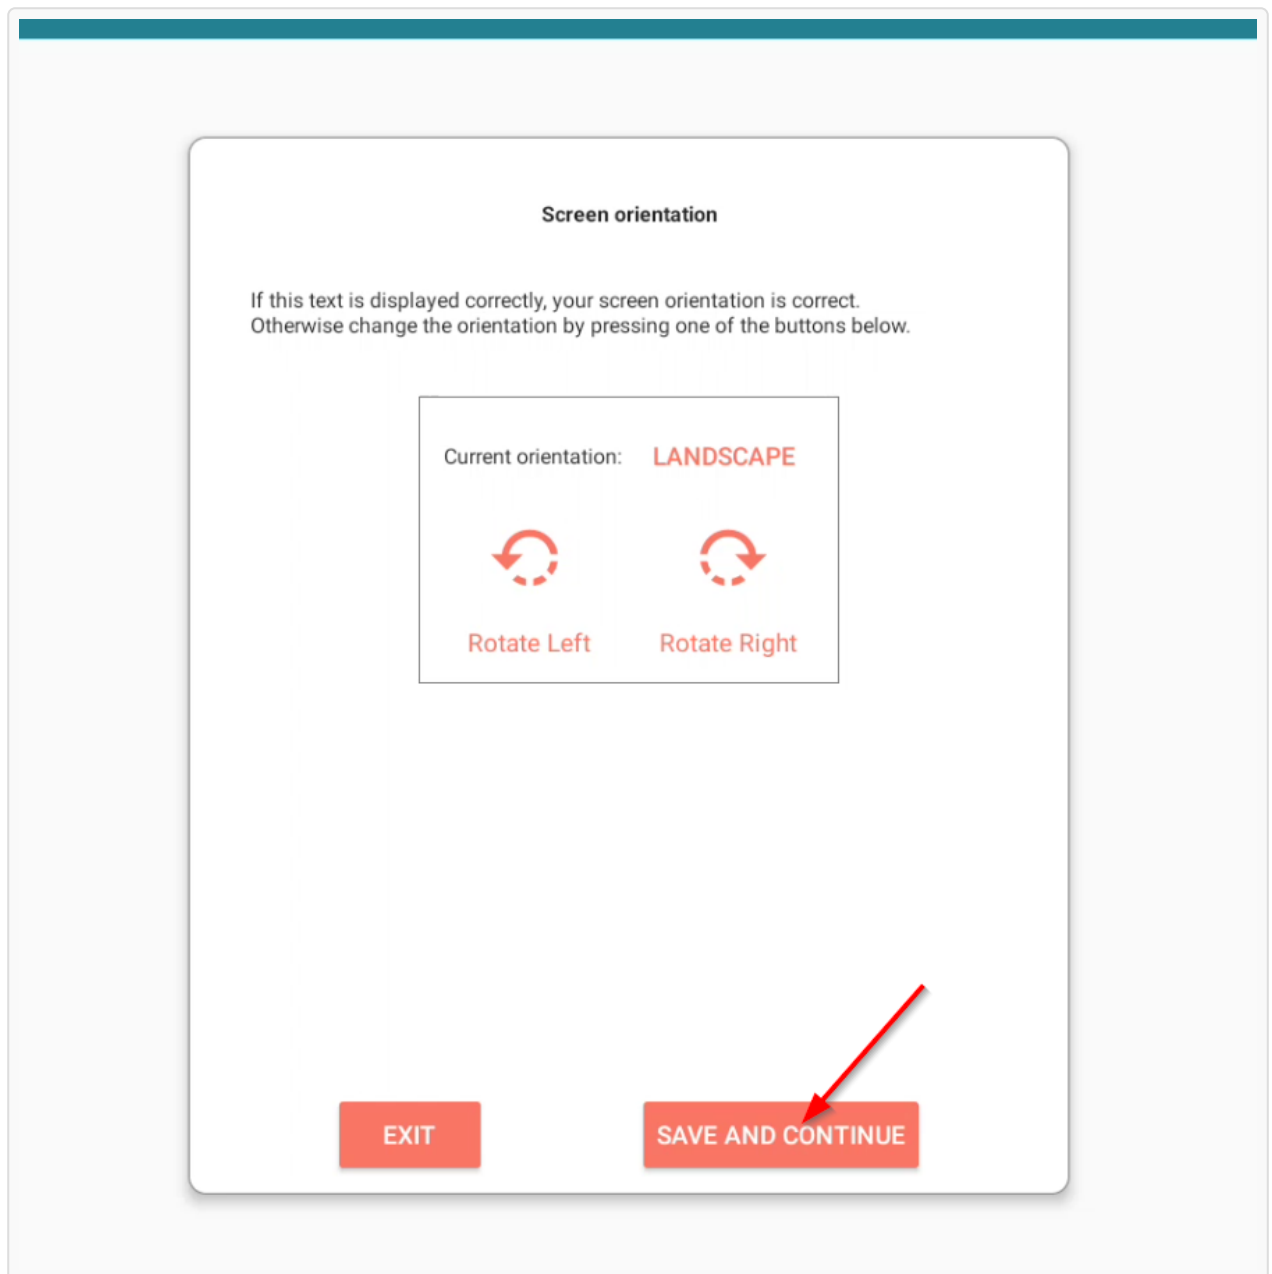

4. In the **Configure your system** window, click on **Network**.

Configure your system

Before you continue, make sure that the operating system is configured correctly. Be aware that the settings made here may not be configurable via the Grassfish CMS



Network



Timezone



Serial Devices




Use Tablet Overlay

EXIT


CONTINUE

5. In the **Network & internet** window, enable **Wi-Fi**.

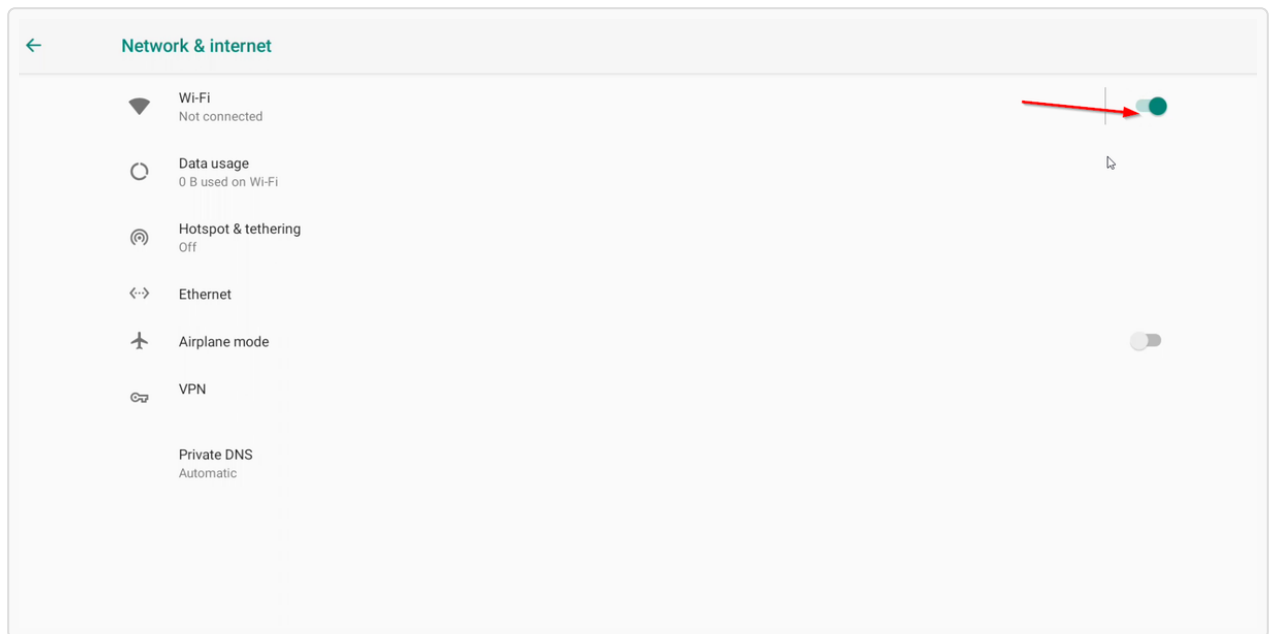


6. Click on **Wi-Fi** to add your Wi-Fi network. Wait while the system searches for your network.


7. Click on your Wi-Fi network.

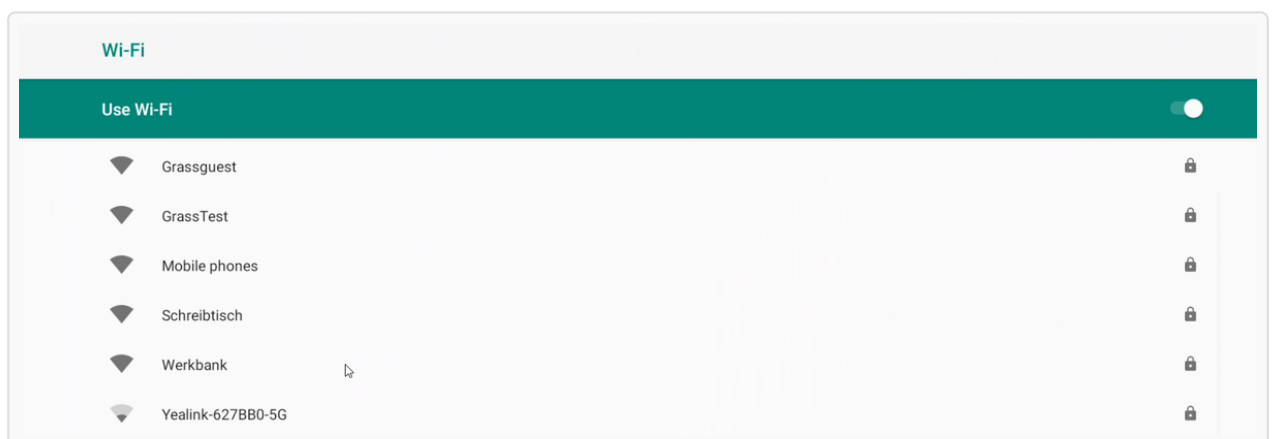


8. Enter your Wi-Fi password. Note that the keyboard setting on the device is set to English by default.

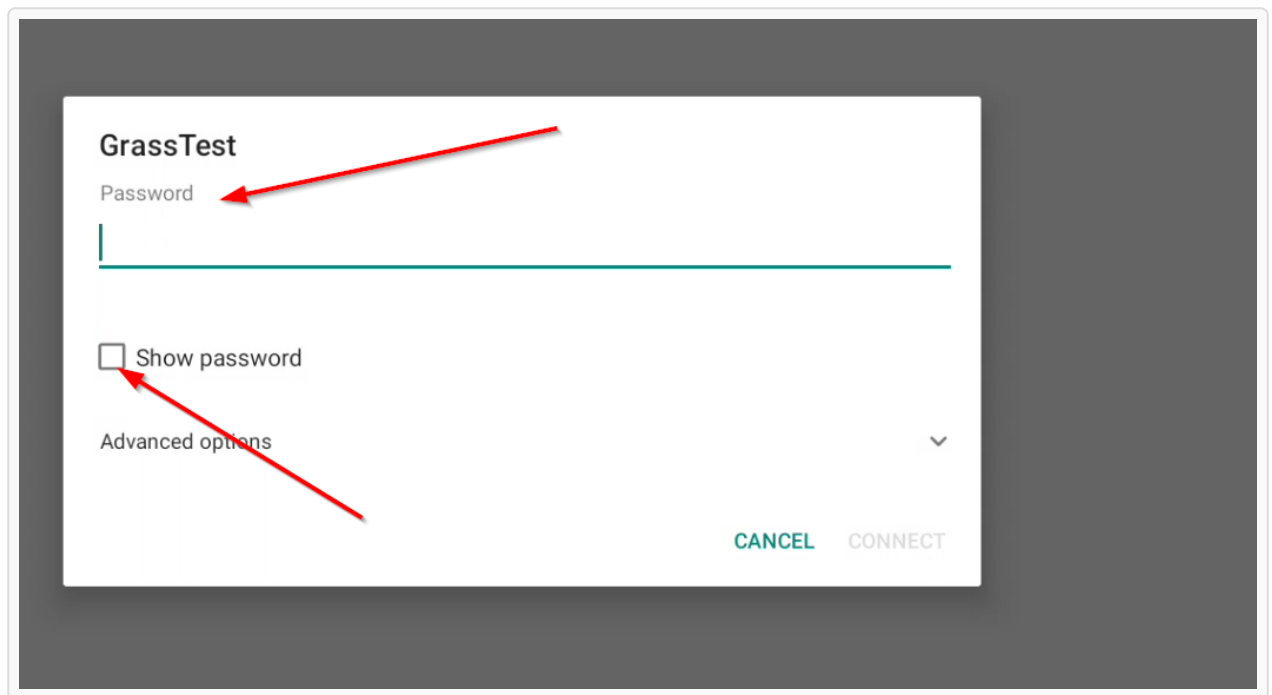

9. Optionally, select **Show password** to check your password.
10. Click on **CONNECT**.
11. Click on the **Back** arrow to return to system configuration. Alternatively, wait five seconds to be redirected automatically.

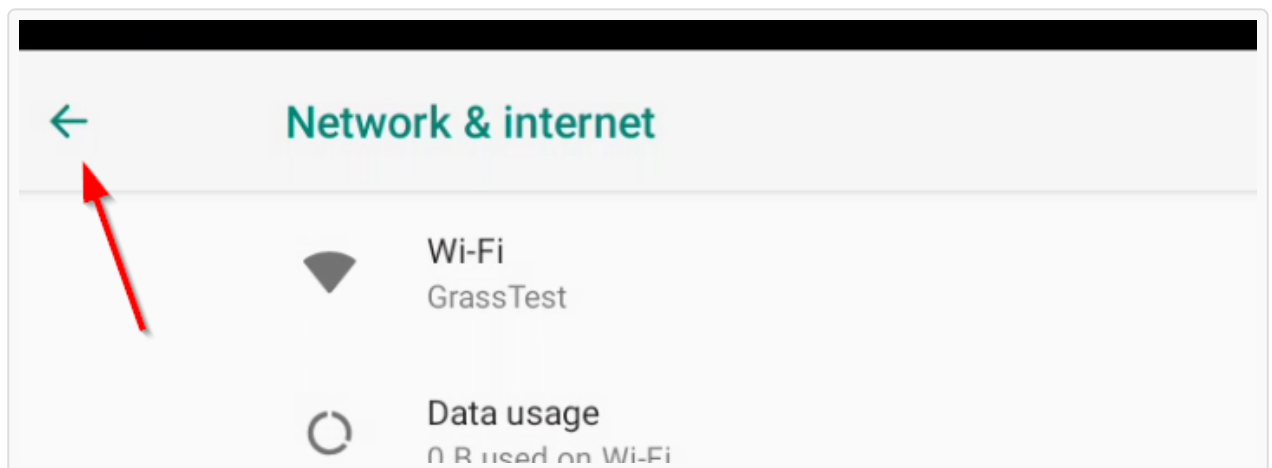

12. Click on **CONTINUE**.

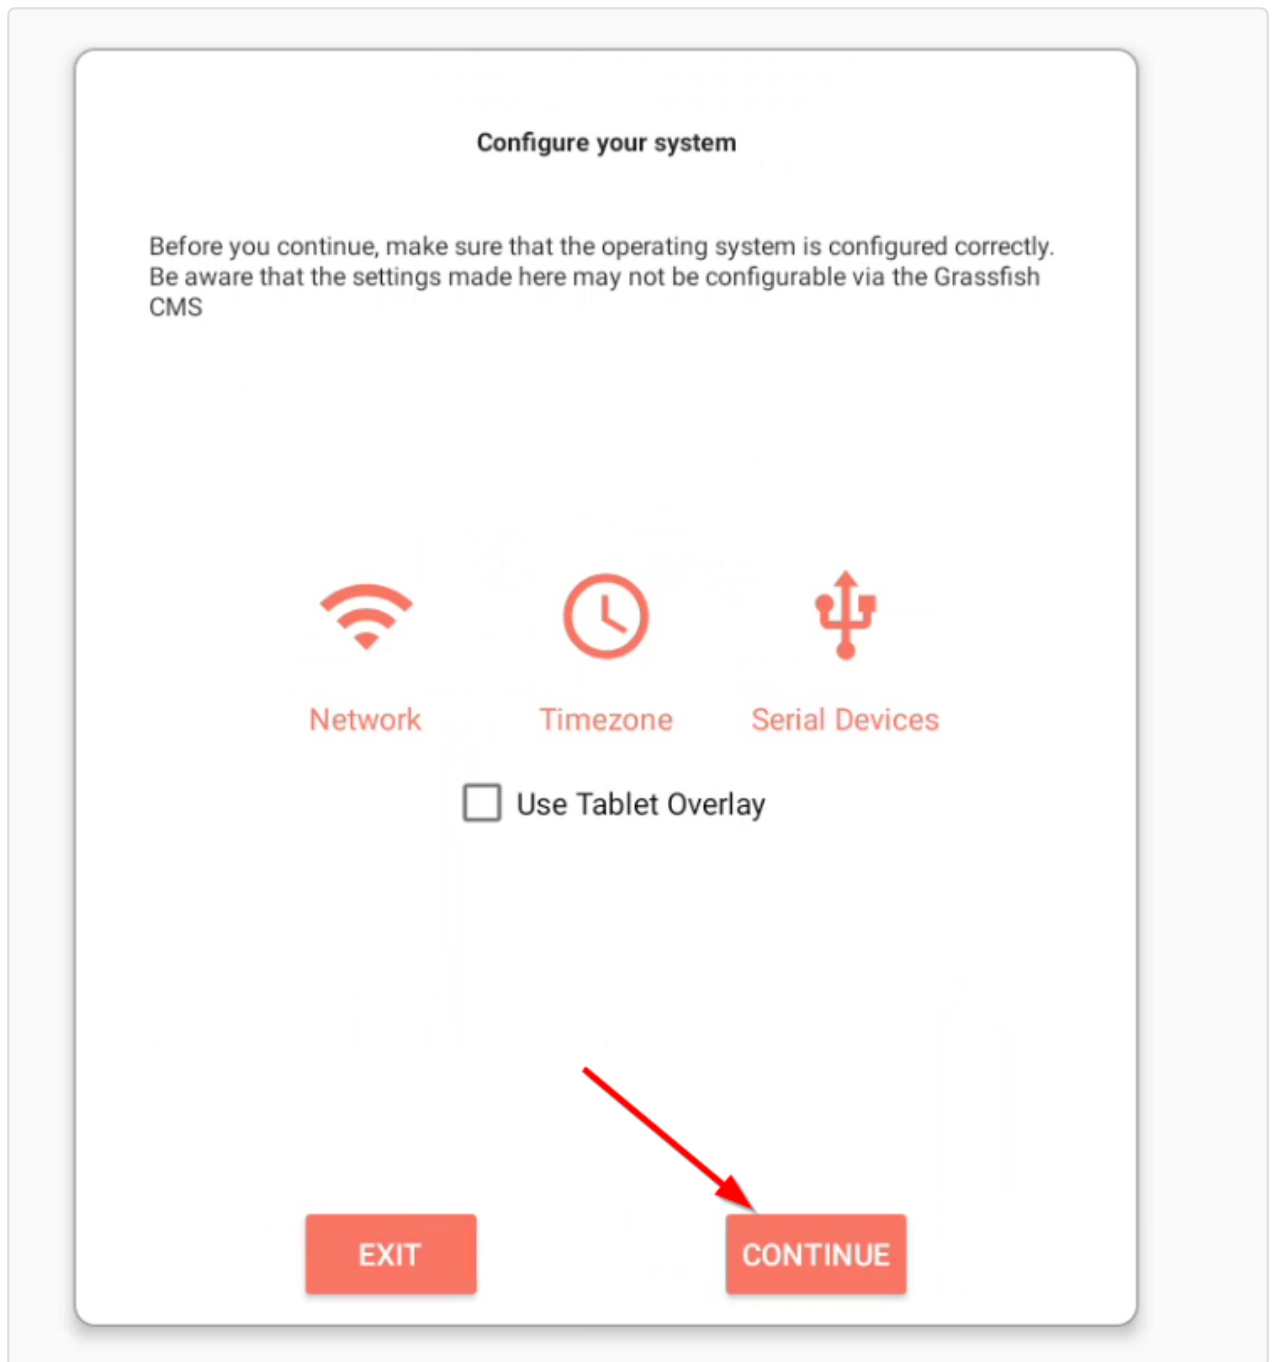

13. Click in the window or press a key to restart the player.



The device is now connected to your Wi-Fi network.