


Exit Kiosk mode

URL: <https://docs.grassfish.com/docs/kiosk-mode>

Archiviert am: 2025-07-17 18:43:41

The player stays in Kiosk mode while spots are being played. Kiosk mode looks like this:

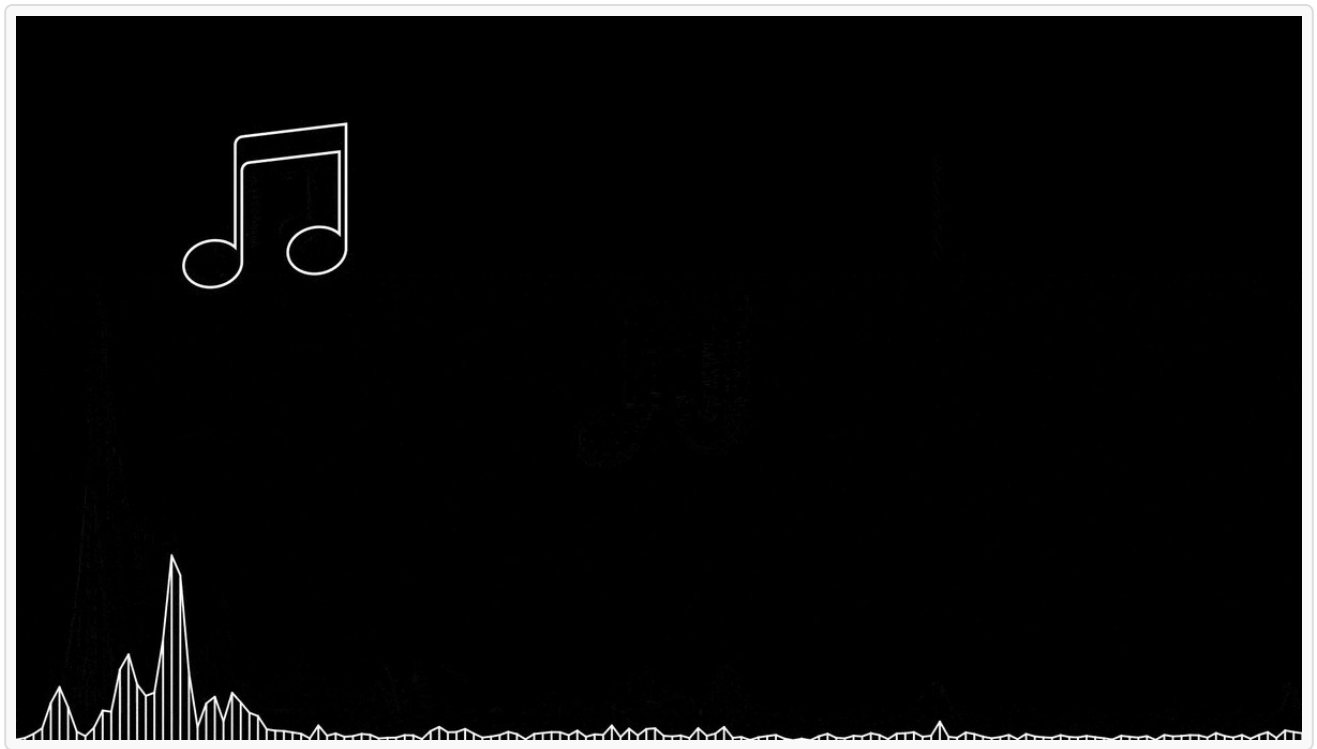

Access controls

Exit Kiosk mode and gain access to the player controls in one of the following ways:


Use the keyboard

If you have a keyboard connected to the player, press **F12**.

Use the touch screen

If you have a player with a touch screen, use the following touch combination:

- Click once on the upper left corner.
- Click once on the upper right corner.
- Click three times on the bottom left corner.
- Click once on the bottom right corner.

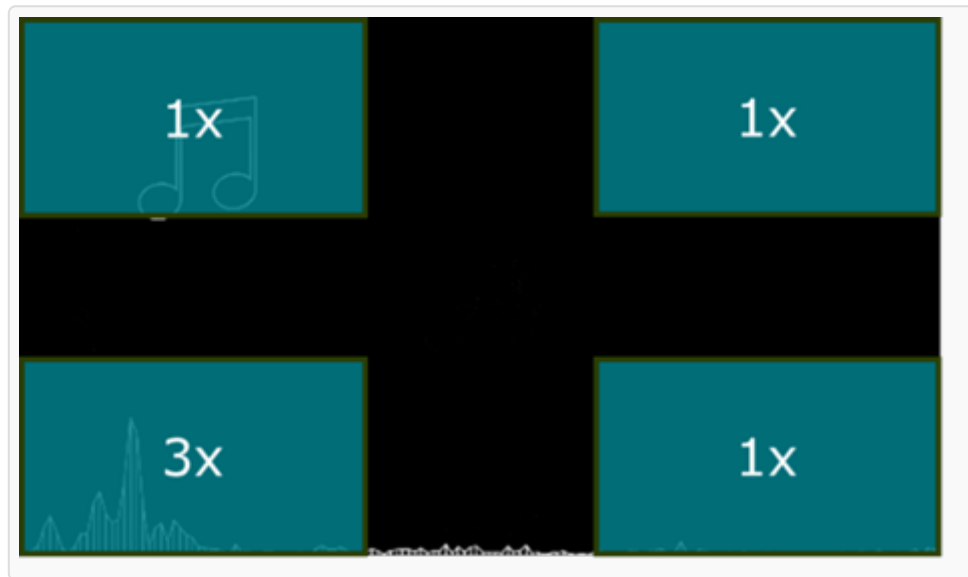

Note

The time between clicks must not exceed three seconds.