


Your Current Vehicle: 2018 Chrysler 300

With Paddle Shift

WITH PADDLE SHIFT

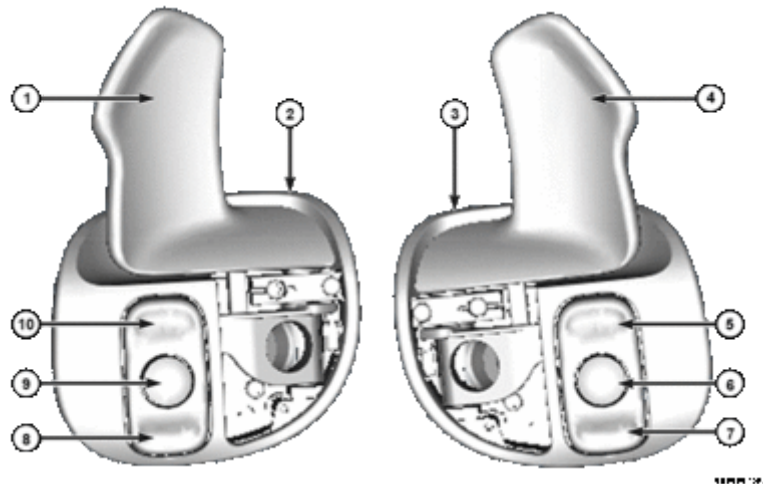

[Click to Enlarge](#)

NOTE

SRT paddle shift switches shown. Non-SRT paddle shift switches similar.

The remote radio switches (2 and 3) are mounted to the back of the steering wheel. Each remote radio switch includes a momentary rocker with a momentary push button located in the center, between the two ends of the rocker in addition to the paddle shift switch. On vehicles equipped with the combined steering wheel mounted paddle shift and remote radio switches the right switch (2) includes the following functions:

- Upshift paddle shift switch (1)
- Volume Up (10)
- Mode (9)
- Volume Down (8)

On vehicles equipped with the combined steering wheel mounted paddle shift and remote radio switches the left switch (3) includes the following functions:

- Downshift paddle shift switch (4)
- Seek Up (5)

- **Preset (6)**
- **Seek Down (7)**

**(Refer to Electrical/8A - Audio and Video/SWITCH, Remote Radio/Operation) (?
t=113085).**