


## Climber-8 level nozzle


After removing the blue clip, press down on the white clip, and then pull up the feeding tube.

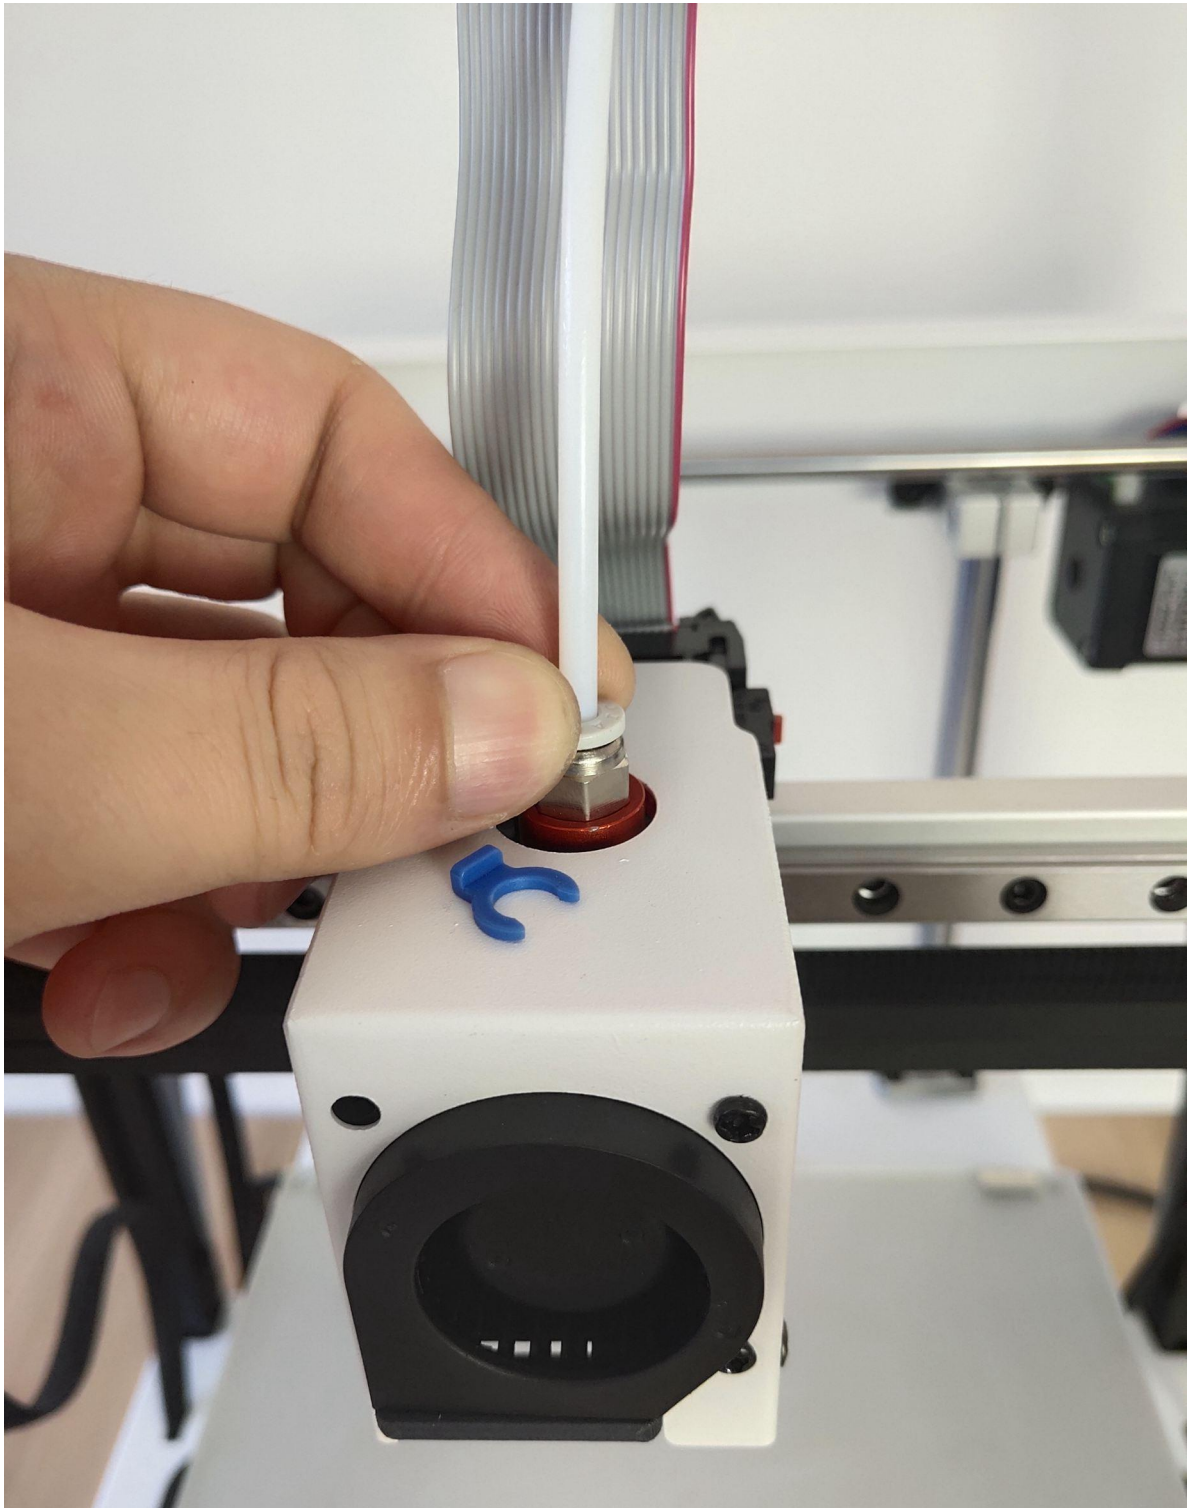

Place the removed feed tube on the outside of the frame to prevent it from obstructing the printer from homing.

Even if you are not leveling the nozzle for the printer for the first time, you will need to remove the feed tube.

After the printer has been working for a period of time, you may need to heat the nozzle to remove the feeding tube smoothly.

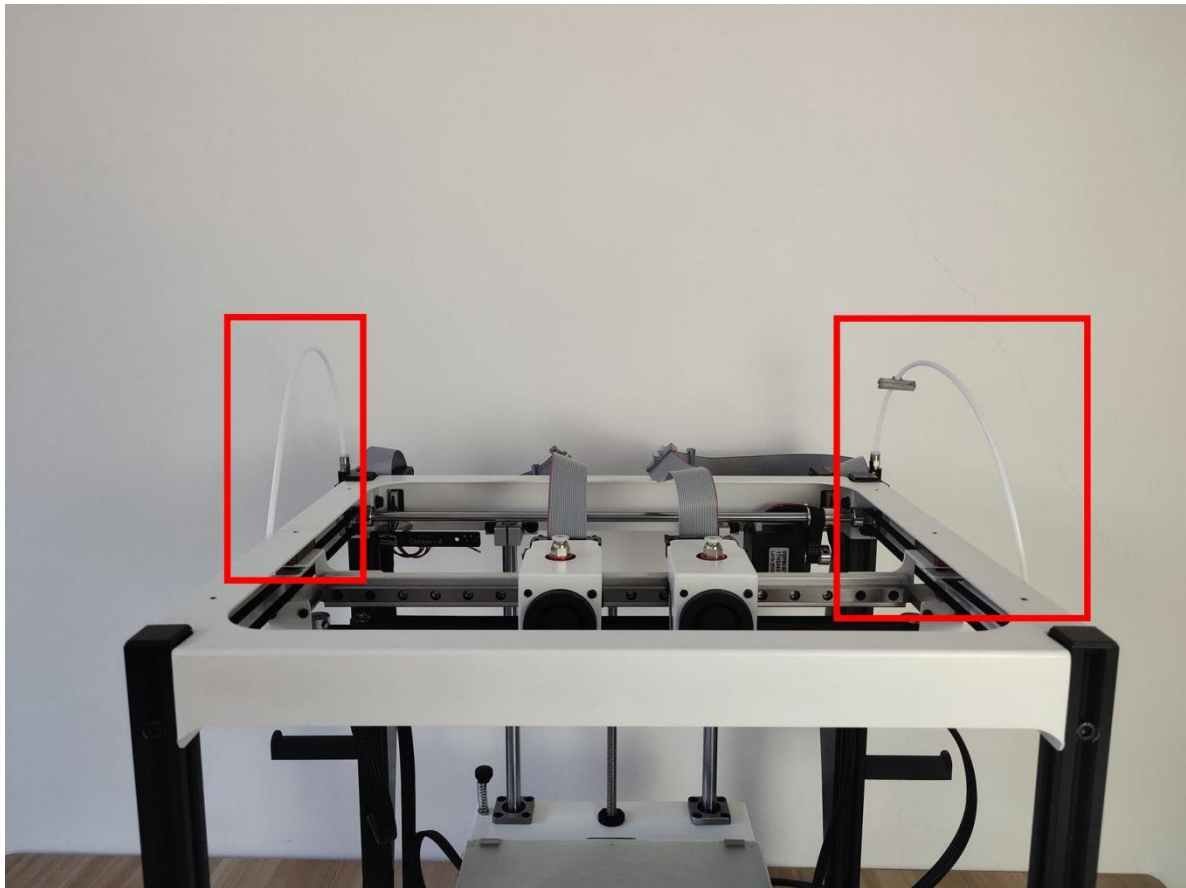

Click the knob to enter the menu and select "Motion".



Select "Leveling"





Select "Level Nozzle"



After the printer finishes homing, it will move to the specified coordinates.






Select "Next" to switch nozzles and find the nozzle closer to the hot bed.






After selecting the nozzle closer to the hot bed, adjust the black knob of the hot bed so that the distance between the hot bed and the nozzle can pass the thickness of a piece of A4 paper.

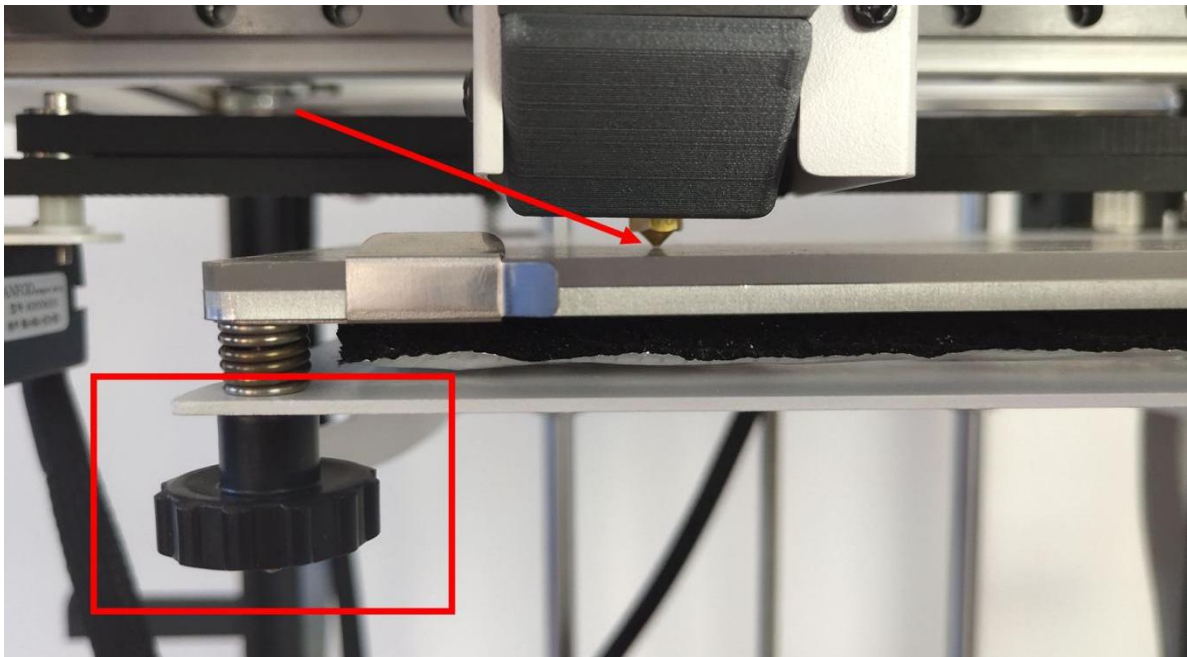

Switch to another nozzle. Loosen the screw fixing the stainless steel throat tube, then adjust the height of the nozzle so that a piece of A4 paper can pass between the nozzle and the hot bed, and tighten the screw.

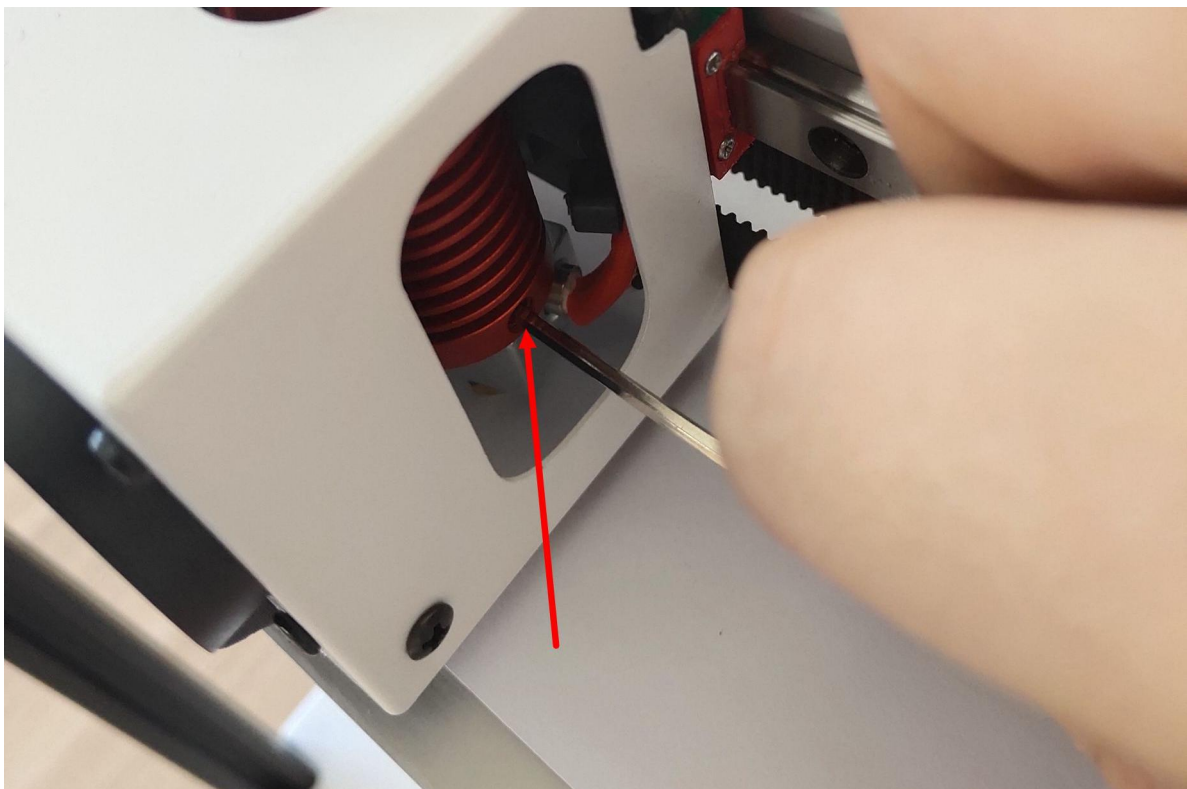

Adjust the height of the 2 nozzles to be basically the same,  
and then select "Done".

