


Graffik Eye Light Level-Scene Programming

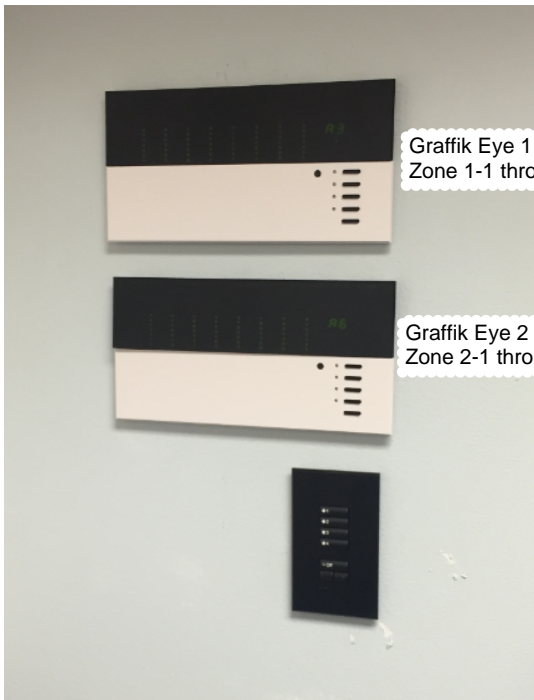

Graffik Eye 1
Zone 1-1 through 1-24

Graffik Eye 2
Zone 2-1 through 2-16

To adjust light levels

1. Select the scene you wish to change
2. Press the Zones button to turn off the temporary light
3. Adjust zone arrows to raise or lower the light
4. Scroll through zones 1-24 by pressing top left Select button



Select Button (press to scroll between zones 1-24, 8 zones available at a time)

Zone Number (the illuminated zones are those currently selected)

Zone Adjustment (use arrows to raise/lower zone)

Temporary Light (when illuminated, you are making temporary adjustments)

Zones Button (press to turn off temporary light and make permanent adjustments)

Scene Buttons (select the scene you wish to adjust)