



## Scope

This white paper provides a process to set up a remote connection to the Silver Series OIT.

## Process


A user can operate a system remotely by enabling the VNC server in the Silver Series OIT and viewing and operating the Silver Series OIT with the VNC Client running on a computer.

1. At [www.realvnc.com](http://www.realvnc.com) and download the free version of VNC.
2. Install the VNC program on your computer. (Only the VNC Viewer is required).
3. Apply power and connect HMI to network.
4. Find the OIT's IP address by clicking on  to open the task bar. Then click on  to enter settings. Enter the password (default is 111111). On the first tab select "Obtain IP address automatically."



5. Write down the IP address, you will need it later. The IP address will be display in light gray in the boxes below.

6. Next, click on the last tab.

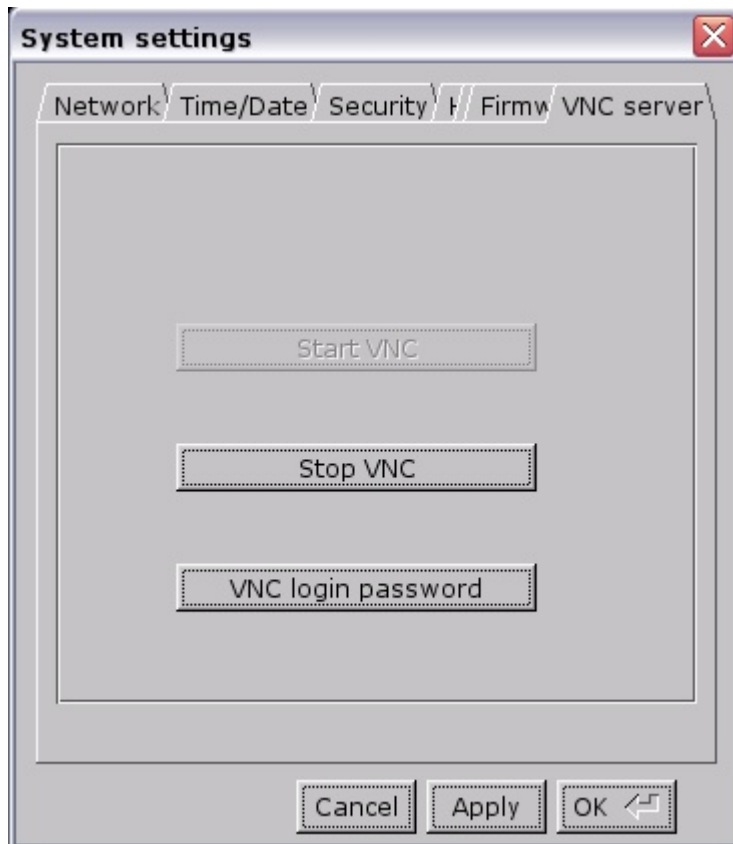

7. Click on Start VNC, then click apply, then OK.
8. Launch the VNC Viewer on the computer.
9. Enter the IP address you wrote down from the OIT






## Using VNC to Remotely Operate a Silver Series OIT

10. Click OK.

Next enter the OIT's password. (default is 111111)

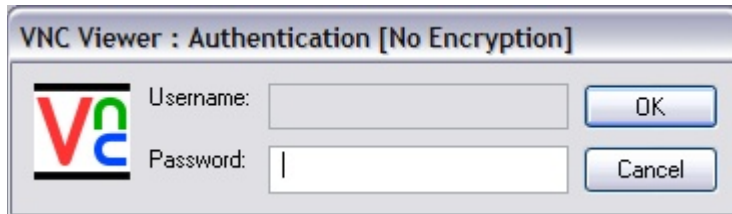

11. Click OK. The VNC client window opens displaying the OIT's screen.