

■ 7-2-3. Installing a USB Driver Software

To enable USB communication, USB driver software must be installed.

Even though some pop-up messages will be displayed when USB cable is connected the device and PC, please click cancel or close message.

1. Open "Device Manager" (Figure 7-2-3-1) and open "TSL-770" under "Other devices." Right-click on "TSL-770" and click on "Update Driver Software..."

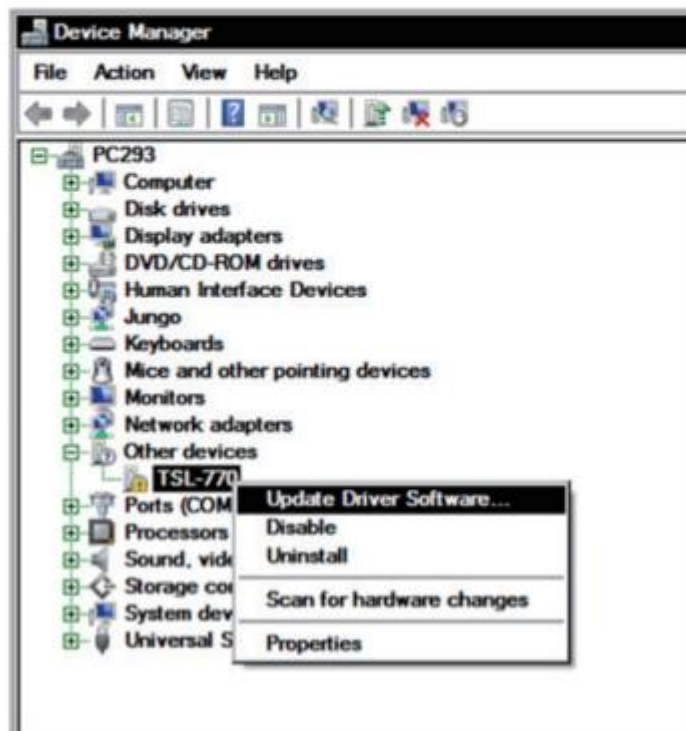


Figure7-2-3-1. Device manager

2. Click on “Browse my computer for driver software” when message window (Figure 7-2-3-2) appears.

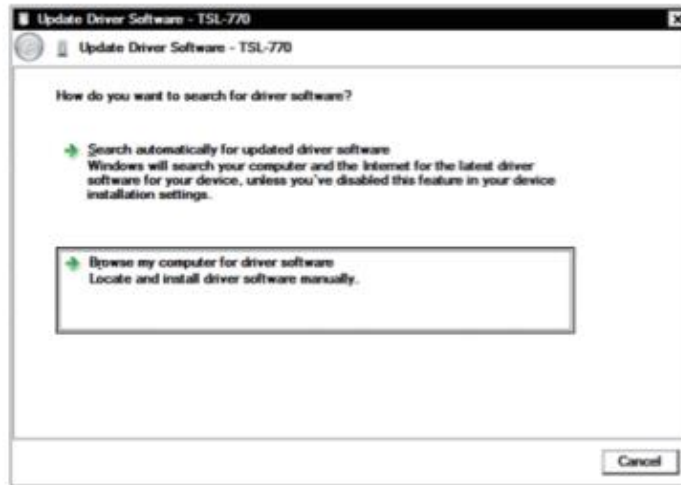


Figure7-2-3-2. Update driver software

3. On message window (Figure 7-2-3-3), click on “Browse” button to select the driver software location under Removable disk included in package. (e.g. D:\Common\USB Driver on Figure 7-2-3-3)



Figure7-2-3-3. Search for driver software location

4. Installation will automatically start. Message window Figure 7-2-3-4 will appear.



Figure7-2-3-4. Installation in progress

5. If a Windows Security message in Figure 7-2-3-5 appears, please click on "Install this driver software anyway" to proceed.



6. Installation is completed successfully when Figure 7-2-3-6 appears. Click on “Close” to exit the installation.



Figure7-2-3-6. Installation complete

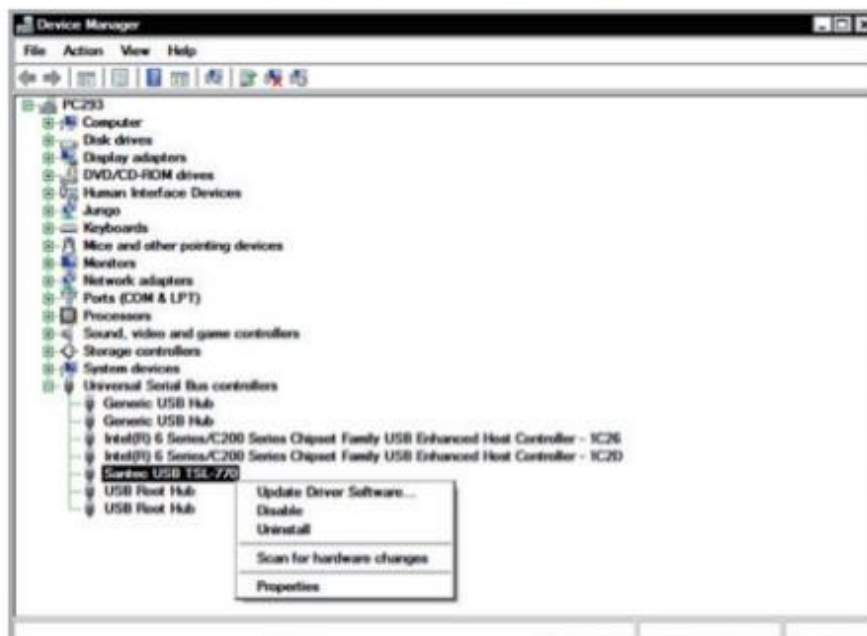


Figure7-2-3-7. Installation confirmation