



Towing instruction of Avant Mini-Loaders

Avant 500-, 600-, and 745 series

www.avanttecno.com



Towing Instruction Avant 500-, 600-, and 745 series

- Before towing any Avant loader make sure that the machine stays immobile after releasing the drive pump free.
- Use the handbrake in advance prior releasing the drive pump to stall any possible uncontrolled movement.
- Always use an integral towing bar to prevent accidents to happen.
- Maximum allowed towing speed 3 km / hour.
- The towing must be made with a heavy enough machine or car, keeping in mind the weight of the machine to be towed.



Towing Instruction Avant 500-, 600-, and 745 series



Use an integral towing bar
L=1500 mm




Towing Instruction Avant 500-, 600-, and 745 series





Towing Instruction Avant 500-, 600-, and 745 series

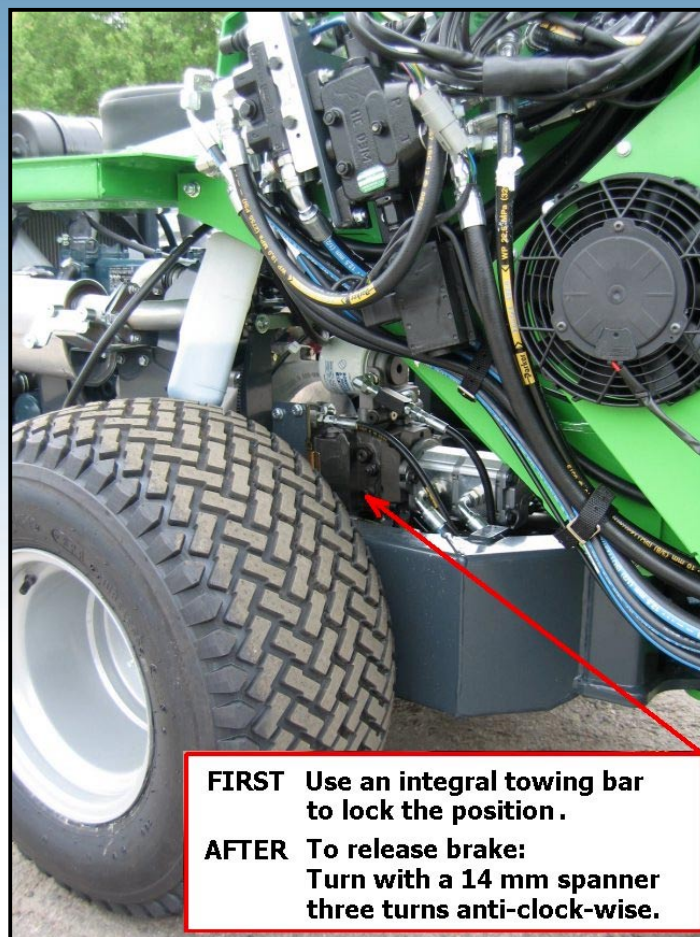


FIRST Use an integral towing bar to lock the position.

AFTER To release brake:
Turn with a 14 mm spanner
three turns anti-clock-wise.




Towing Instruction Avant 500-, 600-, and 745 series

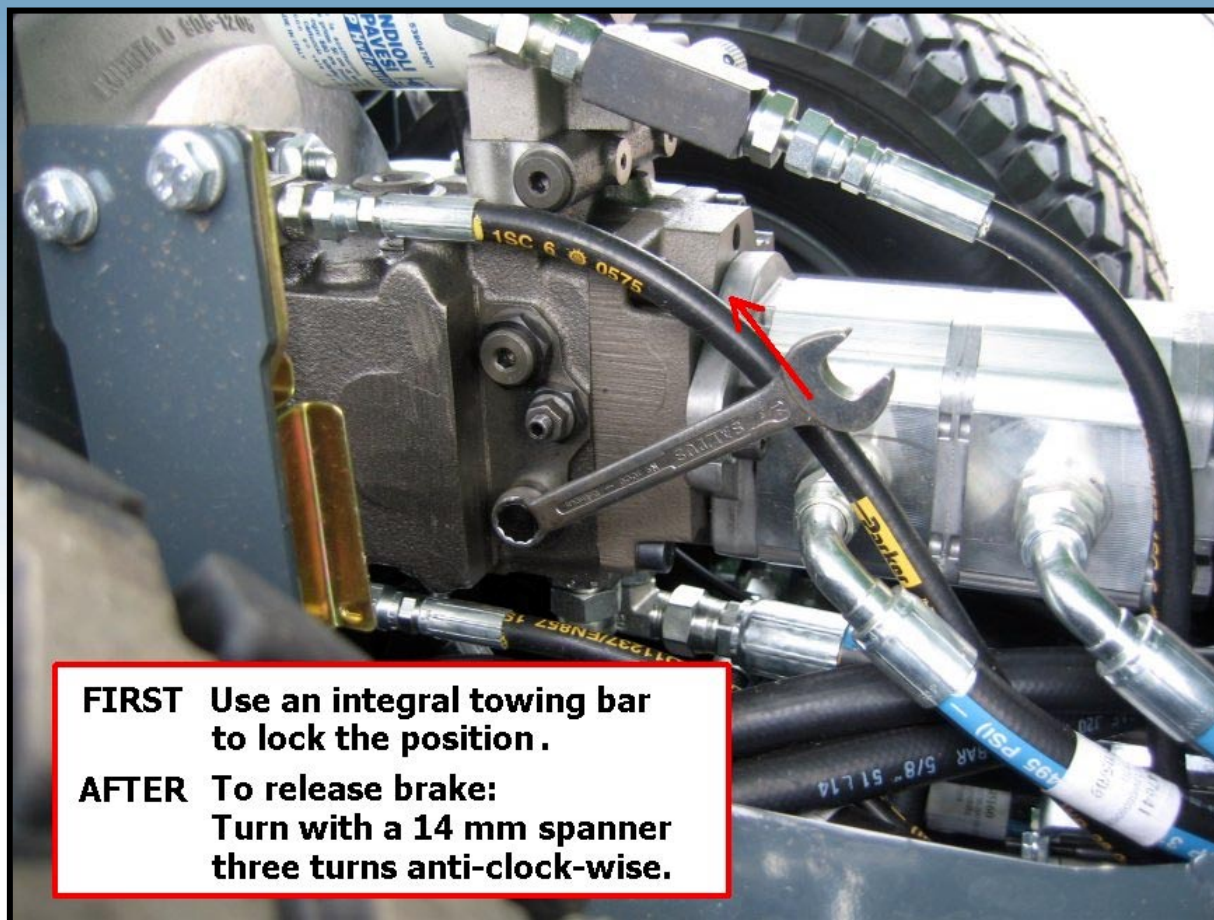

FIRST Use an integral towing bar to lock the position .
AFTER To release brake:
Turn with a 14 mm spanner
three turns anti-clock-wise.



Towing Instruction Avant 500-, 600-, and 745 series

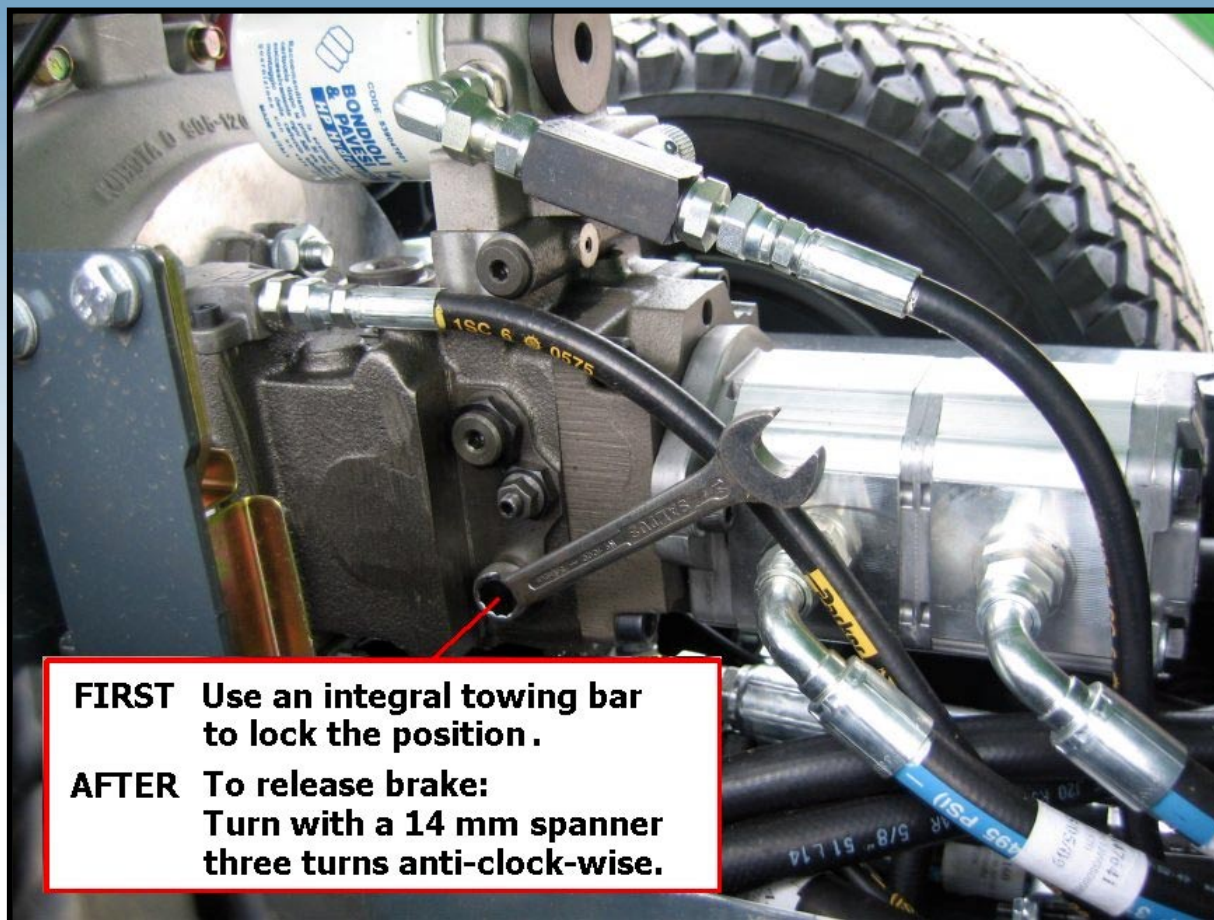

FIRST Use an integral towing bar to lock the position .

AFTER To release brake:
Turn with a 14 mm spanner
three turns anti-clock-wise.



Towing Instruction Avant 500-, 600-, and 745 series

NOTICE:

Once the pump has been freed to the towing position, there is no driving movement in the machine, until the towing plug has been returned to the normal closed position.