

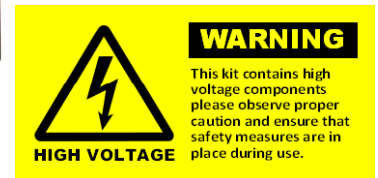


### ATM90E2x Single-Phase Energy Metering Demo Board


1. Connect the Control Board and the AFE Board.

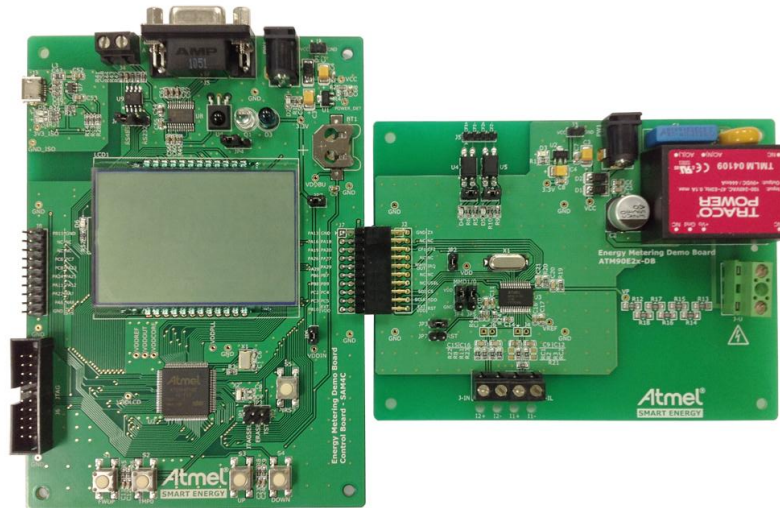

2. Connect the Control Board to PC's USB or COM port with cable.
3. Install USB-to-UART driver (the USB-to-UART port is isolated and self powered from USB).
4. Plug in DC power adapter (either the Control Board or the AFE Board is okay).
5. Copy and unzip <ATM90Exx GUI.zip> to a folder.



6. Double click and run <ATM90Exx GUI.EXE> software.

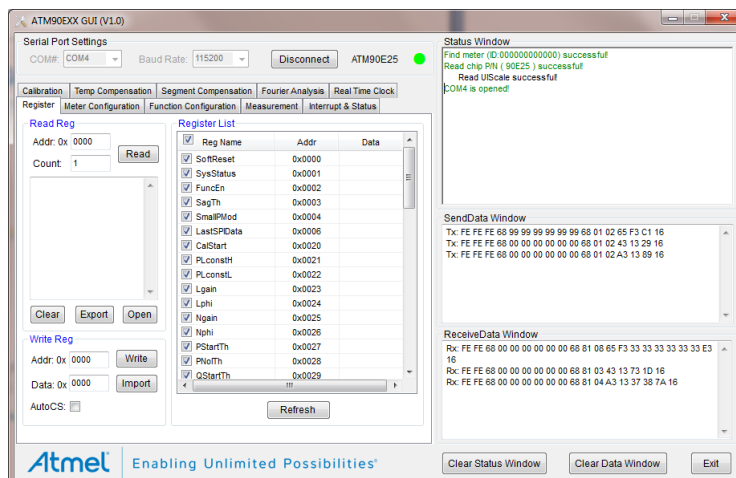

Communication Port	Baud Rate (bps)
USB (USB-to-UART)	115200
DB9 (RS232)	4800
RS485	4800