

# 안전을 위한 주의 사항

# 안전을 위한 주의 사항

사용자의 안전을 지키고 재산상의 손해를 막기 위한 내용입니다. 사용하기 전에 반드시 잘 읽고 제품을 올바르게 사용해 주세요. 이 설명서에 언급된 안전 관련 내용 중 일부 항목은 특정 제품에만 해당되는 내용일 수 있습니다.



이 설명서에서 말하는 '제품'이란 휴대전화나 태블릿, 배터리 등의 기본 구성품 및 정품으로 제공하는 별매품을 모두 포함하는 용어입니다.



## 경고

**지키지 않았을 경우 사용자가 사망하거나 중상을 입을 수 있습니다.**

제품에 자석이 내장되어 있습니다. 이식형 의료 기기나 신용카드 등 자석의 영향을 받는 물건을 사용할 경우 안전한 거리를 유지하세요. 의료 기기의 경우 15 cm 이상 거리 유지를 권장합니다. 자세한 사항은 의사와 상담하시거나 의료 기기 제조사에 문의하시기 바랍니다.

손상된 전원 코드나 플러그, 헐거운 콘센트는 사용하지 마세요.

접속이 불안정할 경우 화재 또는 감전으로 인한 상해의 위험이 있습니다.

젖은 손이나 다른 신체 부위로 제품, 전원 코드, 플러그, 콘센트를 만지지 마세요.

감전될 수 있습니다.

전원 코드 부분을 무리한 힘을 주어 잡아당겨 빼지 마세요.

화재 또는 감전으로 인한 상해의 위험이 있습니다.

전원 코드를無理하게 구부리거나 망가뜨리지 마세요.

화재 또는 감전으로 인한 상해의 위험이 있습니다.

충전 중인 상태에서는 젖은 손으로 제품을 사용하지 마세요.

감전될 수 있습니다.

충전기의 음극 단자와 양극 단자를 직접 연결하지 마세요.

화재가 발생하거나 상해의 위험이 있습니다.

**실외에서 천둥, 번개가 칠 경우 제품을 사용하지 마세요.**

제품이 고장 나거나 감전의 위험이 있습니다.

**액세서리 및 부속품은 반드시 삼성전자에서 제공하거나 승인한 정품을 사용하세요.**

- 그렇지 않을 경우 제품의 수명이 단축되거나 제품이 고장 날 수 있으며, 과열, 화재, 폭발, 상해의 위험이 있습니다.
- 삼성전자에서 승인한 이 제품 전용 배터리, 충전기 및 케이블을 사용하세요. 그렇지 않을 경우 사용자가 부상을 입거나 제품이 고장 날 수 있습니다.
- 삼성전자에서 승인하지 않은 액세서리 및 부속품을 사용할 경우 사용자의 안전을 보장할 수 없으며, 이로 인해 발생한 피해는 삼성전자에서 책임지지 않습니다.

**제품이나 배터리를 뒷주머니에 넣거나 허리 등에 차지 마세요.**

- 충격으로 인해 제품이 파손되거나 배터리가 폭발, 화재가 발생할 수 있습니다.
- 넘어지거나 부딪혔을 때 다칠 수 있습니다.

**제품을 떨어뜨리는 등 심한 충격을 주지 마세요.**

- 제품, 배터리의 수명이 단축되거나, 파손, 고장이 발생할 수 있습니다.
- 과열, 연소, 화재, 상해 등의 위험이 발생할 수 있습니다.

**제품을 사용하거나 분리 배출할 때는 다음 사항에 주의하세요.**

- 제품을 불에 버리거나 열기구(난로, 전자레인지 등), 가열 조리 기구, 고압 용기 가까이에 두거나 안에 넣지 마세요.
- 제품에 강한 충격을 가하거나 구멍을 뚫지 마세요.
- 외부의 높은 압력에 제품을 노출시키지 마세요. 제품 내부에서 누전이 일어나거나 과열될 수 있습니다.

**제품을 온돌바닥이나 전기장판 등 과열의 우려가 있는 곳에 두지 마세요.**

뜨거운 열로 인해 배터리가 손상되어, 과열되거나 상해의 위험이 있습니다.

**제품이 손상되지 않도록 주의하세요.**

- 제품을 너무 낮거나 너무 높은 온도에서 보관하지 마세요.
- 제품을 너무 높은 온도에서 보관하면 제품이 고장 나거나 배터리 수명이 단축될 수 있습니다.
- 배터리의 음극 단자와 양극 단자를 직접 연결하지 말고, 배터리에 금속 물체가 닿지 않게 하세요. 배터리가 고장 날 수 있습니다.
- 피복 벗겨짐 등의 손상된 케이블과 고장 나거나 파손된 충전기, 배터리는 사용하지 마세요.
- 배터리를 노출한 상태로 사용하지 마세요.

**제품을 열기구(난로, 전자레인지 등), 가열 조리 기구, 고압 용기 가까이에 두거나 안에 넣지 마세요.**

- 배터리 액이 새거나 고장 날 수 있습니다.
- 제품에 열이 나거나 화재의 원인이 될 수 있습니다.

**먼지가 많거나 더러운 곳에서 사용하거나 보관하지 마세요.**

먼지 또는 이물질로 인해 고장 나거나 화재 또는 감전으로 인한 상해의 위험이 있습니다.

**충전기의 연결부(외부 커넥터 연결잭과 플러그)에 전도성 이물질(액체, 먼지, 금속 가루, 연필심 등)이 들어가지 않도록 주의하고, 연결부를 뽀족한 물체로 찌르거나 무리한 힘을 가하지 마세요.**

전원 단자의 부식이나 일시적인 단락(합선)으로 인해 폭발, 화재가 발생할 수 있습니다.

**제품을 무선 충전하는 경우 제품과 무선 충전기 사이에 이물질(금속류, 자석, 카드 등)이 들어가지 않도록 주의하세요.**

충전이 되지 않거나 과열될 수 있습니다.

**어린이나 유아 또는 애완동물이 제품을 빨거나 물어뜯지 않도록 주의하세요.**

- 제품에 손상을 주거나 폭발 또는 화재가 발생할 수 있습니다.
- 작은 부품으로 인한 질식의 위험이 있습니다.
- 어린이가 제품을 사용할 경우 바른 취급 방법과 사용 방법을 알려 주고 바르게 사용하고 있는지 확인하세요.

**제품으로 눈, 귀 등 신체를 찌르거나 제품을 입에 넣지 마세요.**

신체에 심각한 상해를 입거나 질식의 위험이 있습니다.

**고장 나거나 액이 새는 Li-Ion 배터리는 만지지 마세요.**

Li-Ion 배터리의 안전한 처리 방법은 삼성전자 서비스 센터에 문의하세요.



## 주 의

**지키지 않았을 경우 사용자가 부상을 당하거나 재산상의 손해를 입을 수 있습니다.**

전자 기기를 사용하는 곳에서는 제품을 주의하여 사용하세요.

- 대부분의 전자 기기는 전자파 신호를 사용하며, 제품의 전자파로 인해 다른 전자 기기에 문제를 일으킬 수 있습니다.
- LTE 데이터 통신 시 오디오, 전화기 등 스피커가 있는 전자 기기에서 잡음이 발생할 수 있습니다.

**고주파(RF파)의 영향을 받는 자동차, 병원이나 의료 기기 근처에서는 제품을 사용하지 마세요.**

- 심장박동 보조 장치와의 거리가 15 cm 이내인 곳에서 제품을 사용하면 제품의 전자파가 심장박동 보조 장치에 영향을 줄 수 있으므로 되도록 사용하지 마세요. 꼭 제품을 사용해야 할 때는 반드시 심장박동 보조 장치와 15 cm 이상의 간격을 유지하세요.
- 혹시 발생할지도 모르는 전자파의 영향을 최소화하기 위하여 심장박동 보조 장치 반대쪽에서 통화하세요.
- 만일 의료 기기를 개인적으로 사용한다면 의료 기기 제조 회사에 연락하여 고주파(RF파) 에너지로부터 안전한 기기인지 확인 후 사용하세요.
- 비행기 내에서의 전자 기기 사용은 비행기의 전자 운항 장비에 영향을 줄 수 있습니다. 비행기 내에서는 항공사의 규정과 승무원의 안내에 따르세요. 비행기 내 전자 기기 사용이 허락된 경우 반드시 비행기 탑승 모드를 켜 후 제품을 사용하세요.
- 병원 안에서는 제품의 전원을 끄고, 해당 병원의 규정을 지키세요. 제품의 전자파가 의료기기에 영향을 줄 수 있습니다.
- 자동차 내의 전자 시스템은 제품의 고주파(RF파) 에너지에 영향을 받아 잘못되거나 제대로 작동하지 않을 수 있습니다. 자동차 제조 회사에 연락하여 고주파(RF파) 에너지로부터 안전한 기기인지 확인 후 사용하세요.

**심한 매연이나 증기를 피하세요.**

제품 외관이 훼손되거나 고장 날 수 있습니다.

**보청기를 사용하는 경우 전자파 관련 정보를 확인 후 사용하세요.**

일부 보청기는 제품 전자파로 인해 제대로 동작하지 않을 수 있습니다. 보청기 제조 회사에 확인한 후 사용하세요.

스피커나 대형 모터, 강한 자기나 고압선, 전파탑 등 강한 전파가 나오는 근처에서 제품을 사용하지 마세요.

전자파에 의해 고장의 원인이 됩니다.

**폭발 위험지역에서는 제품의 전원을 끄세요.**

- 폭발 위험지역 안에서는 배터리를 분리하지 말고 제품의 전원을 끄세요.
- 폭발 위험지역 안의 규정, 지시 사항, 신호를 지키세요.
- 주유 중에는 제품 사용을 삼가세요.
- 가연성 액체, 가스, 폭발성의 물체를 제품 및 액세서리와 함께 보관하거나 운반하지 마세요.

**제품이 파손되거나 연기나 타는 냄새가 발생하면 즉시 제품 사용을 중지하고 삼성전자 서비스 센터에서 수리 후 사용하세요.**

- 유리 또는 아크릴이 깨진 경우 손 또는 얼굴 등을 다칠 수 있습니다.
- 연기나 타는 냄새가 나는 경우 배터리 폭발 또는 화재가 발생할 수 있습니다.

**운전 중에는 제품 사용에 대한 관련 법규 또는 도로 안전 수칙을 지키세요.**

자동차를 안전하게 운전하는 것은 가장 중요한 책임입니다. 만약 법적으로 금지되어 있다면, 운전 중에는 절대로 휴대 기기를 사용하지 마세요. 자신과 타인의 안전을 위하여 다음 사항들을 반드시 지키세요.

- 바로 전화 걸기, 다시 걸기 등과 같은 편의 기능들을 익혀 두세요. 이러한 기능들은 전화를 걸거나 받을 때 시간을 단축하도록 해 줍니다.
- 제품을 손이 쉽게 닿는 곳에 두어 전방에서 시선을 떼지 않고도 제품을 집을 수 있게 하세요. 통화하기 어려운 상황에 전화가 오면 수신 거절 메시지를 전송하세요.
- 교통이 혼잡하거나 악천후에는 통화를 자제하세요. 비, 눈, 빙판, 교통 혼잡 중에 통화는 위험할 수 있습니다.
- 메모를 하거나 연락처를 찾지 마세요. 할 일을 메모하거나 연락처를 살펴보는 것은 운전 중에 주의를 분산시킬 수 있습니다.
- 교통 상황을 감안하여 전화를 거세요. 이동 중이 아니거나, 도로로 들어서기 전에 전화를 걸고, 되도록 차가 멈춰 있을 때 통화하세요.
- 주의를 산만하게 하는 내용의 통화를 삼가세요. 통화 상대방에게 현재 운전 중임을 알리고, 운전을 방해할 수 있는 통화는 잠시 보류하세요.

## 올바른 보관과 사용 방법

물기나 습기가 없는 건조한 곳에 두세요.

- 습기 또는 액체 성분은 제품의 부품과 회로에 손상을 줄 수 있습니다.
- 물에 젖은 경우 전원을 켜지 말고(켜져 있다면 끄고, 꺼지지 않는다면 그대로 두고, 배터리가 분리될 경우 배터리를 분리하고) 마른 수건으로 물기를 제거한 후 서비스 센터로 가져가세요.
- 제품이 물에 젖거나 액체 등에 잠기는 경우(단, 방수 기능을 지원하는 제품은 방수 상태를 유지하기 위한 주의사항에 따르지 않을 경우), 제품 내부에 부착된 침수 라벨의 색상이 바뀌게 됩니다. 이러한 원인으로 발생한 고장은 무상 수리를 받을 수 없으니 주의하세요.

제품을 경사진 곳에 두거나 보관하지 마세요.

떨어질 경우 충격으로 인해 파손될 수 있으며, 고장의 원인이 됩니다.

이 제품의 적정 사용 온도는 0 °C~35 °C이며, 적정 보관 온도는 -20 °C~50 °C입니다. 적정 온도보다 높거나 낮은 온도에서는 제품이 손상되거나 배터리 수명이 단축될 수 있습니다.

- 여름철 주차 중인 자동차 안과 같이 높은 온도에서 보관할 경우 외관 변형이나 제품 내부의 손상, 화면 표시 오류 등이 발생하거나 폭발 등의 위험이 있습니다.
- 제품을 오랜 시간 동안 직사광선에 노출시키지 마세요.
- 배터리가 분리되는 제품인 경우 배터리의 적정 보관 온도는 0 °C~45 °C입니다.

제품을 동전, 열쇠, 목걸이 등의 금속 물체와 함께 보관하지 마세요.

- 제품이 변형되거나 고장 날 수 있습니다.
- 배터리 충전 단자에 금속이 닿을 경우 화재의 위험이 있습니다.

제품을 자성이 있는 곳이나 자성의 영향이 미치는 곳에 두지 마세요.

- 자기에 의해 제품이 잘못 작동하거나 배터리가 방전되어 사용에 지장을 줄 수 있습니다.
- 신용카드, 전화카드, 통장, 승차권 등 자성을 이용하는 경우 제품의 자기에 의해 정보가 훼손될 수 있습니다.

제품에서 열이 발생한 상태에서 피부와 오랜 시간 접촉하지 마세요. 붉은 반점, 색소침착 등 저온 화상의 우려가 있습니다.

- 제품을 피부와 접촉한 상태에서 오랜 시간 사용해야 하는 경우에는 제품이 과열되지 않도록 주의하세요. 또한 제품을 특정한 신체 부위에만 오랜 시간 접촉하지 않도록 주의하세요.
- 충전 중인 제품(충전기 등 포함) 또는 전원이 연결된 상태에서 동작 중인 제품을 오랜 시간 신체 위에 올려 두거나 깔고 앉지 않도록 주의하세요.
- 열에 대한 신체 반응은 개인마다 차이가 있을 수 있습니다. 어린이나 노약자, 장애인 등은 각별히 주의하세요.

**배터리 덮개를 연 채로 사용하지 마세요.**

배터리가 떨어져 고장, 파손의 원인이 됩니다.

**직사광선 등 강한 광원에 카메라 렌즈가 노출되지 않도록 주의하세요.**

직사광선과 같은 강한 광원에 카메라 렌즈가 노출되면 카메라 이미지 센서가 손상될 수 있습니다. 손상된 이미지 센서는 회복되지 않으며 그로 인해 촬영 시 점이나 얼룩이 생길 수 있습니다.

**제품에 조명, 플래시 기능이 있는 경우 사람 또는 동물의 눈 앞에서 사용하지 마세요.**

시력 장애의 원인이 될 수 있습니다.

**게임, 동영상 등 빛이 강하게 발생하는 기능을 사용할 경우 주의하세요.**

- 제품은 조명이 밝은 곳에서는 눈과 일정한 거리를 둔 상태로 사용하세요.
- 제품을 오랫동안 사용할 경우 발작, 기절 증상이 나타날 수 있으므로 사용 중에 신체에 이상이 느껴지면 즉시 사용을 중지하세요.
- 발작이나 실신 또는 가족 중에 비슷한 증상을 겪은 사람이 있다면 제품 사용 전에 의사와 상담하세요.
- 눈이나 근육에 경련이 생기거나, 지각 상실, 방향 감각 상실 또는 무의식적인 움직임과 같은 증상이 나타날 경우 사용을 중단하고 의사와 상담하세요.
- 오랜 시간 사용을 피하고 잠시 사용을 멈춰 눈의 피로를 예방하세요.

**제품 사용 시 같은 동작을 오랫동안 반복하지 않도록 주의하세요.**

손, 목, 어깨 등에 통증이 발생할 수 있습니다. 게임, 문자 입력 등 같은 동작을 오랫동안 반복해야 할 경우 틈틈이 휴식을 취해 신체에 무리가 생기지 않도록 하세요. 만일 통증이 발생할 경우 제품 사용을 멈추고 의사와 상담하세요.



### **헤드셋 또는 이어폰 사용 시 주의하세요.**

- 높은 음량으로 오랫동안 사용하면 귀에 자극을 줄 수 있습니다.
- 보행 중에 높은 음량으로 사용하면 주의력이 떨어져 사고의 위험이 있습니다.
- 이어폰을 꽂기 전에는 음량을 낮게 조절하고, 통화나 음악을 듣기 위해 필요한 최소한의 정도로만 음량을 조절하여 사용하세요.
- 건조한 환경에서 이어폰을 연결하여 사용하면 귀 또는 다른 신체 일부에 정전기가 발생할 수 있으므로 사용을 자제하거나 이어폰을 제품에 연결하기 전 금속 물체를 만져주세요.
- 운전(자전거, 자동차, 오토바이 등) 중에는 이어폰을 사용하지 마세요. 주의력이 떨어져 사고의 위험이 있으며, 국가 또는 지역에 따라서 위법이 될 수 있습니다.

### **걷거나 이동 중에 제품을 사용할 때 주의하세요.**

- 방해물 등에 부딪혀 다치거나 사고가 날 수 있습니다.
- 제품에 이어폰을 연결한 경우 팔이나 주변 기구들에 이어폰 줄이 걸리지 않도록 주의하세요.

### **제품에 색을 칠하거나 스티커 등을 붙이지 마세요.**

- 외부 커넥터 연결잭 덮개 등이 열리지 않거나 터치 화면이 바르게 동작하지 않을 수 있습니다.
- 체질에 따라 도료나 스티커 등에 의해 알레르기, 간지럼, 습진, 붓는 증상 등이 생길 수 있습니다. 위의 체질인 경우 또는 제품 사용 중 위의 증상이 발생한 경우 사용을 멈추고 의사와 상담하세요.

### **휴대용 기기나 장치 등을 사용할 때 주의하세요.**

- 자동차에 설치된 휴대용 기기나 관련 장치들이 단단히 고정되었는지 확인하세요.
- 에어백이 장착된 차량에서 사용할 경우 제품을 에어백 주변에 설치하거나 보관하지 마세요. 에어백 작동 시 제품이 파손되거나 제품에 부딪혀 다칠 수 있습니다.

### **제품을 떨어뜨리거나 외부 충격이 가해지지 않도록 하세요.**

- 제품이 파손될 수 있습니다.
- 제품을 휘거나 비틀 경우 외관이 훼손될 수 있고, 내부의 부품들이 고장 날 수 있습니다.

### **배터리와 충전기의 수명을 확보하세요.**

- 배터리를 사용하지 않고 오래 방치할 경우, 고장 날 수 있습니다.
- 오랜 시간 사용하지 않은 제품은 방전되므로, 사용하기 전에 충전하여야 합니다.
- 사용하지 않을 때는 충전기를 콘센트에서 분리하세요.
- 배터리를 원래 목적 이외의 용도로 사용하지 마세요.

- 제품 사용 설명서에 명시된 대로 사용하지 않을 경우 제품 수명이 단축될 수 있으며, 이와 같이 사용자의 부주의로 인한 피해에 대하여는 보증 서비스가 적용되지 않습니다.
- 제품은 시간이 지남에 따라 자연적인 마모가 발생하며, 이에 대하여는 보증기간 내에서 보증 서비스가 적용됩니다. 단, 정품이 아닌 별매품을 사용하여 가중된 마모에 대해서는 보증 서비스가 적용되지 않습니다.

#### **바른 통화 방법을 따라 주세요.**

- 전화를 받을 때는 일반 전화와 같이 똑바로 세워서 받으세요.
- 말을 할 때는 입을 제품의 마이크 부분에 정확히 대세요.

#### **사용자 임의로 제품을 개조하거나 분리, 수리하지 마세요.**

- 사용자 임의로 개조, 분리, 수리했을 경우엔 무상 수리를 받을 수 없으며, 수리는 반드시 삼성전자 지정 서비스 센터를 이용하세요.
- 송곳이나 압정 등 뾰족한 것으로 제품 또는 배터리를 뚫거나 분해할 경우 감전, 폭발이나 화재가 발생할 수 있습니다.
- 배터리를 분해하거나 재사용하지 마세요.
- 배터리를 분리하기 전에 반드시 제품의 전원을 끄세요. 제품의 전원을 켜 상태에서 배터리를 분리할 경우 제품 고장의 원인이 될 수 있습니다.

#### **제품을 청소할 때 주의하세요.**

- 제품을 청소할 때는 연필용 지우개나 부드러운 천으로 가볍게 닦으세요.
- 제품의 충전 단자를 청소할 때는 면봉이나 부드러운 천으로 닦으세요.
- 제품을 청소하기 위해 독한 화학 물질이나 강한 세제 등을 사용하지 마세요. 제품의 외관이 변색되거나 부식될 수 있으며, 화재 또는 감전의 위험이 있습니다.
- 먼지, 땀, 잉크, 기름, 화학 제품(화장품, 향균 스프레이, 손 세정제, 세제, 살충제)이 닿지 않도록 주의하세요. 제품의 외관이나 내부 부품이 손상되어 성능이 저하될 수 있습니다. 해당 물질이 묻은 경우엔 보풀이 없는 부드러운 천으로 닦으세요.

#### **제품을 원래 용도 이외 다른 용도로 사용하지 마세요.**

제품이 고장 날 수 있습니다.

#### **공연장이나 영화관 등의 공공장소에서는 주위 사람에게 피해를 주지 마세요.**

#### **제품 수리 시에는 삼성전자 서비스 센터에 맡기세요.**

삼성전자 서비스 센터가 아닌 곳에서 서비스를 받으면 제품이 고장 날 수 있으며, 이로 인한 피해에 대해서는 보증 서비스가 적용되지 않습니다.

### **USIM 카드 및 SD 카드, 케이블 사용 시 주의하세요.**

- 제품에 USIM 카드, SD 카드를 삽입하거나 케이블 등을 연결할 때는 올바른 방향으로 삽입 및 연결하여 사용하세요.
- 제품이 정보를 받고 있는 중에 카드를 제거하지 마세요. 데이터가 손실될 수 있으며, 카드나 제품이 고장 날 수 있습니다.
- 카드에 무리한 힘을 가하거나 정전기, 다른 기기의 전기소음 등에 노출시키지 마세요.
- 손이나 금속 물체로 카드의 금속 단자 부분을 접촉하지 마세요. 카드가 더러워지면 마른 수건으로 부드럽게 닦으세요.
- 무리하게 힘을 주거나 올바르게 않은 방향으로 삽입 및 연결할 경우 제품의 삽입구나 연결부, 구성품이 파손될 수 있습니다.

### **긴급 연락을 취할 수단을 알아 두세요.**

어떤 지역이나 환경에서는 제품으로 긴급 연락을 취하는 것이 불가능할 수 있습니다. 멀거나 험한 지역으로 갈 때는 긴급 연락을 취할 다른 방법을 미리 준비하세요.

### **제품 사용 중 개인 정보를 보호하고 정보 유출 및 악용의 위험성에 대해 주의하세요.**

- 제품을 사용하면서 중요한 데이터는 백업해 두세요. 유실된 데이터에 대해서는 삼성전자에서 책임지지 않습니다.
- 제품을 분리 배출할 경우에는 모든 데이터를 백업하고, 제품을 리셋하여 개인 정보의 악용을 방지하세요.
- 제품에 애플리케이션을 설치할 때 승인 화면의 내용을 주의 깊게 읽으세요. 특히 제품의 다양한 기능과 연동되거나 개인 정보가 이용되는 애플리케이션을 내려받을 경우 더욱 주의하세요.
- 등록한 계정을 타인이 의심스러운 곳에 사용하고 있지는 않은지 정기적으로 확인하고, 권한이 없다는 내용이 나타나거나 의심스러운 상황이 발견될 경우 해당 웹 사이트 운영자에게 문의하여 계정 정보를 변경하거나 삭제하세요.
- 제품을 분실한 경우 등록한 모든 계정의 비밀번호를 변경하여 개인 정보가 유출되지 않도록 하세요.
- 출처를 알 수 없는 애플리케이션은 사용하지 말고, 패턴, 비밀번호, PIN 등을 이용해 잠금 설정하여 사용하세요.

### **저작권으로 보호받는 자료를 배포하지 마세요.**

소유자의 허락 없이 저작권으로 보호받는 자료를 배포하지 마세요. 이는 저작권법을 침해하며, 사용자가 불법으로 저작 자료를 사용할 경우 삼성전자에서 책임지지 않습니다.

## 바이러스 관련 주의 사항

바이러스 감염에 의한 피해를 막기 위해서는 반드시 아래 안전 수칙을 지켜야 합니다. 아래 사항을 지키지 않아 문제가 발생한 경우 제품 보증서에 의해 보상받지 못할 수 있습니다.

### 모바일 기기 이용자 '10대 안전 수칙'

- 의심스러운 애플리케이션 다운로드하지 않기
- 신뢰할 수 없는 사이트 방문하지 않기
- 발신인이 불명확하거나 의심스러운 메시지 및 메일 삭제하기
- 비밀번호 설정 기능을 이용하고 정기적으로 비밀번호 변경하기
- 블루투스 기능 등 무선 인터페이스는 사용 시에만 켜놓기
- 이상 증상이 지속될 경우 악성코드 감염 여부 확인하기
- 다운로드한 파일은 바이러스 유무를 검사한 후 사용하기
- 컴퓨터에도 백신 프로그램을 설치하고 정기적으로 바이러스 검사하기
- 제품 플랫폼의 구조를 임의로 변경하지 않기
- 운영체제 및 백신 프로그램을 항상 최신 버전으로 업데이트하기

## 스미싱 관련 주의 사항

스미싱이란 사용자에게 웹 사이트 주소를 포함하는 문자 메시지를 전송하여 사용자가 해당 웹 사이트 접속 시, 악성코드를 설치하고 사용자의 개인 정보를 빼내는 전자금융사기 수법입니다. 이를 통해 사용자는 소액결제 등의 피해를 입을 수 있습니다.

스미싱에 의한 피해를 막기 위해서는 반드시 아래 예방 수칙을 지켜야 합니다.

- 출처가 분명하지 않은 문자 메시지의 웹 사이트 링크 접속에 주의하기(아는 사람에게 온 문자 메시지도 웹 사이트 링크가 포함되어 있으면 접속 전 확인하기)
- 공인인증서 PC 지정 및 추가 인증과 같은 전자금융사기 예방서비스 사용하기
- 제품에 2개 이상의 백신프로그램을 설치 및 최신 버전으로 업데이트하고 실시간 감시 상태 유지하기
- 제품에서 114로 전화를 걸어 소액결제 차단 및 제한 신청하기
- 금융정보 입력 제한 보안 승급 등을 명목으로 보안카드 번호 요구 시 번호를 입력하지 말기
- 제품에 알 수 없는 출처의 애플리케이션을 설치하지 않도록 설정하여 제품의 보안 설정 강화하기

## 모바일 파밍 관련 주의 사항

모바일 파밍은 악성 애플리케이션에 감염된 제품에 가짜 인터넷뱅킹 애플리케이션을 설치하여 사용자에게 금융 정보를 입력하도록 유도한 후 금융 정보를 빼내는 전자금융사기 수법입니다.

모바일 파밍에 의한 피해를 막기 위해서는 반드시 아래 예방 수칙을 지켜야 합니다.

- 출처가 분명하지 않은 문자 메시지의 웹 사이트 링크 접속에 주의하기(아는 사람에게 온 문자 메시지의 경우도 웹 사이트 링크가 포함되어 있으면 접속 전 확인하기)
- OTP(일회성 비밀번호 생성기), 보안 토큰(비밀번호 복사 방지) 등을 사용하고, 공인인증서 PC 지정 등의 전자금융사기 예방서비스 사용하기
- 제품에 2개 이상의 백신프로그램을 설치 및 최신 버전으로 업데이트하고 실시간 감시 상태 유지하기
- banking 애플리케이션에서 절대 전체 보안카드 번호를 입력하지 말기
- 보안카드 사진을 제품에 저장해 두지 말기
- 파밍 등이 의심될 때에는 신속히 경찰청 112 센터나 금융기관 콜센터를 통해 지급 정지를 요청하기

## 스파이 앱 관련 주의 사항

스파이 앱은 모바일 기기 사용자의 통화 내용이나 문자 메시지, 위치 정보 등을 실시간 수집하고, 음성 녹음을 통한 도·감청, 데이터 삭제 및 접근 제한까지 할 수 있는 애플리케이션입니다.

스파이 앱에 의한 피해를 막기 위해서는 반드시 아래 예방 수칙을 지켜야 합니다.

내 제품에 스파이 앱을 설치하지 못하게 하는 방법

- 출처가 분명하지 않은 문자 메시지의 웹 사이트 링크 접속에 주의하기(아는 사람에게 온 문자 메시지도 웹 사이트 링크가 포함되어 있으면 접속 전 확인하기)
- 제품에 2개 이상의 백신프로그램을 설치 및 최신 버전으로 업데이트하고 실시간 감시 상태 유지하기
- 패턴이나 비밀번호, 지문과 같은 보안 잠금 설정 기능을 이용하고 정기적으로 변경하기
- 사용자가 임의로 레지스트리 설정이나 운영 체제 소프트웨어를 수정하지 말기
- 제품에 알 수 없는 출처의 애플리케이션을 설치하지 않도록 설정하여 악성 스파이 앱이 자동으로 설치되지 않도록 하기

## 전자파 관련 주의 사항

이 기기는 전자파 노출에 대한 보호 기준을 따르고 있습니다.

방송통신위원회에서 고시한 전자파 인체 보호 기준에 의해 안전을 보장받기 위해서는 반드시 삼성전자에서 제공하는 별매품이나 소모품을 사용하여야 합니다.

### 전자파 관련 알아보기

제품은 전원이 켜진 상태에서 고주파(RF파) 에너지를 송수신합니다. 방송통신위원회는 2000년 12월에 고주파 에너지가 인체에 미치는 영향에 대한 보호 기준을 고시하였으며, 이 제품은 그 기준에 맞게 만들어졌습니다.

[전자파 인체 보호 기준]은 연령과 건강에 상관없이 모든 사람들의 안전을 보장하기 위하여 일반인들에게 허용될 수 있는 노출 한계치(1.6 W/Kg)를 규정하고 있습니다.

제품은 국립전파연구원에서 고시한 전자파 흡수율 측정 기준에 의한 전자파 흡수율(SAR: Specific Absorption Rate) 시험을 통하여 제품의 전자파가 노출 한계치 1.6 W/Kg 이내일 때 형식 등록한 후 판매할 수 있습니다.

전자파 노출에 대한 자세한 내용은 [www.samsung.com/sec](http://www.samsung.com/sec)에서 확인할 수 있습니다.

세계보건기구(WHO)와 미국식품의약국(FDA)에서는 통화 중 핸드프리 등을 사용해 머리와 몸을 제품과 떨어지게 하거나 제품 사용 시간을 줄여서 전자파에 대한 염려나 노출을 줄일 수 있다고 공지하고 있습니다.

- 제품의 분실이나 초기화, 사용 또는 수리 중 제품 내 보관된 데이터가 손상 또는 유실될 수 있습니다. 데이터는 사용자가 보관, 백업 및 관리하여야 하며, 데이터 손상 또는 유실에 대해 삼성전자는 일체 책임지지 않습니다.
- 삼성전자는 개인정보보호를 위해 별도의 잠금 해제 서비스를 제공하지 않습니다. 패턴, PIN, 비밀번호를 기억하지 못할 경우 제품 내 데이터 복구가 어려울 수 있으니 유의하시기 바랍니다.
- 주기적인 백업을 통해 제품 내 데이터 및 개인정보를 보호하시기 바랍니다.

# Safety information

Please read this important safety information before you use the device. It contains general safety information for devices and may include content that does not apply to your device. Follow the warning and caution information to prevent injury to yourself or others and to prevent damage to your device.



The term 'device' refers to the product and its battery, the items supplied with the product, and any Samsung-approved accessories used with the product.



## Warning

### **Failure to comply with safety warnings and regulations can cause serious injury or death**

Your device contains magnets. Keep it away from credit cards, implanted medical devices, and other devices that may be affected by magnets. In the case of medical devices, keep your device more than 15 cm apart. Stop using your device if you suspect any interference with your medical device and consult your physician or your medical device manufacturer

#### **Do not use damaged power cords or plugs, or loose electrical sockets**

Unsecured connections can cause electric shock or fire.

#### **Do not touch the device, power cords, plugs, or the electric socket with wet hands or other wet body parts**

Doing so may cause electric shock.

#### **Do not pull the power cord excessively when disconnecting it**

Doing so may cause electric shock or fire.

#### **Do not bend or damage the power cord**

Doing so may cause electric shock or fire.

#### **Do not use the device with wet hands while the device is charging**

Doing so may cause electric shock.

**Do not directly connect together the charger's positive and negative terminals**

Doing so may cause fire or serious injury.

**Do not use your device outdoor during a thunderstorm**

Doing so may result in electric shock or device malfunction.

**Use manufacturer-approved batteries, chargers, accessories, and supplies**

- Using generic batteries or chargers may shorten the life of your device or cause the device to malfunction. They may also cause a fire or cause the battery to explode.
- Use only Samsung-approved battery, charger, and cable specifically designed for your device. Incompatible battery, charger, and cable can cause serious injuries or damage to your device.
- Samsung cannot be responsible for the user's safety when using accessories or supplies that are not approved by Samsung.

**Do not carry your device in your back pockets or on your waist**

- The device may be damaged, explode, or result in a fire if too much pressure is applied to it.
- You may be injured if you are bumped or fall.

**Do not drop or cause excessive impact to the device**

- This may damage your device or battery, cause the device to malfunction, or shorten its lifespan.
- This may also cause overheating, combustion, fire, or other hazards.

**Handle and dispose of the device and charger with care**

- Never dispose of the battery or device in a fire. Never place the battery or device on or in heating devices, such as microwave ovens, stoves, or radiators. The device may explode when overheated. Follow all local regulations when disposing of used battery or device.
- Never crush or puncture the device.
- Avoid exposing the device to high external pressure, which can lead to an internal short circuit and overheating.

**Protect the device, battery and charger from damage**

- Avoid exposing your device and battery to very cold or very hot temperatures.
- Extreme temperatures can damage the device and reduce the charging capacity and life of your device and battery.



- Do not directly connect together the battery's positive and negative terminals and prevent them from coming into contact with metal objects. Doing so may cause the battery to malfunction.
- Do not use a cable whose covering is peeled off or damaged, and do not use any charger or battery that is damaged or malfunctioning.
- Do not turn on or use the device when the battery compartment is exposed.

**Do not store your device near or in heaters, microwaves, hot cooking equipment, or high pressure containers**

- The battery may leak.
- Your device may overheat and cause a fire.

**Do not use or store your device in areas with high concentrations of dust or airborne materials**

Dust or foreign materials can cause your device to malfunction and may result in fire or electric shock.

**Prevent the multipurpose jack and the small end of the charger from contact with conductive materials, such as liquids, dust, metal powders, and pencil leads. Do not touch the multipurpose jack with sharp tools or cause an impact to the multipurpose jack**

Conductive materials may cause a short circuit or corrosion of the terminals, which may result in an explosion or fire.

**When using the wireless charger, do not place foreign materials, such as metal objects, magnets, and magnetic stripe cards, between the device and the wireless charger**

The device may not charge properly or may overheat.

**Do not bite or suck the device or the battery**

- Doing so may damage the device or result in an explosion or fire.
- Children or animals can choke on small parts.
- If children use the device, make sure that they use the device properly.

**Do not insert the device or supplied accessories into the eyes, ears, or mouth**

Doing so may cause suffocation or serious injuries.

**Do not handle a damaged or leaking Lithium Ion (Li-Ion) battery**

For safe disposal of your Li-Ion battery, contact your nearest authorised service centre.



## Caution

### **Failure to comply with safety cautions and regulations can cause injury or property damage**

#### **Do not use your device near other electronic devices**

- Most electronic devices use radio frequency signals. Your device may interfere with other electronic devices.
- Using an LTE data connection may cause interference with other devices, such as audio equipment and telephones.

#### **Do not use your device in a hospital, on an aircraft, or in an automotive equipment that can be interfered with by radio frequency**

- Avoid using your device within a 15 cm range of a pacemaker, if possible, as your device can interfere with the pacemaker.
- To minimise possible interference with a pacemaker, use your device only on the side of your body that is opposite the pacemaker.
- If you use medical equipment, contact the equipment manufacturer before using your device to determine whether or not the equipment will be affected by radio frequencies emitted by the device.
- On an aircraft, using electronic devices can interfere with the aircraft's electronic navigational instruments. Follow the regulations provided by the airline and the instructions of aircraft personnel. In cases where it is allowed to use the device, always use it in flight mode.
- Electronic devices in your car may malfunction, because of radio interference from your device. Contact the manufacturer for more information.

#### **Do not expose the device to heavy smoke or fumes**

Doing so may damage the outside of the device or cause it to malfunction.

#### **If you use a hearing aid, contact the manufacturer for information about radio interference**

The radio frequency emitted by your device may interfere with some hearing aids. Before using your device, contact the manufacturer to determine whether or not your hearing aid will be affected by radio frequencies emitted by the device.

## **Do not use your device near devices or apparatuses that emit radio frequencies, such as sound systems or radio towers**

Radio frequencies may cause your device to malfunction.

## **Turn off the device in potentially explosive environments**

- Turn off your device in potentially explosive environments instead of removing the battery.
- Always comply with regulations, instructions and signs in potentially explosive environments.
- Do not use your device at refuelling points (petrol stations), near fuels or chemicals, or in blasting areas.
- Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories.

## **If any part of the device is broken, smokes, or emits a burning odor, stop using the device immediately. Use the device again only after it has been repaired at a Samsung Service Centre or an authorised service centre**

- Broken glass or acrylic could cause injury to your hands and face.
- When the device smokes or emits a burning odor, it may result in battery explosion or fire.

## **Comply with all safety warnings and regulations regarding mobile device usage while operating a vehicle**

While driving, safely operating the vehicle is your first responsibility. Never use your mobile device while driving, if it is prohibited by law. For your safety and the safety of others, use your common sense and remember the following tips:

- Get to know your device and its convenience features, such as speed dial and redial. These features help you reduce the time needed to place or receive calls on your mobile device.
- Position your device within easy reach. Make sure you can access your wireless device without taking your eyes off the road. If you receive an incoming call at an inconvenient time, let your voicemail answer it for you.
- Suspend calls in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice, and heavy traffic can be hazardous.
- Do not take notes or search for phone numbers. Jotting down a “to do” list or flipping through your address book takes attention away from your primary responsibility of driving safely.
- Dial sensibly and assess the traffic. Place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary.

- Do not engage in stressful or emotional conversations that may be distracting. Make the person you are talking to aware that you are driving and suspend conversations that could potentially divert your attention from the road.

## **Care and use your device properly**

### **Keep your device dry**

- Humidity and liquids may damage the parts or electronic circuits in your device.
- Do not turn on your device if it is wet. If your device is already on, turn it off and remove the battery immediately (if the device will not turn off or you cannot remove the battery, leave it as-is). Then, dry the device with a towel and take it to a service centre.
- This device has internal liquid indicators fitted. Water damage to your device may void the manufacturer's warranty.

### **Store your device only on flat surfaces**

If your device falls, it may be damaged.

**The device can be used in locations with an ambient temperature of 0 °C to 35 °C. You can store the device at an ambient temperature of -20 °C to 50 °C. Using or storing the device outside of the recommended temperature ranges may damage the device or reduce the battery's lifespan**

- Do not store your device in very hot areas such as inside a car in the summertime. Doing so may cause the screen to malfunction, result in damage to the device, or cause the battery to explode.
- Do not expose your device to direct sunlight for extended periods of time (on the dashboard of a car, for example).
- For a device with a removable battery, the battery can be stored separately in locations with an ambient temperature of 0 °C to 45 °C.

### **Do not store your device with metal objects, such as coins, keys, and necklaces**

- Your device may be scratched or may malfunction.
- If the battery terminals come into contact with metal objects, this may cause a fire.

### **Do not store your device near magnetic fields**

- Your device may malfunction or the battery may discharge from exposure to magnetic fields.
- Magnetic stripe cards, including credit cards, phone cards, passbooks, and boarding passes, may be damaged by magnetic fields.

**Avoid contact with device when it is overheating. Failure to do so may cause low temperature burns, redness and skin pigmentation**

- Be careful of overheating of the device when using it for extended periods and avoid prolonged skin contact.
- Do not sit on your device or make direct contact with your skin for extended periods when charging or connected to a power source.
- Tolerance to high temperature varies individually. Please take extra caution regarding the use of children, elders and people with special conditions.

**Do not use your device with the back cover removed**

The battery may fall out of the device, which may result in damage or malfunction.

**Be careful not to expose the camera lens to a strong light source, such as direct sunlight**

If the camera lens is exposed to a strong light source, such as direct sunlight, the camera image sensor may be damaged. A damaged image sensor is irreparable and will cause dots or spots in pictures.

**If your device has a camera flash or light, do not use it close to the eyes of people or pets**

Using a flash close to the eyes may cause temporary loss of vision or damage to the eyes.

**Use caution when exposed to flashing lights**

- While using your device, leave some lights on in the room and do not hold the screen too close to your eyes.
- Seizures or blackouts can occur when you are exposed to flashing lights while watching videos or playing Flash-based games for extended periods. If you feel any discomfort, stop using the device immediately.
- If anyone related to you has experienced seizures or blackouts while using a similar device, consult a physician before using the device.
- If you feel discomfort, such as a muscle spasm, or disoriented, stop using the device immediately and consult a physician.
- To prevent eye strain, take frequent breaks while using the device.

**Reduce the risk of repetitive motion injuries**

When you repetitively perform actions, such as pressing keys, drawing characters on a touch screen, or playing games, you may experience occasional discomfort in your hands, neck, shoulders, or other parts of your body. When using your device for extended periods, hold the device with a relaxed grip, press the keys lightly, and take frequent breaks. If you continue to have discomfort during or after such use, stop using the device and consult a physician.

## **Protect your hearing and ears when using a headset**



- Excessive exposure to loud sounds can cause hearing damage.
- Exposure to loud sounds while walking may distract your attention and cause an accident.
- Always turn the volume down before plugging the headphones into an audio source and use only the minimum volume setting necessary to hear your conversation or music.
- In dry environments, static electricity can build up in the headset. Avoid using headsets in dry environments or touch a metal object to discharge static electricity before connecting a headset to the device.
- Do not use a headset while driving or riding. Doing so may distract your attention and cause an accident, or may be illegal depending on your region.

## **Use caution when using the device while walking or moving**

- Always be aware of your surroundings to avoid injury to yourself or others.
- Make sure the headset cable does not become entangled in your arms or on nearby objects.

## **Do not paint or put stickers on your device**

- Paint and stickers can clog moving parts and prevent proper operation.
- If you are allergic to paint or metal parts of the device, you may experience itching, eczema, or swelling of the skin. When this happens, stop using the device and consult your physician.

## **Install mobile devices and equipment with caution**

- Ensure that any mobile devices or related equipment installed in your vehicle are securely mounted.
- Avoid placing your device and accessories near or in an airbag deployment area. Improperly installed wireless equipment can cause serious injury when airbags inflate rapidly.

## **Do not drop your device or cause impacts to your device**

- Your device may be damaged or may malfunction.
- If bent or deformed, your device may be damaged or parts may malfunction.

## **Ensure maximum battery and charger life**

- Batteries may malfunction if they are not used for extended periods.
- Over time, unused device will discharge and must be recharged before use.
- Disconnect the charger from power sources when not in use.
- Use the battery only for their intended purposes.

- Follow all instructions in this manual to ensure the longest lifespan of your device and battery. Damages or poor performance caused by failure to follow warnings and instructions can void your manufacturer's warranty.
- Your device may wear out over time. Some parts and repairs are covered by the warranty within the validity period, but damages or deterioration caused by using unapproved accessories are not.

### **When using the device, mind the following**

- Hold the device upright, as you would with a traditional phone.
- Speak directly into the microphone.

### **Do not disassemble, modify, or repair your device**

- Any changes or modifications to your device can void your manufacturer's warranty. If your device needs servicing, take your device to a Samsung Service Centre or an authorised service centre.
- Do not disassemble or puncture the battery, as this can cause explosion or fire.
- Do not disassemble or reuse the battery.
- Turn off the device before removing the battery. If you remove the battery with the device turned on, it may cause the device to malfunction.

### **When cleaning your device, mind the following**

- Wipe your device or charger with a towel or an eraser.
- Clean the battery terminals with a cotton ball or a towel.
- Do not use chemicals or detergents. Doing so may discolour or corrode the outside the device or may result in electric shock or fire.
- Prevent the device from being exposed to dust, sweat, ink, oil, and chemical products such as cosmetics, antibacterial spray, hand cleaner, detergent, and insecticides. The device's exterior and interior parts may be damaged or it could result in poor performance. If your device is exposed to any of the previously mentioned substances, use a lint-free, soft cloth to clean it.

### **Do not use the device for anything other than its intended use**

Your device may malfunction.

### **Avoid disturbing others when using the device in public**

### **Allow only qualified personnel to service your device**

Allowing unqualified personnel to service your device may result in damage to your device and will void your manufacturer's warranty.



## **Handle SIM cards, SD cards, or cables with care**

- When inserting a card or connecting a cable to your device, make sure that the card is inserted or the cable is connected to the proper side.
- Do not remove a card while the device is transferring or accessing information, as this could result in loss of data or damage to the card or device.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.
- Inserting a card or connecting a cable by force or improperly may result in damage to the multipurpose jack or other parts of the device.

## **Ensure access to emergency services**

Emergency calls from your device may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternative method of contacting emergency services personnel.

## **Protect your personal data and prevent leakage or misuse of sensitive information**

- While using your device, be sure to back up important data. Samsung is not responsible for the loss of any data.
- When disposing of your device, back up all data and then reset your device to prevent misuse of your personal information.
- Carefully read the permissions screen when downloading applications. Be particularly cautious with applications that have access to many functions or to a significant amount of your personal information.
- Check your accounts regularly for unapproved or suspicious use. If you find any sign of misuse of your personal information, contact your service provider to delete or change your account information.
- In the event your device is lost or stolen, change the passwords on your accounts to protect your personal information.
- Avoid using applications from unknown sources and lock your device with a pattern, password, or PIN.

## **Do not distribute copyright-protected material**

Do not distribute copyright-protected material without the permission of the content owners. Doing this may violate copyright laws. The manufacturer is not liable for any legal issues caused by the user's illegal use of copyrighted material.



## Malware and viruses

**To protect your device from malware and viruses, follow these usage tips. Failure to do so may result in damages or loss of data that may not be covered by the warranty service**

- Do not download unknown applications.
- Do not visit untrusted websites.
- Delete suspicious messages or email from unknown senders.
- Set a password and change it regularly.
- Turn off wireless features, such as Bluetooth, when not in use.
- If the device behaves abnormally, run an antivirus app to check for infection.
- Run an antivirus app on your device before you open newly-downloaded applications and files.
- Install antivirus apps on your computer and run them regularly to check for infection.
- Do not edit registry settings or modify the device's operating system.

## Specific Absorption Rate (SAR) certification information


For more information, visit [www.samsung.com/sar](http://www.samsung.com/sar) and search for your device with the model number.

## Correct disposal of this product



(Waste Electrical & Electronic Equipment)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (such as charger, headset, USB cable) should not be disposed of with other household waste.


 To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

This product is RoHS compliant.

## Correct disposal of batteries in this product

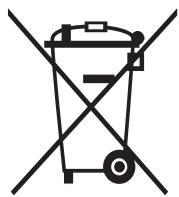

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66.

## FCC Information



The FCC approved model meets the following requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or TV reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Pursuant to Part 15.21 of the FCC Rules, you are cautioned that changes or modifications not expressly approved by Samsung could void your authority to operate the device.

You can perform device-to-device charging without the need for a charger through Samsung's Wireless Power Sharing feature. If your device supports the wireless charging or power sharing features, this equipment should be operated with a minimum distance of 20 cm between the device and your body.

## Disclaimer

Some content and services accessible through this device belong to third parties and are protected by copyright, patent, trademark or other intellectual property laws. Such content and services are provided solely for your personal non-commercial use. You may not use any content or services in a manner that has not been authorised by the content owner or service provider. Without limiting the foregoing, unless expressly authorised by the applicable content owner or service provider, you may not modify, copy, republish, upload, post, transmit, translate, sell, create derivative works, exploit, or distribute in any manner or medium any content or services displayed through this device.

“THIRD PARTY CONTENT AND SERVICES ARE PROVIDED “AS IS.” SAMSUNG DOES NOT WARRANT CONTENT OR SERVICES SO PROVIDED, EITHER EXPRESSLY OR IMPLIEDLY, FOR ANY PURPOSE. SAMSUNG EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. SAMSUNG DOES NOT GUARANTEE THE ACCURACY, VALIDITY, TIMELINESS, LEGALITY, OR COMPLETENESS OF ANY CONTENT OR SERVICE MADE AVAILABLE THROUGH THIS DEVICE AND UNDER NO CIRCUMSTANCES, INCLUDING NEGLIGENCE, SHALL SAMSUNG BE LIABLE, WHETHER IN CONTRACT OR TORT, FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, ATTORNEY FEES, EXPENSES, OR ANY OTHER DAMAGES ARISING OUT OF, OR IN CONNECTION WITH, ANY INFORMATION CONTAINED IN, OR AS A RESULT OF THE USE OF ANY CONTENT OR SERVICE BY YOU OR ANY THIRD PARTY, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.”

Third party services may be terminated or interrupted at any time, and Samsung makes no representation or warranty that any content or service will remain available for any period of time. Content and services are transmitted by third parties by means of networks and transmission facilities over which Samsung has no control. Without limiting the generality of this disclaimer, Samsung expressly disclaims any responsibility or liability for any interruption or suspension of any content or service made available through this device.

Samsung is neither responsible nor liable for customer service related to the content and services. Any question or request for service relating to the content or services should be made directly to the respective content and service providers.