

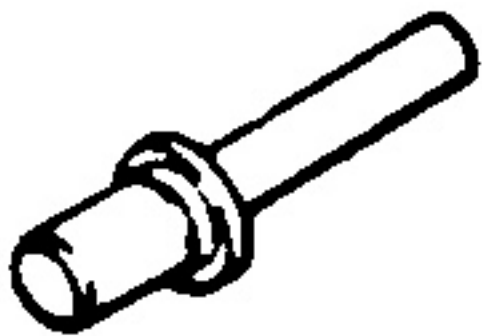

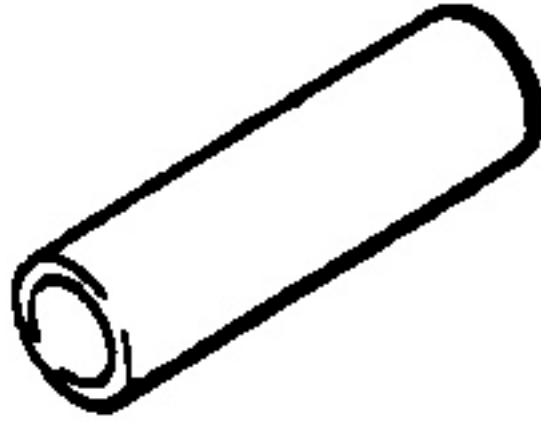
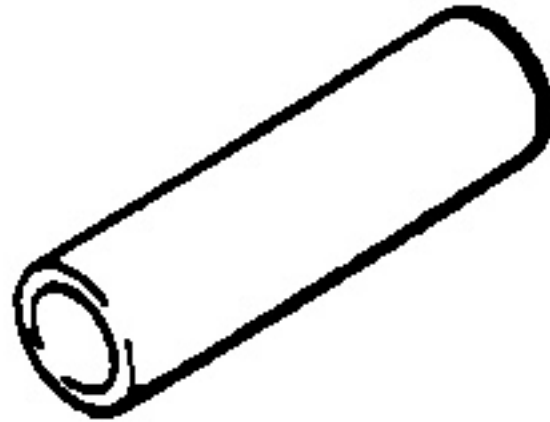



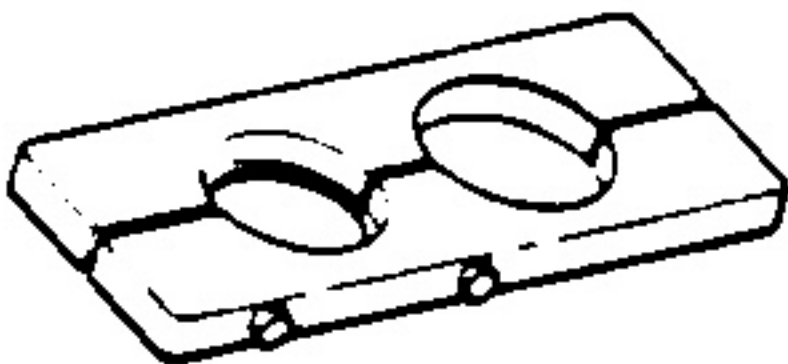
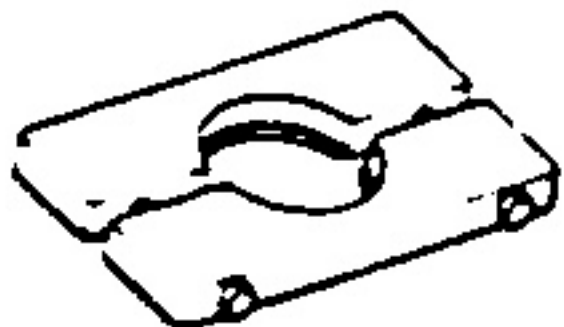




SPECIAL TOOLS

Tool (Number and name)	Use	Tool (Number and name)	Use
MD998019 Lock pin extractor 	Removal of spring pin	MD998245 Lock pin installer 	Installation of spring pin
MD998321 Front oil seal installer 	Installation of front oil seal	MD99836E Bearing installer 	Installation of bearing

GENERAL



Tool (Number and name)	Use	Tool (Number and name)	Use
MD998369 Bearing installer 	Installation of bearing	MD998320 Bearing installer 	Installation of bearing
MD998324 Control shaft oil seal installer 	Installation of control shaft oil seal	MD998325 Differential oil seal installer 	Installation of differential oil seal
MD998326 Poppet ball guide 	Installation of poppet ball	MD998327 Removing plate 	Removal of front bearing
MD998329 Differential bearing removing plate 	Removal of differential bearing	MD998354 Taper bearing puller 	Removal of taper roller bearing
MD998355 Gear puller 	Removal of gear	