
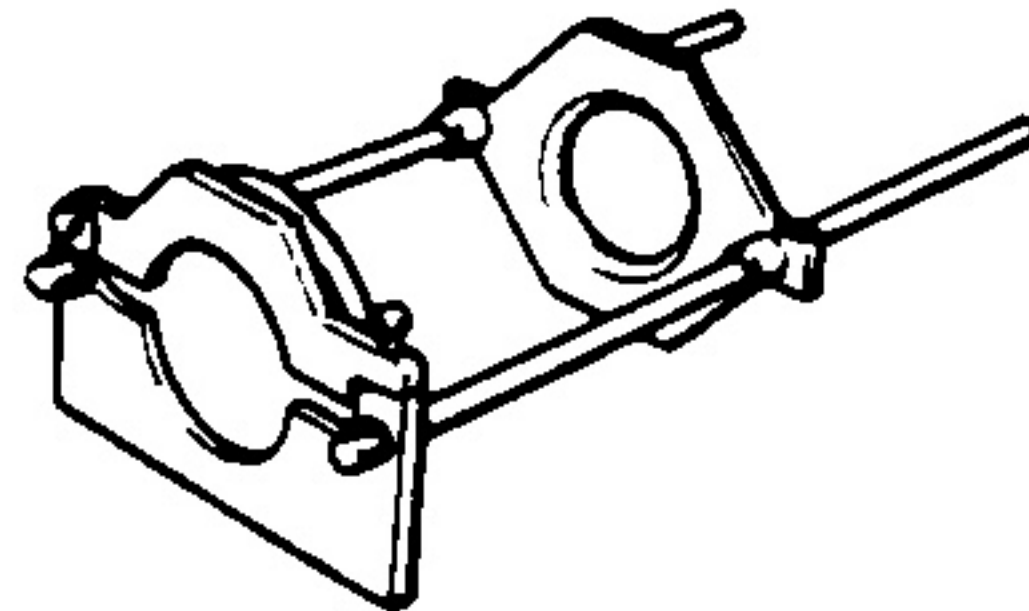
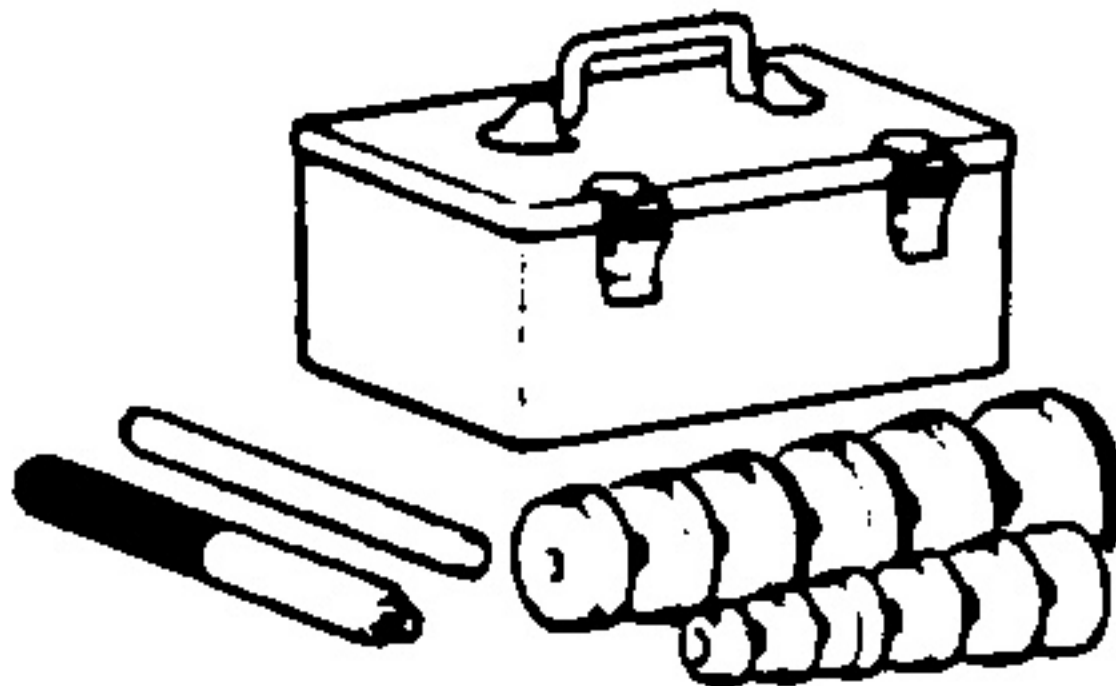


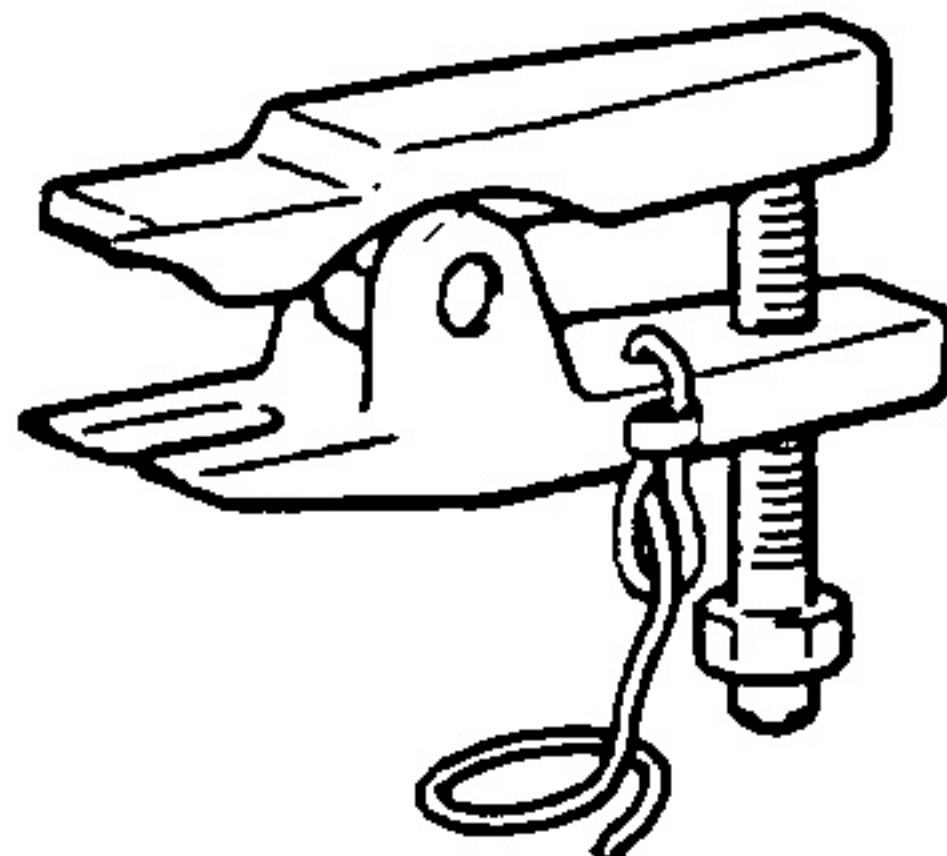
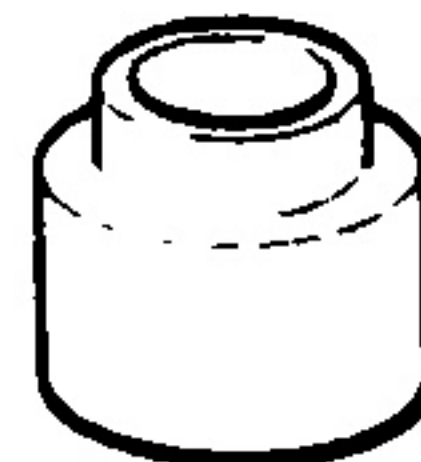


GENERAL



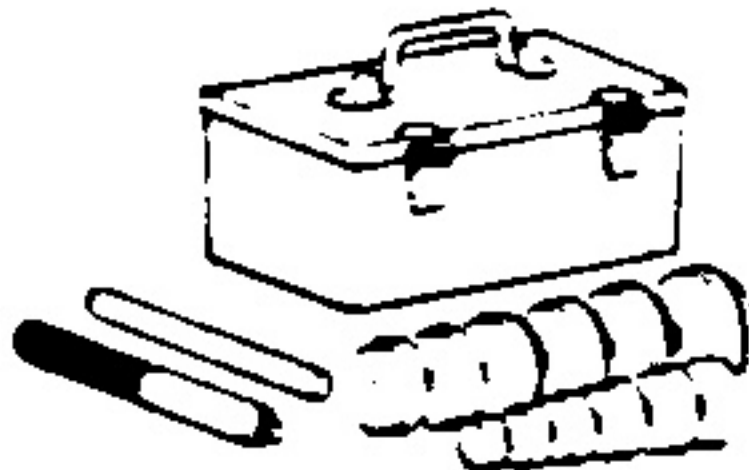

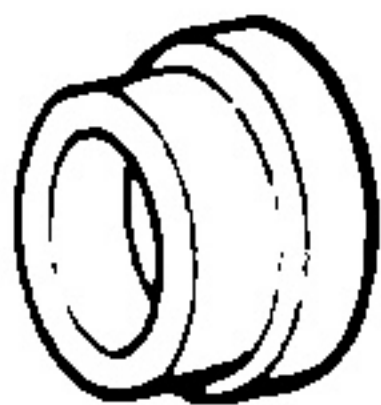

SPECIAL TOOLS

Tool (Number and name)	Use	Tool (Number and name)	Use
MB991036 Deep socket 	Removal, installation, dis-assembly and reassembly of strut assembly	MB991043 Spring compressor 	Compression of the front coil spring
MB990925 Bearing and oil seal installer set 	Removal of the bearing MB990939 Press fitting of the bearing MB990938 MB990926	MB990968 Torque wrench  MB990326 Preload socket 	Measurement of the lower arm ball joint starting torque
MB991113 Steering linkage puller 	Removal of the lower arm ball joint	MB990800 Ball joint remover and installer 	Installation of the dust cover



GENERAL

SPECIAL TOOLS

Tool (Number and name)	Use	Tool (Number and name)	Use
<p>MB990925 (Refer to GROUP 11A) Bearing and oil seal installer set</p> 	<p>Removal of bushing E</p> <p>Installation of wheel bearing outer race and oil seal (Removal of bearing outer race MB990939 (Press fitting of bearing) MB990925 MB990938</p>	<p>MB990779 Bar</p>  <p>MB990780 Installer attachment</p> 	<p>Installation of bushing A and B</p>
<p>MB991130 Oil seal installer</p> 	<p>Press-fitting of oil seal to rear axle hub</p>		