

Smart ADC Device

status active

Smart ADC Device

Table of Contents

- [About](#)
- [Getting Started](#)
- [Circuit](#)
- [Usage](#)
- [List Of Components](#)
- [Built Using](#)
- [Authors](#)

About

This repo contains

- Backend
- Detailed instructions

for Smart ADC Device.

Getting Started

These instructions will get you a copy of the project up and running on your system.

Prerequisites

Things you need to install the FW.

- Arduino IDE

Installing

A step by step series that tell you how to get the Firmware and Backend running

ESP32 Configuration

You should have Arduino IDE Installed

1. Add ESP32 Board to your Arduino IDE 1. In your Arduino IDE, go to File> Preferences Installing ESP32 Add-on in Arduino IDE Windows, Mac OS X, Linux open preferences 2. Enter https://dl.espressif.com/dl/package_esp32_index.json into the "Additional Board Manager URLs" field then, click the "OK" button: Note: if you already have the ESP32 boards URL, you can separate the URLs with a comma(each board will go to new line) as follows:
https://dl.espressif.com/dl/package_esp32_index.json,
http://arduino.esp8266.com/stable/package_esp8266com_index.json
2. Open the Boards Manager. Go to Tools > Board > Boards Manager...
3. Search for ESP32 and press install button for the ESP32 by Espressif Systems":
4. That's it. It should be installed after a few seconds.
5. In your Arduino sketchbook directory, create tools directory if it doesn't exist yet.
6. Unpack the tool into tools directory(present in libs/ESP32FS-1.0.zip) (the path will look like <home_dir>/Arduino/tools/ESP32FS/tool/esp32fs.jar).
7. Close and re-open the Arduino IDE.
8. Now copy the contents of the libs folder to the libraries directory of your Arduino
 1. If you are using windows, the libraries directory will be Documents/Arduino/libraries


ESP32 Node FW Uploading

1. Select ESP32 Dev Module from Tools->Board->ESP32
2. Select the correct port from Tools->Port
3. Then open Firmware.ino file,
4. Select Tools > ESP32 Sketch Data Upload menu item. This should start uploading the files into ESP32 flash file system.
5. Now Upload the Code to your ESP32 Dev Module.
6. Your ESP32 is now ready to be used.

Circuit

ESP32 SIM7000

ESP32 SIM700 Pinout

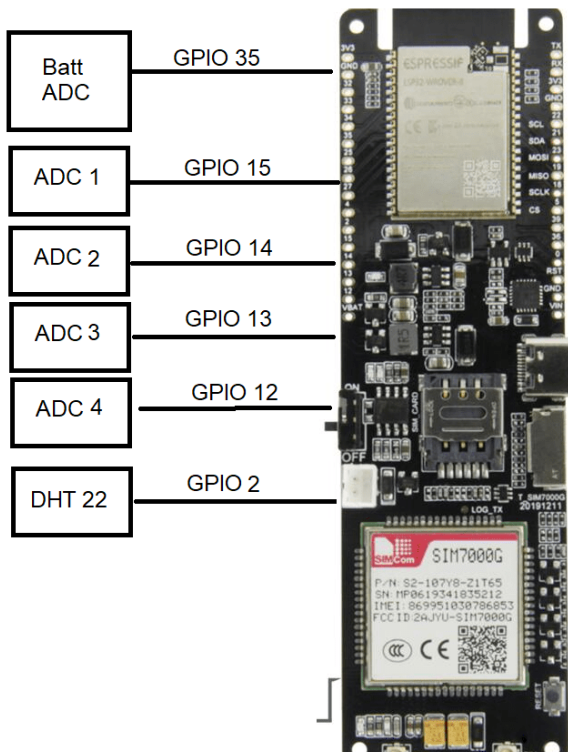

ESP32 User Configuration

NTP Address : id.pool.ntp.org

MQTT
Server Address : mqtt.example.com
Port : 1883
GateWay ID : 12345
Node ID : 67890

ADC 1 : Enable / Disable
ADC 1 Name : custom1

ADC 2 : Enable / Disable
ADC 2 Name : custom2

ADC 3 : Enable / Disable
ADC 3 Name : custom3

ADC 4 : Enable / Disable
ADC 4 Name : custom4

Payload format

```
{
  "ts": 1451649600512,
  "values": {
    "temperature": 4096,
    "humidity": 4096,
    "batt" : 4096,
    "custom1": 4096,
    "custom2": 4096,
    "custom3": 4096,
    "custom4": 4096,
    "network": "4G",
    "signal": "83",
  }
}
```

Topic:
12345/67890

← Send out every minute

Usage

1. Upload the code to your ESP32 as mentioned above.
2. Power on your ESP32, it will present you with an AP named **SmartADC-abc** (while **SmartADC** can be changed in the portal and **abc** is a unique id for each esp32)
3. Default captive portal password **123456789AP** which can be changed in captive portal.
4. Connect to the ESP32 access point and open the web-browser and navigate to the link http://esp32.local/_ac. This link will work on most of the operating systems but if your operating system is not allowing to open it, you may want to check the captive portal IP Address from the serial monitor and can use that IP address inplace of the above mentioned URL.
5. The default access IP Address is http://192.168.4.1/_ac
6. You can open settings page with following default credentials
 1. User: **AP Name (SmartADC)**
 2. Password: **admin**

List of Components

Following components are used to make this project

1. ESP32

Built Using

- [Arduino](#) - Embedded Framework and IDE - For Sensor Node Design

Authors

- [@Nauman3S](#) - Development and Deployment