

Writing data to another station programmable controller (with notification)

GP.SWRITE

**FX5S****FX5UJ****FX5U****FX5UC**


This instruction writes data to the device in another station programmable controller. (In units of words)

After the data writing is completed by the GP.SWRITE instruction, the device of the other station is turned on. The other station can recognize that data has been written by the GP.SWRITE instruction.

CC-Link IE TSN is compatible only with FX5U/FX5UC CPU module.

Ladder diagram	Structured text
	ENO:=GP_SWRITE(EN,Un,s1,s2,d1,d2,d3);

FBD/LD

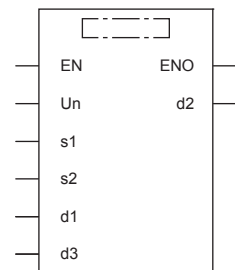

("GP_SWRITE" enters □.)

Setting data

■Descriptions, ranges, and data types

Operand	Description	Range	Data type	Data type (label)
(U) ^{*1}	Position number of the module connected	■FX5UJ CPU module 1H to 8H ■FX5U/FX5UC CPU module 1H to 10H	16-bit unsigned binary	ANY16
(s1)	Own station start device where control data is stored	☞ Page 1009 Control dataRefer to	Device name	ANY16 ^{*4}
(s2)	Own station head device where the data to be written is stored	—	Device name	ANY16 ^{*4}
(d1)	Target station head device where data is to be written ^{*2}	—	Character string ^{*3}	ANYSTRING_SINGLE ^{*3}
(d2)	Own station device to be turned on for one scan when the instruction completes. When the instruction completes with an error, (d2)+1 also turns on.	—	Bit	ANYBIT_ARRAY (Number of elements: 2)
(d3)	Target station device to be turned on for one scan when the instruction completes (enabling the target station to recognize that data has been written from another station)	—	Character string ^{*3}	ANYSTRING_SINGLE ^{*3}
EN	Execution condition	—	Bit	BOOL
ENO	Execution result	—	Bit	BOOL

*1 In the case of the ST language and the FBD/LD language, U displays as Un.

*2 The continuous area specified by the write data length (s1)+9 is required.

*3 For the specifications of the string data to be specified, refer to the following.

(☞ Page 987 Specifications of character string data specified by link dedicated instructions)

*4 Digit specified bit type label cannot be used.




■Applicable devices

Operand	Bit	Word			Double word		Indirect specification	Constant			Others (U)
	X, Y, M, L, SM, F, B, SB, S	T, ST, C, D, W, SD, SW, R	U□\G□	Z	LC	LZ		K, H	E	\$	
(U)	—	○	—	—	—	—	○	○	—	—	○
(s1)	—	○	—	—	—	—	○	—	—	—	—
(s2)	—	○	—	—	—	—	○	—	—	—	—
(d1)	—	—	—	—	—	—	—	—	—	○	—
(d2)	○*1	○*2	—	—	—	—	—	—	—	—	—
(d3)	—	—	—	—	—	—	—	—	—	○	—

*1 S cannot be used.

*2 T, ST, and C cannot be used.

■Control data

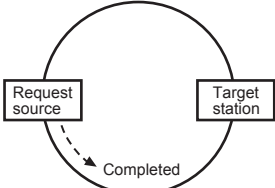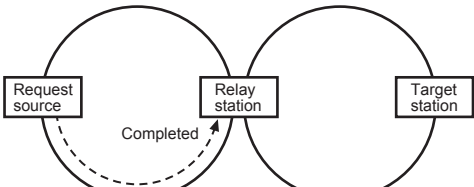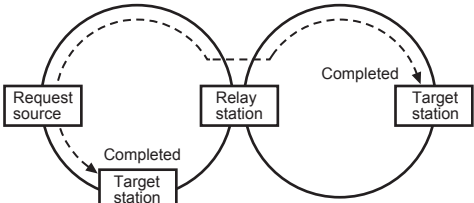Device	Item	Description	Setting range	Set by
(s1)+0	Execution/error completion type	<p>b15 b14 ... b9 b8 b7 b6 ... b0</p> <p>(4) 0 (3)(2) 0 (1)</p> <p>(1) Execution type (b0)</p> <ul style="list-style-type: none"> • 0: No arrival acknowledgment <p>When the target station is in the own network: Completed when data has been sent from the own station.</p>  <p>When the target station is in another network: Completed when data has arrived the relay station of the own network. (compatible only with CC-Link IE Field Network)</p>  <ul style="list-style-type: none"> • 1: Arrival acknowledgment used <p>Completed when data has been written in the target station.</p>  <p>(2) Error completion type (b7)</p> <p>Specify whether to set data at completion with an error.</p> <ul style="list-style-type: none"> • 0: Do not set data in (s1)+11 and later at completion with an error. • 1: Set data in (s1)+11 and later at completion with an error. <p>(3) Setting of arrival acknowledgment time (b8) (compatible only with CC-Link IE TSN)</p> <ul style="list-style-type: none"> • 0: By second • 1: By 100 ms <p>(4) Method for specifying the target station address (b15) (compatible only with CC-Link IE TSN)</p> <ul style="list-style-type: none"> • 0: Specify the network No. in (s1)+4 and the station No. in (s1)+5. • 1: Specify the IP address in (s1)+4 and 5. 	0000H 0001H 0080H 0081H 0100H 0101H 0180H 0181H 8000H 8001H 8080H 8081H 8100H 8101H 8180H 8181H	User
(s1)+1	Completion status	<p>The instruction completion status is stored.</p> <ul style="list-style-type: none"> • 0: Normal • Other than 0: Error (error code) 	—	System

Device	Item	Description	Setting range	Set by
(s1)+2	Own station channel	Specify the channel to be used by the own station. [CC-Link IE Field Network] • Channels 1 and 2 [CC-Link IE TSN] • Channels 1 to 8	1 to 8	User
(s1)+3	Target station CPU type	Specify the CPU type of the target station. • 0000H: Addressed to target station CPU (control CPU) • 03D0H: Addressed to control system CPU • 03D1H: Addressed to standby system CPU • 03D2H: Addressed to system A CPU • 03D3H: Addressed to system B CPU • 03E0H: Addressed to multiple CPU No. 1 • 03E1H: Addressed to multiple CPU No. 2 • 03E2H: Addressed to multiple CPU No. 3 • 03E3H: Addressed to multiple CPU No. 4 • 03FFH: Addressed to target station CPU (control CPU)	0000H 03D0H to 03D3H 03E0H to 03E3H 03FFH	User

Device	Item	Description	Setting range	Set by										
(s1)+4	Target network number	<p>[CC-Link IE Field Network] Specify the network No. of the target station. • 1 to 239 (network No.)</p> <p>[CC-Link IE TSN] ■When "0" is specified in b15 in (s1)+0 Specify the network No. of the target station. • 1 to 239 (network No.) ■When "1" is specified in b15 in (s1)+0 Specify the IP address (third and fourth octets) of the target station.</p> <table border="1"> <tr> <td>b15</td><td>...</td><td>b8 b7</td><td>...</td><td>b0</td></tr> <tr> <td colspan="2">3</td><td colspan="3">4</td></tr> </table> <p>• b8 to b15: Third octet • b0 to b7: Fourth octet</p>	b15	...	b8 b7	...	b0	3		4			<p>■(s1)+4 • Network No.: 1 to 239</p> <p>■(s1)+5 • Station No.: 1 to 120, 125 and 126 • Group number: 0081H to 00A0H • Specification of all stations: 00FFH</p> <p>■(s1)+4, 5 • IP address: 00000001H to FFFFFFFEH</p>	User
b15	...	b8 b7	...	b0										
3		4												
(s1)+5	Target station number	<p>[CC-Link IE Field Network] Specify the station number of the target station. (1)Station number specification • 125: Master station • 126: Master operating station • 1 to 120: Local station, intelligent device station or sub-master station (2)Group number specification • 0081H to 00A0H: All stations in group numbers (0001H to 0020H) (This can be set when the execution type specified in (s1)+0 is "0: No arrival acknowledgment".) (3)Specification of all stations • 00FFH: All stations in the target network No. (broadcast (excluding the own station)) (This can be set when the execution type specified in (s1)+0 is "0: No arrival acknowledgment".) If the instruction is executed by specifying the group number or all stations, specify "0000H" or "03FFH" for the CPU type of the target station ((s1)+3).</p> <p>[CC-Link IE TSN] ■When "0" is specified in b15 in (s1)+0 Specify the station number of the target station. (1)Station number specification • 1 to 120: Local station • 125: Master station (2)Group number specification • 0081H to 00A0H: All stations in group numbers (0001H to 0020H) (This can be set when the execution type specified in (s1)+0 is "0: No arrival acknowledgment".) (3)Specification of all stations • 00FFH: All stations in the target network No. (broadcast (excluding the own station)) (This can be set when the execution type specified in (s1)+0 is "0: No arrival acknowledgment".) If the instruction is executed by specifying the group number or all stations, specify "0000H" or "03FFH" for the CPU type of the target station ((s1)+3). ■When "1" is specified in b15 in (s1)+0 Specify the IP address (first and second octets) of the target station.</p> <table border="1"> <tr> <td>b15</td><td>...</td><td>b8 b7</td><td>...</td><td>b0</td></tr> <tr> <td colspan="2">1</td><td colspan="3">2</td></tr> </table> <p>• b8 to b15: First octet • b0 to b7: Second octet</p>	b15	...	b8 b7	...	b0	1		2				User
b15	...	b8 b7	...	b0										
1		2												
(s1)+6	Not used	—	—	—										
(s1)+7	Number of resends	<p>Effective when the execution type specified by (s1)+0 is "1: Arrival acknowledgment used". ■At instruction execution Specify the number of resends to be performed if the instruction is not completed within the monitoring time specified by (s1)+8. ■At completion of instruction The number of resends performed (result) is stored.</p>	0 to 15	User/ system										

Device	Item	Description	Setting range	Set by		
(s1)+8	Arrival monitoring time	Effective when the execution type specified by (s1)+0 is "1: Arrival acknowledgment used". Specify the monitoring time until completion of processing. If the processing is not completed within the monitoring time, the instruction will be resent the number of times specified in (s1)+7. ■When "0" is specified in b8 in (s1)+0 <ul style="list-style-type: none">• 0: 10 seconds• 1 to 32767: 1 to 32767 seconds ■When "1" is specified in b8 in (s1)+0 <ul style="list-style-type: none">• 0: 10000 ms (10 seconds)• 1 to 65535: 1 to 65535 × 100 ms	0 to 65535	User		
(s1)+9	Write data length	Specify the number of words to be written. <ul style="list-style-type: none">• 1 to 960 (words) (When writing data to QnACPU: 1 to 480 (words))	1 to 960	User		
(s1)+10	Not used	—	—	—		
(s1)+11	Clock setting flag	The validity status (valid or invalid) of the data in (s1)+12 and later is stored. Note that the data in (s1)+12 and later is not cleared even when the instruction is completed successfully. <ul style="list-style-type: none">• 0: Invalid• 1: Valid	—	System		
(s1)+12	Clock data (Set only in an abnormal state)	Upper 8 bits: Month (01H to 12H) Lower 8 bits: Year (00H to 99H: Lower two digits of the year)	—	System		
(s1)+13		Upper 8 bits: Hour (00H to 23H) Lower 8 bits: Day (01H to 31H)	—	System		
(s1)+14		Upper 8 bits: Second (00H to 59H) Lower 8 bits: Minute (00H to 59H)	—	System		
(s1)+15		Upper 8 bits: Year (00H to 99H: Upper two digits of the year) Lower 8 bits: Day of the week (00H (Sun.) to 06H (Sat.))	—	System		
(s1)+16	Error detection network number* ¹	■When "0" is specified in b15 in (s1)+0 The network number of the station where an error was detected is stored. (The number is not stored when an error was detected in the own station.) <ul style="list-style-type: none">• 1 to 239 (network No.) ■When "1" is specified in b15 in (s1)+0 (compatible only with CC-Link IE TSN) The IP address (third and fourth octets) of the station where an error was detected is stored. <div><div>b15</div><div>...</div><div>b8 b7</div><div>...</div><div>b0</div></div> <table><tr><td>3</td><td>4</td></tr></table> <ul style="list-style-type: none">• b8 to b15: Third octet• b0 to b7: Fourth octet	3	4	—	System
3	4					
(s1)+17	Error-detected station number* ¹	■When "0" is specified in b15 in (s1)+0 The number of the station where an error was detected is stored. (The number is not stored when an error was detected in the own station.) [CC-Link IE Field Network] <ul style="list-style-type: none">• 125: Master station• 1 to 120: Local station, intelligent device station or sub-master station [CC-Link IE TSN] <ul style="list-style-type: none">• 125: Master station• 1 to 120: Device station ■When "1" is specified in b15 in (s1)+0 (compatible only with CC-Link IE TSN) The IP address (first and second octets) of the station where an error was detected is stored. <div><div>b15</div><div>...</div><div>b8 b7</div><div>...</div><div>b0</div></div> <table><tr><td>1</td><td>2</td></tr></table> <ul style="list-style-type: none">• b8 to b15: First octet• b0 to b7: Second octet	1	2	—	System
1	2					


*¹ If completion status ((s1)+1) is "Channel in use (dedicated instruction) (error codes: D25AH to D25BH)", data is not stored.

- The continuous area (a maximum of 960 words) specified by the write data length ((s1)+9) is required in the write data storage device (d1).
- When a number from 1 to 120 is specified for the target station number, the GP.SWRITE instruction should be executed with the execution type set to "Arrival acknowledgment used" to improve data reliability. When a number from 81H to A0H or FFH is specified for the target station number, the GP.SWRITE instruction should be executed with the execution type set to "No arrival acknowledgment".
- When performing device writing to the same station from multiple stations, do not overlap the write timing. When the execution type is set to "No arrival acknowledgment", successful completion results in the write source station if communication is completed successfully even when the sending data contains an error. Also, even when the sending data is normal, a timeout results in the write source station if the GP.SWRITE instruction is executed for the same station from multiple stations.
- The number of resends (s1)+7 must be set every time the instruction is executed.

Processing details

- The instruction writes data by the specified number of words ((s1)+9) from the own station head device (s2) into the target station word devices. Specify the target stations in control data ((s1)+4) and ((s1)+5). Upon completion of writing device data to target station, the completion device specified by (d2) turns on. In the other station, upon completion of writing the device data specified by (s2), the device specified by (d3) turns on.
- For the target stations that can be specified, refer to the following.

Page 986 Target networks and target station types

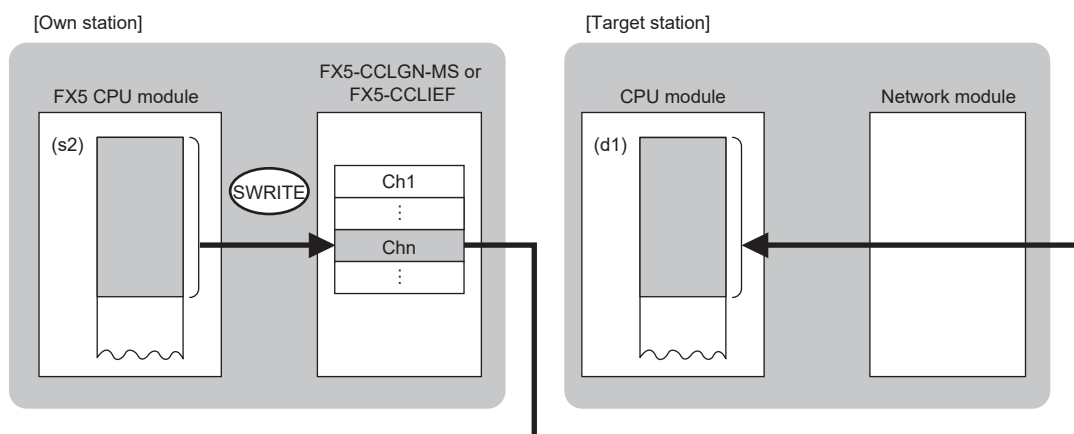


- When executing multiple link dedicated instructions concurrently, be careful not to overlap the channels of the link dedicated instructions. Multiple link dedicated instructions specifying the same channel cannot be used concurrently.
- The execution of the GP.SWRITE instruction and whether it has been completed normally or completed with an error can be checked with the completion device (d2) or completion status indication device (d2)+1.


Device	Operation
Completion device (d2)	The device turns on during the END processing for the scan in which the GP.SWRITE instruction is completed, and turns off during the next END processing.
Completion status indication device (d2)+1	The device turns on or off depending on the completion status of the GP.SWRITE instruction. When completed normally: The device does not change (remains off). When completed with an error: The device turns on during the END processing for the scan in which the GP.SWRITE instruction is completed, and turns off during the next END processing.

- The following figure shows the execution timing of the GP.SWRITE instruction.

When completed normally

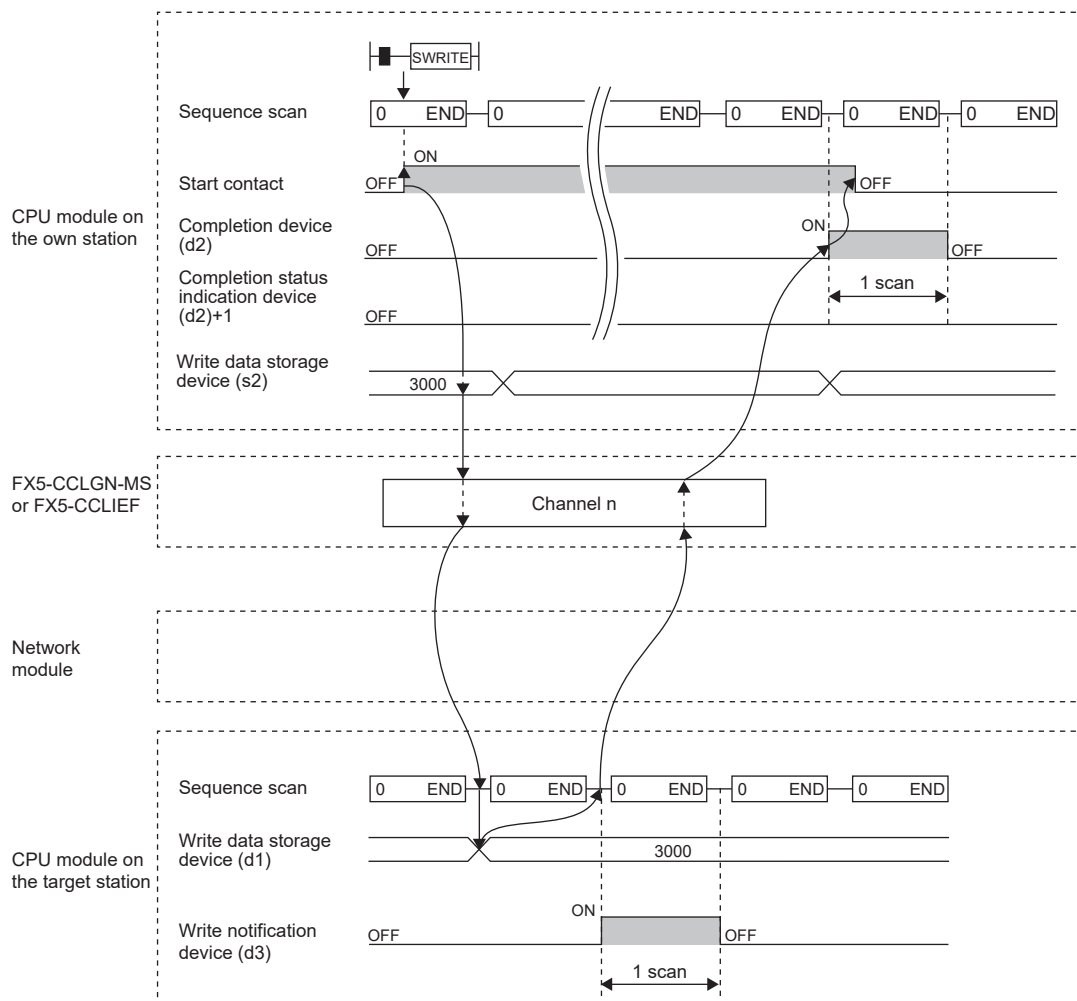

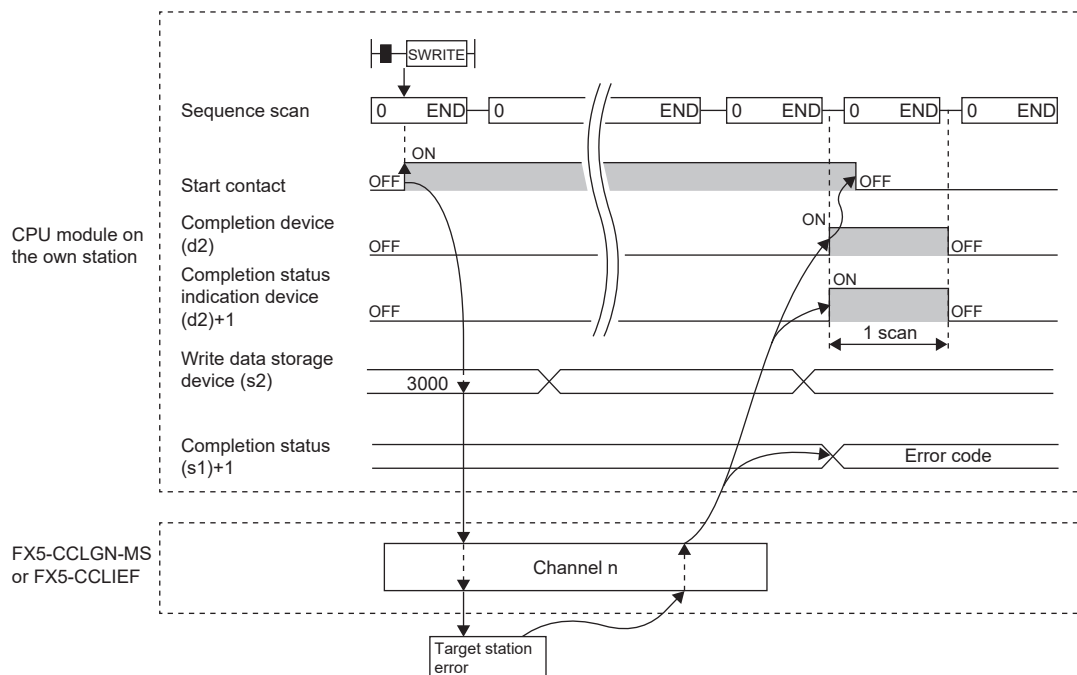


When completed with an error



- Write processing is performed only once on the rising edge when the write command turns on.

Operation error

Error code ((s1)+1)	Description
C000H to CFFFH	Refer to  MELSEC iQ-F FX5 CC-Link IE TSN Master/Local Module User's Manual.
D000H to DFFFH	Refer to  MELSEC iQ-F FX5 CC-Link IE TSN Master/Local Module User's Manual. Refer to  MELSEC iQ-F FX5 CC-Link IE Field Network Module User's Manual.