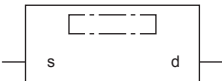
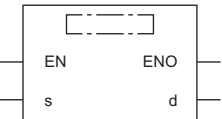


20.9 Converting WORD to INT

WORD_TO_INT(_E)

FX5S FX5UJ FX5U FX5UC

These functions convert WORD type data to INT type data.

Ladder diagram, FBD/LD		Structured text
[Without EN/ENO] 	[With EN/ENO] 	[Without EN/ENO] d:=WORD_TO_INT(s); [With EN/ENO] d:=WORD_TO_INT_E(EN,ENO,s);

20

Setting data


■Descriptions, types, and data types

Argument	Description	Type	Data type
EN	Execution condition (TRUE: Execution, FALSE: Stop)	Input variable	BOOL
s(IN)	Input	Input variable	WORD
ENO	Output status (TRUE: Normal, FALSE: Abnormal)	Output variable	BOOL
d(WORD_TO_INT(_E))	Output	Output variable	INT

Processing details

■Operation processing

- These functions convert the WORD type data input to (s) to INT type data and output from (d).



- A value input to (s) is the WORD type data value.

■Operation result

1. Function without EN/ENO

The operation processing is executed. The operation output value is output from (d).

2. Function with EN/ENO

The following table lists the execution conditions and operation results.

Execution condition	Operation result	
EN	ENO	(d)
TRUE (Executes operation)	TRUE	Operation output value
FALSE (Stops operation)	FALSE*1	Indefinite value

*1 When FALSE is output from ENO, data output from (d) is undefined. In that case, modify a program so that the data output from (d) is not used.

Operation error

There is no operation error.