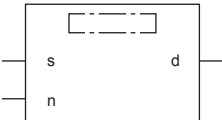
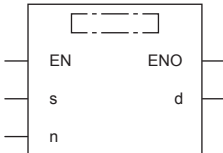


23.4 n-bit Right Rotation

ROR(_E)

FX5S **FX5UJ** **FX5U** **FX5UC**

These functions rotate an input value rightward by (n) bits and output the result.

Ladder diagram, FBD/LD		Structured text
[Without EN/ENO]	[With EN/ENO]	[Without EN/ENO] d:=ROR(s,n); [With EN/ENO] d:=ROR_E(EN,ENO,s,n);
		

Setting data


■Descriptions, types, and data types

Argument	Description	Type	Data type
EN	Execution condition (TRUE: Execution, FALSE: Stop)	Input variable	BOOL
s(IN)	Input	Input variable	ANY_BIT
n(N)	Number of shift bits	Input variable	ANY_BIT
ENO	Output status (TRUE: Normal, FALSE: Abnormal)	Output variable	BOOL
d(ROR(_E))	Output	Output variable	ANY_BIT

Processing details


■Operation processing

- These functions rotate the 16-bit or 32-bit data (WORD or DWORD type) input to (s) right by (n) bits and output the result in the same data type as (s) from (d).
- The number input in (n) is used as the number of right-rotation bits.



Ex.

When the data type of (s) is 16-bit data (WORD) and 3 is input in (n) (The bits are rotated right by 3 bits.)

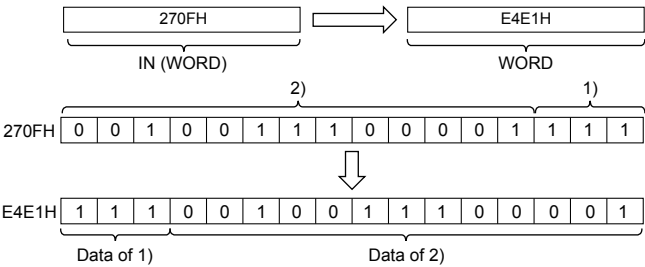

- The input data to (s) is 16-bit data/32-bit data (WORD or DWORD type).
- A value input to (n) (Number of shift bits) is the INT type data value and within the following range.

When the data of (s) is 16-bit data (WORD)	When the data of (s) is 32-bit data (DWORD)
A value in (n) is within 0 to 15. The lower 4-bit data of the value in (n) is used. [Example] When the input value is 6 When the input value is 22: 6	A value in (n) is within 0 to 31. The lower 5-bit data of the value in (n) is used. [Example] When the input value is 6: 6 When the input value is 22: 22

■Operation result

1. Function without EN/ENO

The operation processing is executed. The operation output value is output from (d).

2. Function with EN/ENO

The following table lists the execution conditions and operation results.

Execution condition	Operation result	
EN	ENO	(d)
TRUE (Executes operation)	TRUE	Operation output value
FALSE (Stops operation)	FALSE ^{*1}	Indefinite value

*1 When FALSE is output from ENO, data output from (d) is undefined. In that case, modify a program so that the data output from (d) is not used.

Operation error

There is no operation error.