

# 32-bit data absolute positioning

## DDRVA [For the FX3 compatible operand specification]

**FX5S**

**FX5UJ**

**FX5U**

**FX5UC**

This instruction executes one-speed positioning by absolute drive. Only CPU module is supported.

Ladder diagram	Structured text
	<pre>ENO:=DDRVA(EN,s1,s2,d1,d2);</pre>
FBD/LD	

## Setting data

### ■Descriptions, ranges, and data types

Operand	Description	Range	Data type	Data type (label)
(s1)	Positioning address	-2147483648 to +2147483647	32-bit signed binary	ANY32
(s2)	Command speed	1 to 2147483647	32-bit signed binary	ANY32
(d1)	Output bit device number (Y) from which pulses are output	■FX5S/FX5UJ CPU module 0 to 2 ■FX5U/FX5UC CPU module 0 to 3	Bit	ANY_ELEMENTARY (BOOL)
(d2)	Bit device number from which the rotation direction is output	—	Bit	ANY_BOOL
EN	Execution condition	—	Bit	BOOL
ENO	Execution result	—	Bit	BOOL

### ■Applicable devices

Operand	Bit	Word			Double word		Indirect specification	Constant			Others
	X, Y, M, L, SM, F, B, SB, S	T, ST, C, D, W, SD, SW, R	U□\G□	Z	LC	LZ		K, H	E	\$	
(s1)	○	○	○	○	○	○	○	○	—	—	—
(s2)	○	○	○	○	○	○	○	○	—	—	—
(d1)	○*1	—	—	—	—	—	—	—	—	—	—
(d2)	○*2	○*3	—	—	—	—	—	—	—	—	—

\*1 Only Y can be used.


\*2 When the output mode is CW/CCW, specify the CCW axis. When the output mode is PULSE/SIGN and using Y, only the SIGN output or general-purpose output of the self-axis can be specified.

\*3 T, ST, and C cannot be used.

## Processing details

This instruction executes one-speed positioning by absolute drive. Specify the positioning address in the absolute system, in which the transfer distance from the origin (absolute address) is specified for positioning.

- For (s1), specify the relative positioning address in user units. (The address must be within the range of -2147483648 to +2147483647 in the number of pulses.)
- For (s2), specify the command speed in user units. (The speed must be 200 kpps or lower in frequency.)
- For (d1), specify the device from which pulses are output. Only the Y devices having positioning parameters can be specified.
- For (d2), specify the bit device from which the rotation direction signal is output. Only the device specified with the parameter or general-purpose outputs can be specified. When the output devices (Y) is executed by another function (PWM, positioning PULSE axis, or CW/CCW axis etc.), the device does not function and causes an error.

For details on the function, precautions, and error code, refer to  MELSEC iQ-F FX5 User's Manual (Application).

## DDRVA [For the FX5 operand specification]


**FX5S**

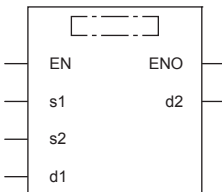
**FX5UJ**

**FX5U**

**FX5UC**

This instruction executes one-speed positioning by absolute drive.

Ladder diagram	Structured text
	<pre>ENO:=DDRVA(EN,s1,s2,d1,d2);</pre>

FBD/LD


### Setting data

#### ■Descriptions, ranges, and data types

Operand	Description	Range	Data type	Data type (label)
(s1)	Positioning address	-2147483648 to +2147483647	32-bit signed binary	ANY32
(s2)	Command speed	1 to 2147483647	32-bit signed binary	ANY32
(d1)	Axis number from which pulses are to be output	■FX5S/FX5UJ CPU module K1 to K3, K5 to K12 ■FX5U/FX5UC CPU module K1 to K12	16-bit unsigned binary	ANY_ELEMENTARY (WORD)*1
(d2)	Bit device number of the positioning complete flag or abnormal end flag	—	Bit	ANY_BOOL
EN	Execution condition	—	Bit	BOOL
ENO	Execution result	—	Bit	BOOL

\*1 Digit specified bit type label cannot be used.

#### ■Applicable devices

Operand	Bit	Word			Double word		Indirect specification	Constant			Others
	X, Y, M, L, SM, F, B, SB, S	T, ST, C, D, W, SD, SW, R	U□\G□	Z	LC	LZ		K, H	E	\$	
(s1)	○	○	○	○	○	○	○	○	—	—	—
(s2)	○	○	○	○	○	○	○	○	—	—	—
(d1)	—	○	○	○	—	—	○	○	—	—	—
(d2)	○	○*1	—	—	—	—	—	—	—	—	—

\*1 T, ST, and C cannot be used.

## Processing details

This instruction executes one-speed positioning by absolute drive. Specify the positioning address in the absolute system, in which the transfer distance from the origin (absolute address) is specified for positioning.

- For (s1), specify the relative positioning address in user units. (The address must be within the range of -2147483648 to +2147483647 in the number of pulses.)
- For (s2), specify the command speed in user units. (The speed must be 200 kpps or lower in frequency.)
- For (d1), specify the axis number from which pulses are output.
- For (d2), specify the bit device of the normal complete flag or abnormal end flag for the DDRVA instruction.

For details on the function and error code, refer to  MELSEC iQ-F FX5 User's Manual (Application).

## Precautions

Two devices are occupied from the device specified in (d2). Make sure that these devices are not used in other controls.

For other precautions, refer to  MELSEC iQ-F FX5 User's Manual (Application).