

## RX Family

R01AN2170EJ0112

Rev.1.12

Jun 30, 2019

### USB Peripheral Communications Device Class Driver for USB Mini Firmware Using Firmware Integration Technology

---

#### Introduction

This application note describes USB Peripheral Communication Device Class Driver(PCDC), which utilizes Firmware Integration Technology (FIT). This module operates in combination with the USB Basic Mini Host and Peripheral Driver. It is referred to below as the USB PCDC FIT module.

#### Target Device

RX111 Group

RX113 Group

RX231 Group

RX23W Group

When using this application note with other Renesas MCUs, careful evaluation is recommended after making modifications to comply with the alternate MCU.

#### Related Documents

1. Universal Serial Bus Revision 2.0 specification
2. USB Class Definitions for Communications Devices Revision 1.2
3. USB Communications Class Subclass Specification for PSTN Devices Revision 1.2  
<http://www.usb.org/developers/docs/>
4. RX111 Group User's Manual: Hardware (Document number .R01UH0365)
5. RX113 Group User's Manual: Hardware (Document number.R01UH0448)
6. RX231 Group User's Manual: Hardware (Document number .R01UH0496)
7. RX23W Group User's Manual: Hardware (Document number .R01UH0823)
8. USB Basic Mini Host and Peripheral Driver (USB Mini Firmware) using Firmware Integration Technology Application Note (Document number.R01AN2166)

Renesas Electronics Website

<http://www.renesas.com>

USB Devices Page

<http://www.renesas.com/prod/usb/>

## Contents

|  |    |
|--|----|
| 1. Overview .....                                    | 3  |
| 2. Software Configuration .....                      | 4  |
| 3. API Information .....                             | 5  |
| 4. CDC, PSTN, and ACM (Abstract Control Model) ..... | 8  |
| 5. API Functions .....                               | 12 |
| 6. Configuration (r_usb_pcdc_mini_config.h) .....    | 13 |
| 7. CDC Driver Installation .....                     | 14 |
| 8. Creating an Application .....                     | 17 |

## 1. Overview

The USB PCDC FIT module, when used in combination with the USB-BASIC-F/W FIT module, operates as a USB peripheral communications device class driver (PCDC). The PCDC conforms to the abstract control model of the USB communication device class specification (CDC) and enables communication with a USB host.

This module supports the following functions.

- Data transfer to and from a USB host
- Response to CDC class requests
- Communication device class notification transmit

### 1.1 Please be sure to read

Please refer to the document (Document number: R01AN2166) for *USB Basic Mini Host and Peripheral Driver (USB Mini Firmware) using Firmware Integration Technology Application Note* when creating an application program using this driver.

This document is located in the "**reference\_documents**" folder within this package.

### 1.2 Note

This driver is not guaranteed to provide USB communication operation. The customer should verify operation when utilizing it in a system and confirm the ability to connect to a variety of different types of devices.

### 1.3 Terms and Abbreviations

Terms and abbreviations used in this document are listed below.


|              |  |
|--------------|--|
| ACM          | : Abstract Control Model. This is the USB interface subclass used for virtual COM ports, based in the old V.250 (AT) command standard. See PSTN below. |
| APL          | : Application program  |
| CDC          | : Communications Devices Class   |
| H/W          | : Renesas USB device   |
| IDE          | : Integrated Development Environment   |
| PCD          | : Peripheral control driver of USB-BASIC-F/W   |
| PCDC         | : Communications Devices Class for peripheral  |
| PCDCD        | : Peripheral Communications Devices Class Driver   |
| PSTN         | : Public Switched Telephone Network, contains the ACM (above) standard.  |
| SCI          | : Serial Communication Interface   |
| USB          | : Universal Serial Bus   |
| USB-BASIC-FW | : USB Basic Mini Host and Peripheral Driver  |

### 1.4 USB PCDC FIT Module

User needs to integrate this module to the project using `r_usb_basic_mini`. User can control USB H/W by using this module API after integrating to the project.

## 2. Software Configuration

Figure 2-1 shows the configuration of the modules related to PCDC.

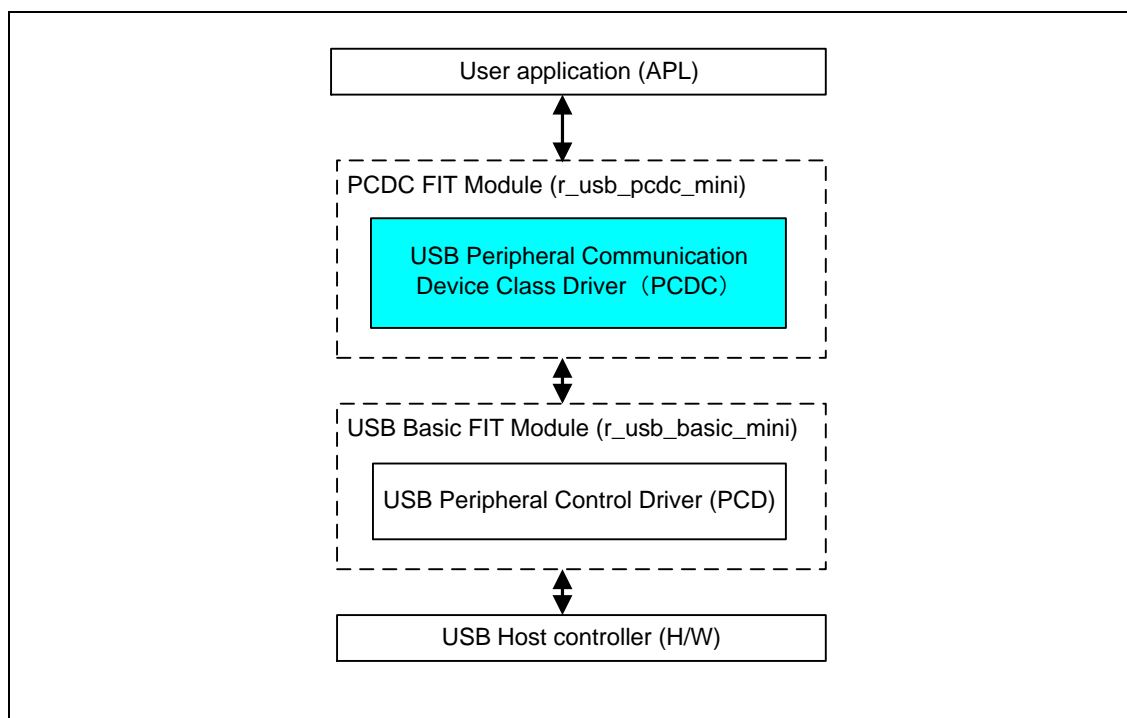

**Figure 2-1 Source Module Structure**

**Table 2-1 Modules**

| Module | Description   |
|--------|---|
| APL    | User application program.   |
| PCDC   | Sends requests from the APL for requests and data communication involving the CDC to the PCD. |
| PCD    | USB peripheral hardware control driver. (Basic USB FW.)                                       |

### 3. API Information

This Driver API follows the Renesas API naming standards.

#### 3.1 Hardware Requirements

This driver requires your MCU support the following features:

- USB

#### 3.2 Software Requirements

This driver is dependent upon the following packages:

- r\_bsp
- r\_usb\_basic\_mini

#### 3.3 Operating Confirmation Environment

Table 3-1 shows the operating confirmation environment of this driver.

Table 3-1 Operation Confirmation Environment

| Item                       | Contents   |
|----------------------------|--|
| C compiler                 | Renesas Electronics C/C++ compiler for RX Family V.3.01.00<br>(The option "-lang=C99" is added to the default setting of IDE)  |
|                            | GCC for Renesas RX 4.08.04.201902<br>(The option "-std=gnu99" is added to the default setting of IDE)  |
|                            | IAR C/C++ Compiler for Renesas RX version 4.12.01  |
| Endian                     | Little Endian, Big Endian  |
| USB Driver Revision Number | Rev.1.12   |
| Using Board                | Renesas Starter Kit for RX111<br>Renesas Starter Kit for RX113<br>Renesas Starter Kit for RX231<br>Renesas Solution Starter Kit for RX231  |
| Host Environment           | The operation of this USB Driver module connected to the following OSes has been confirmed. <ol style="list-style-type: none"> <li>1. Windows® 7</li> <li>2. Windows® 8.1</li> <li>3. Windows® 10</li> </ol> |

### 3.4 Usage of Interrupt Vector

Table 3-2 shows the interrupt vector which this driver uses.

Table 3-2 List of Usage Interrupt Vectors

| Device | Contents   |
|--------|--|
| RX111  | USBIO Interrupt (Vector number: 36) / USBR0 Interrupt (Vector number: 90)<br>USB D0FIFO0 Interrupt (Vector number: 36) / USB D1FIFO0 Interrupt (Vector number: 37) |
| RX113  |  |
| RX231  |  |
| RX23W  |  |

### 3.5 Header Files

All API calls and their supporting interface definitions are located in *r\_usb\_basic\_mini\_if.h* and *r\_usb\_pcdc\_mini\_if.h*.

### 3.6 Integer Types

This project uses ANSI C99 “Exact width integer types” in order to make the code clearer and more portable. These types are defined in *stdint.h*.

### 3.7 Compile Setting

For compile settings, refer to chapter 6, **Configuration (r\_usb\_pcdc\_mini\_config.h)** in this document and chapter "Configuration" in the document (Document number: R01AN2166) for *USB Basic Mini Host and Peripheral Driver (USB Mini Firmware) using Firmware Integration Technology Application Note*.

### 3.8 ROM / RAM Size

The follows shows ROM/RAM size of this driver.

1. CC-RX (Optimization Level: Default)

|          | Checks arguments     | Does not check arguments |
|----------|----------------------|--------------------------|
| ROM size | 16.0K bytes (Note 3) | 15.8K bytes (Note 4)     |
| RAM size | 4.4K bytes           | 4.4K bytes               |

2. GCC (Optimization Level: -O2)

|          | Checks arguments     | Does not check arguments |
|----------|----------------------|--------------------------|
| ROM size | 17.7K bytes (Note 3) | 17.5K bytes (Note 4)     |
| RAM size | 4.3K bytes           | 4.3K bytes               |

3. IAR (Optimization Level: Medium)

|          | Checks arguments     | Does not check arguments |
|----------|----------------------|--------------------------|
| ROM size | 13.4K bytes (Note 3) | 13.2K bytes (Note 4)     |
| RAM size | 3.2K bytes           | 3.2K bytes               |

Note:

1. ROM/RAM size for BSP and USB Basic Driver is included in the above size.
2. The above is the size when specifying RX V2 core option.
3. The ROM size of “Checks arguments” is the value when *USB\_CFG\_ENABLE* is specified to *USB\_CFG\_PARAM\_CHECKING* definition in *r\_usb\_basic\_mini\_config.h* file.
4. The ROM size of “Does not check arguments” is the value when *USB\_CFG\_DISABLE* is specified to *USB\_CFG\_PARAM\_CHECKING* definition in *r\_usb\_basic\_mini\_config.h* file.

---

### 3.9 Argument

---

For the structure used in the argument of API function, refer to chapter "**Structures**" in the document (Document number: R01AN2166) for *USB Basic Mini Host and Peripheral Driver (USB Mini Firmware) using Firmware Integration Technology Application Note*.

---

### 3.10 Adding the FIT Module to Your Project

---

This module must be added to each project in which it is used. Renesas recommends the method using the Smart Configurator described in (1) or (3) below. However, the Smart Configurator only supports some RX devices. Please use the methods of (2) or (4) for RX devices that are not supported by the Smart Configurator.

- (1) Adding the FIT module to your project using "Smart Configurator" on e<sup>2</sup> studio

By using the Smart Configurator in e<sup>2</sup> studio, the FIT module is automatically added to your project. Refer to "Renesas e<sup>2</sup> studio Smart Configurator User Guide (R20AN0451)" for details.

- (2) Adding the FIT module to your project using the FIT Configurator in e<sup>2</sup> studio

By using the FIT Configurator in e<sup>2</sup> studio, the FIT module is automatically added to your project. Refer to "Adding Firmware Integration Technology Modules to Projects (R01AN1723)" for details.

- (3) Adding the FIT module to your project using the Smart Configurator in CS+

By using the Smart Configurator Standalone version in CS+, the FIT module is automatically added to your project. Refer to "Renesas e<sup>2</sup> studio Smart Configurator User Guide (R20AN0451)" for details.

- (4) Adding the FIT module to your project on CS+

In CS+, please manually add the FIT module to your project. Refer to "Adding Firmware Integration Technology Modules to CS+ Projects (R01AN1826)" for details.

## 4. CDC, PSTN, and ACM (Abstract Control Model)

### 4.1 Basic Functions

This software conforms to the Abstract Control of the CDC PSTN Subclass. See 4.2 below.

### 4.2 Abstract Control Model Overview

The Abstract Control Model subclass of CDC is a technology that bridges the gap between USB devices and earlier modems (employing RS-232C connections), enabling use of application programs designed for older modems. The class requests and class notifications supported are listed below.

#### 4.2.1 Class Requests (Host to Peripheral)

This driver notifies to the application program when receiving the following class request.

For the class request processing, refer to chapter "USB Class Requests" in the document (Document number: R01AN2166) for *USB Basic Mini Host and Peripheral Driver (USB Mini Firmware) using Firmware Integration Technology Application Note*.

**Table 4-1 CDC class requests**

| Request             | Code | Description  |
|---------------------|------|--|
| SetLineCoding       | 0x20 | Makes communication line settings (communication speed, data length, parity bit, and stop bit length). |
| GetLineCoding       | 0x21 | Acquires the communication line setting state.   |
| SetControlLineState | 0x22 | Makes communication line control signal (RTS, DTR) settings.   |
| SendBreak           | 0x23 | Transmits a break signal.  |

For details concerning the Abstract Control Model requests, refer to Table 11, "Requests - Abstract Control Model" in "USB Communications Class Subclass Specification for PSTN Devices", Revision 1.2.



## 4.2.2 Data Format of Class Requests

The data format of the class requests supported by the class driver software is described below.

### 1. SetLineCoding

This is the class request the host transmits to perform the UART line setting.

The SetLineCoding data format is shown below.

**Table 4-2 SetLineCoding Format**

| bmRequestType | bRequest                  | wValue | wIndex | wLength | Data  |
|---------------|---------------------------|--------|--------|---------|---|
| 0x21          | SET_LINE_CODING<br>(0x20) | 0x00   | 0x00   | 0x07    | Line Coding Structure<br>See Table 4-3, Line<br>Coding Format |

**Table 4-3 Line Coding Format**

| Offset | Field       | Size | Value  | Description  |
|--------|-------------|------|--------|--|
| 0      | DwDTERate   | 4    | Number | Data terminal speed (bps)  |
| 4      | BcharFormat | 1    | Number | Stop bits 0 - 1 stop bit<br>1 - 1.5 stop bits<br>2 - 2 stop bits |
| 5      | BparityType | 1    | Number | Parity 0 - None<br>1 - Odd<br>2 - Even                           |
| 6      | BdataBits   | 1    | Number | Data bits (5, 6, 7, 8)   |

The following shows the setting that this S/W supports.

DwDTERate: 1200bps/2400bps/4800bps/9600bps/14400bps/19200bps/38400bps/57600bps/115200bps  
 BcharFormat: 1 Stop bit/2 Stop bit  
 BparityType: None/Odd/Even  
 BdataBits: 7bit/8bit

### 2. GetLineCoding

This is the class request the host transmits to request the UART line state.

The GetLineCoding data format is shown below.

**Table 4-4 SetLineCoding Format**

| bmRequestType | bRequest                  | wValue | wIndex | wLength | Data  |
|---------------|---------------------------|--------|--------|---------|---|
| 0xA1          | GET_LINE_CODING<br>(0x21) | 0x00   | 0x00   | 0x07    | Line Coding Structure<br>See Table 4-2,<br>SetLineCoding Format |



**Table 4-9 UART state bitmap format**

| Bits   | Field         | Description  | Supported |
|--------|---------------|--|-----------|
| D15~D7 |               | Reserved   | -         |
| D6     | b_over_run    | Overrun error detected                                     | Yes       |
| D5     | b_parity      | Parity error detected                                      | Yes       |
| D4     | b_framing     | Framing error detected                                     | Yes       |
| D3     | b_ring_signal | INCOMING signal (ring signal) detected                     | No        |
| D2     | b_break       | Break signal detected                                      | No        |
| D1     | btx_arrier    | Data Set Ready: Line connected and ready for communication | No        |
| D0     | brx_carrier   | Data Carrier Detect: Carrier detected on line              | No        |

### 4.3 PC Virtual COM-port Usage

The CDC device can be used as a virtual COM port when operating in Windows OS.

Use a PC running Windows OS, and connect an RSK board. After USB enumeration, the CDC class requests *GetLineCoding* and *SetControlLineState* are executed by the target, and the CDC device is registered in Windows Device Manager as a virtual COM device.

Registering the CDC device as a virtual COM-port in Windows Device Manager enables data communication with the CDC device via a terminal app such as “HyperTerminal” which comes standard with Windows OS. When changing settings of the serial port in the Windows terminal application, the UART setting is propagated to the firmware via the class request *SetLineCoding*.

Data input (or file transmission) from the terminal app window is transmitted to the RSK board using endpoint 2 (EP2); data from the RSK board side is transmitted to the PC using EP1.

When the last packet of data received is the maximum packet size, and the terminal determines that there is continuous data, the received data may not be displayed in the terminal. If the received data is smaller than the maximum packet size, the data received up to that point is displayed in the terminal.

The received data is outputted on the terminal when the data less than Maximum packet size is received.

## 5. API Functions

For API used in the application program, refer to chapter "**API Functions**" in the document (Document number: R01AN2166) for *USB Basic Mini Host and Peripheral Driver (USB Mini Firmware) using Firmware Integration Technology Application Note*.

## 6. Configuration (r\_usb\_pcdc\_mini\_config.h)

Please set the following according to your system.

Note:

Be sure to set *r\_usb\_basic\_mini\_config.h* file as well. For *r\_usb\_basic\_mini\_config.h* file, refer to chapter "**Configuration**" in the document (Document number: R01AN2166) for *USB Basic Mini Host and Peripheral Driver (USB Mini Firmware) using Firmware Integration Technology Application Note*.

### 1. Setting pipe to be used

Set the pipe number to use for data transfer.

#### (1). Bulk IN/OUT transfer

Set the pipe number (PIPE1 to PIPE5) to use for Bulk IN/OUT transfer. Do not set the same pipe number for the definitions of *USB\_CFG\_PCDC\_BULK\_IN* and *USB\_CFG\_PCDC\_BULK\_OUT*.

|         |                       |                                      |
|---------|-----------------------|--------------------------------------|
| #define | USB_CFG_PCDC_BULK_IN  | Pipe number (USB_PIPE1 to USB_PIPE5) |
| #define | USB_CFG_PCDC_BULK_OUT | Pipe number (USB_PIPE1 to USB_PIPE5) |

#### (2). Interrupt IN transfer

Set the pipe number (PIPE6 to PIPE9) to use for Interrupt IN transfer.

|         |                     |                                      |
|---------|---------------------|--------------------------------------|
| #define | USB_CFG_PCDC_INT_IN | Pipe number (USB_PIPE6 to USB_PIPE9) |
|---------|---------------------|--------------------------------------|


## 7. CDC Driver Installation

If USB Host is PC(Windows®), a CDC driver must be installed in the PC. The wizard shown in Figure 7-1 will appear on your screen and prompt the CDC driver installation when you connect RSK.

- (1). Select **Update Driver Software** from the device manager.
- (2). Select “**Browse my computer for driver software**”.

**Note:**


- (1). It is not necessary the following installation work for CDC driver when using Window® 10.
- (2). The catalog file with the digital signature is required when using Windows® 8.1. The customer need to create this catalog file.

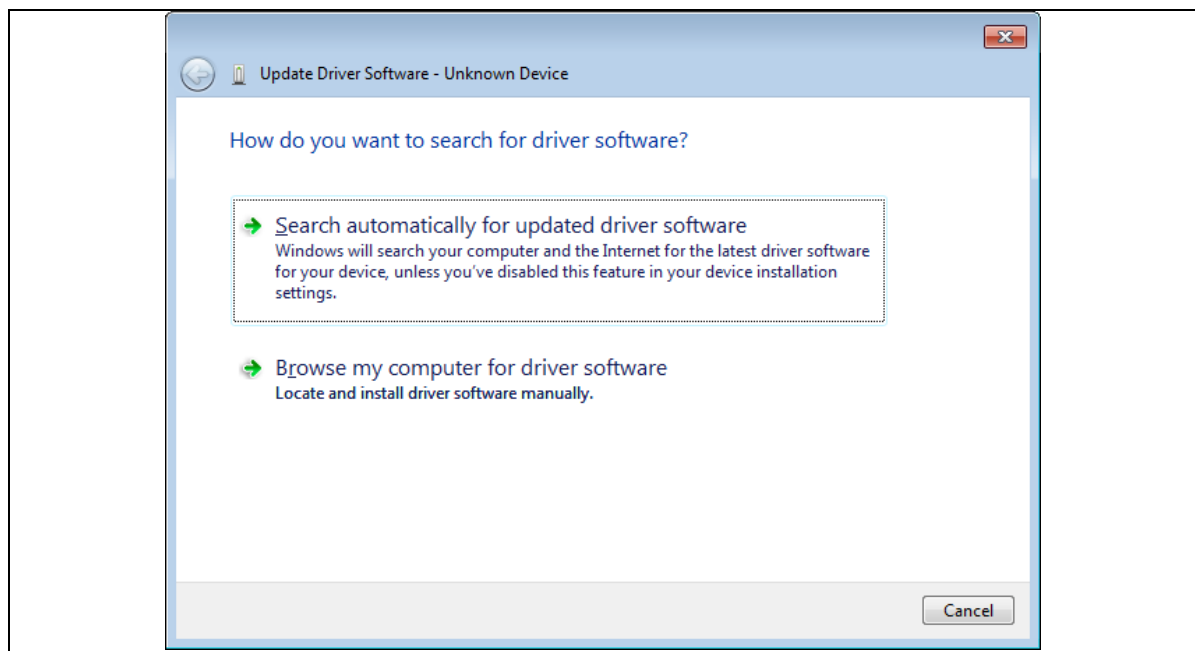

**Figure 7-1 New Hardware Search Wizard**

(3). Select **“Browse for driver software on your computer”**

Click **Browse**, specify the folder in which the *CDC\_Demo.inf* is stored, then click **“Next”**

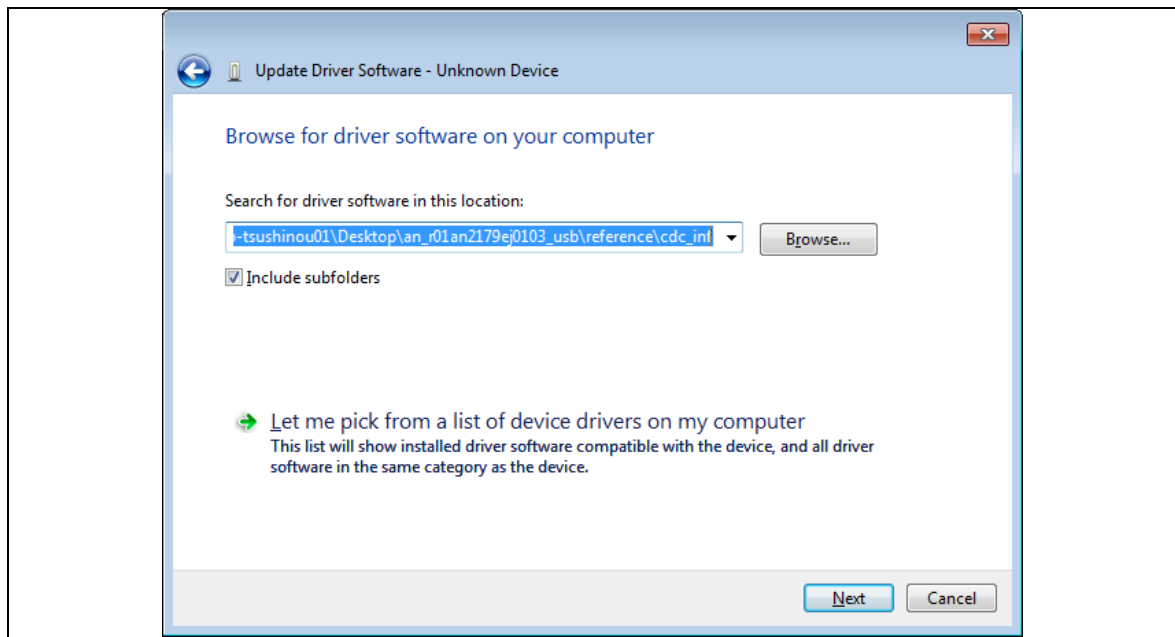


**Figure 7-2 Select Driver Location**

Note:

The *CDC\_Demo.inf* file is stored in "*r\_usb\_pcdc\_mini\utilities*" folder in the package.

(4). If the following installation confirmation screen appears, click **“Browse for driver software on your computer”**

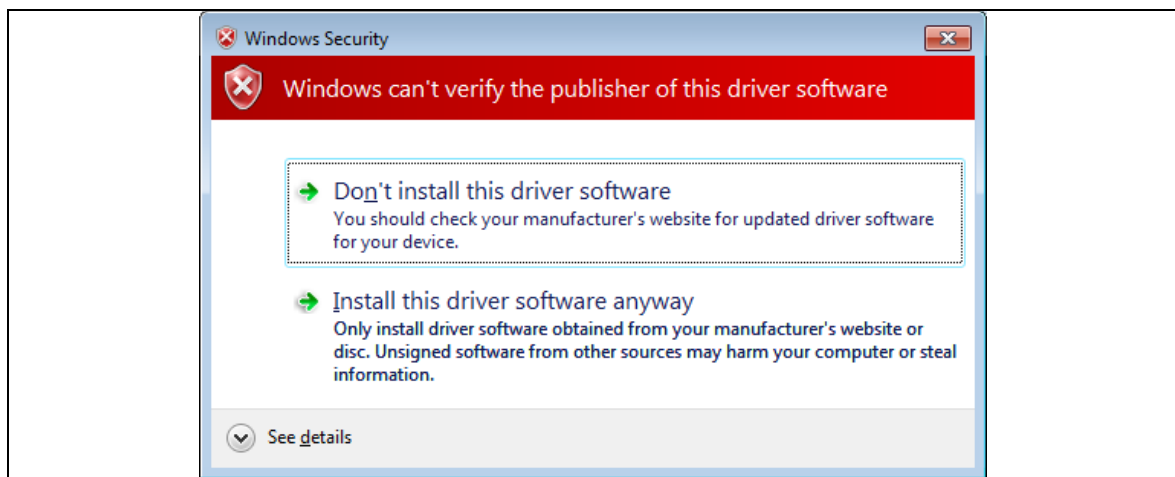

**Figure 7-3 Installation Confirmation Screen**

- (5). When the following window appears, the CDC driver has been successfully installed. Click “Close.”



**Figure 7-4 Installation Complete**



## 8. Creating an Application

Refer to the chapter “**Creating an Application Program**” in the document (Document number: R01AN2166) for *USB Basic Mini Host and Peripheral Driver (USB Mini Firmware) using Firmware Integration Technology Application Note*.

## Website and Support

Renesas Electronics Website

<http://www.renesas.com/>

Inquiries

<http://www.renesas.com/inquiry>

All trademarks and registered trademarks are the property of their respective owners.

## Revision Record

| Rev. | Date         | Description |  |
|------|--------------|-------------|--|
|      |              | Page        | Summary  |
| 1.00 | Dec 1, 2014  | —           | First edition issued   |
| 1.01 | Jun 1, 2015  | —           | RX231 is added in the target device.<br>The baud rate value which this driver supports is added.   |
| 1.02 | Dec 28, 2015 | —           | Checked the operation with Windows® 10.  |
| 1.10 | Nov 30, 2018 | —           | <ol style="list-style-type: none"> <li>1. Supporting Smart Configurator.</li> <li>2. The following chapters are added. <ol style="list-style-type: none"> <li>(1). 5. API Functions</li> <li>(2). 6. Configuration (r_usb_pcdc_mini_config.h)</li> <li>(3). 7. CDC Driver Installation</li> </ol> </li> <li>3. The following chapters are changed. <ol style="list-style-type: none"> <li>(1). 3. API Information</li> <li>(2). 8. Creating an Application</li> </ol> </li> <li>4. The following chapters are deleted.<br/> " How to Register Class Driver", "System Resources", "Task ID and Priority Setting", "USB Peripheral Communication Device Class Driver". </li> </ol> |
| 1.11 | May 31, 2019 | —           | Support GCC compiler and IAR compiler.   |
| 1.12 | Jun 30, 2019 | —           | RX23W is added in the target device.   |
|      |              |             |  |
|      |              |             |  |
|      |              |             |  |
|      |              |             |  |

## General Precautions in the Handling of Microprocessing Unit and Microcontroller Unit Products

The following usage notes are applicable to all Microprocessing unit and Microcontroller unit products from Renesas. For detailed usage notes on the products covered by this document, refer to the relevant sections of the document as well as any technical updates that have been issued for the products.

### 1. Handling of Unused Pins

Handle unused pins in accordance with the directions given under Handling of Unused Pins in the manual.

- The input pins of CMOS products are generally in the high-impedance state. In operation with an unused pin in the open-circuit state, extra electromagnetic noise is induced in the vicinity of LSI, an associated shoot-through current flows internally, and malfunctions occur due to the false recognition of the pin state as an input signal become possible. Unused pins should be handled as described under Handling of Unused Pins in the manual.

### 2. Processing at Power-on

The state of the product is undefined at the moment when power is supplied.

- The states of internal circuits in the LSI are indeterminate and the states of register settings and pins are undefined at the moment when power is supplied.  
In a finished product where the reset signal is applied to the external reset pin, the states of pins are not guaranteed from the moment when power is supplied until the reset process is completed.  
In a similar way, the states of pins in a product that is reset by an on-chip power-on reset function are not guaranteed from the moment when power is supplied until the power reaches the level at which resetting has been specified.

### 3. Prohibition of Access to Reserved Addresses

Access to reserved addresses is prohibited.

- The reserved addresses are provided for the possible future expansion of functions. Do not access these addresses; the correct operation of LSI is not guaranteed if they are accessed.

### 4. Clock Signals

After applying a reset, only release the reset line after the operating clock signal has become stable. When switching the clock signal during program execution, wait until the target clock signal has stabilized.

- When the clock signal is generated with an external resonator (or from an external oscillator) during a reset, ensure that the reset line is only released after full stabilization of the clock signal. Moreover, when switching to a clock signal produced with an external resonator (or by an external oscillator) while program execution is in progress, wait until the target clock signal is stable.

### 5. Differences between Products

Before changing from one product to another, i.e. to a product with a different part number, confirm that the change will not lead to problems.

- The characteristics of Microprocessing unit or Microcontroller unit products in the same group but having a different part number may differ in terms of the internal memory capacity, layout pattern, and other factors, which can affect the ranges of electrical characteristics, such as characteristic values, operating margins, immunity to noise, and amount of radiated noise. When changing to a product with a different part number, implement a system-evaluation test for the given product.

## Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
  2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
  3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
  4. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
  5. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.

"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.

"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.

Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.
  6. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
  7. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
  8. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
  9. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
  10. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
  11. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
  12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.
- (Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.
- (Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.4.0-1 November 2017)



### SALES OFFICES

### Renesas Electronics Corporation

<http://www.renesas.com>

Refer to "<http://www.renesas.com/>" for the latest and detailed information.

**Renesas Electronics Corporation**  
TOYOSU FORESIA, 3-2-24 Toyosu, Koto-ku, Tokyo 135-0061, Japan

**Renesas Electronics America Inc.**  
1001 Murphy Ranch Road, Milpitas, CA 95035, U.S.A.  
Tel: +1-408-432-8888, Fax: +1-408-434-5351

**Renesas Electronics Canada Limited**  
9251 Yonge Street, Suite 8309 Richmond Hill, Ontario Canada L4C 9T3  
Tel: +1-905-237-2004

**Renesas Electronics Europe GmbH**  
Arcadiastrasse 10, 40472 Düsseldorf, Germany  
Tel: +49-211-6503-0, Fax: +49-211-6503-1327

**Renesas Electronics (China) Co., Ltd.**  
Room 101-T01, Floor 1, Building 7, Yard No. 7, 8th Street, Shangdi, Haidian District, Beijing 100085, China  
Tel: +86-10-8235-1155, Fax: +86-10-8235-7679

**Renesas Electronics (Shanghai) Co., Ltd.**  
Unit 301, Tower A, Central Towers, 555 Langao Road, Putuo District, Shanghai 200333, China  
Tel: +86-21-2226-0888, Fax: +86-21-2226-0999

**Renesas Electronics Hong Kong Limited**  
Unit 1601-1611, 16/F., Tower 2, Grand Century Place, 193 Prince Edward Road West, Mongkok, Kowloon, Hong Kong  
Tel: +852-2265-6688, Fax: +852 2886-9022

**Renesas Electronics Taiwan Co., Ltd.**  
13F, No. 363, Fu Shing North Road, Taipei 10543, Taiwan  
Tel: +886-2-8175-9600, Fax: +886 2-8175-9670

**Renesas Electronics Singapore Pte. Ltd.**  
80 Bendemeer Road, Unit #06-02 Hyflux Innovation Centre, Singapore 339949  
Tel: +65-6213-0200, Fax: +65-6213-0300

**Renesas Electronics Malaysia Sdn.Bhd.**  
Unit No 3A-1 Level 3A Tower 8 UOA Business Park, No 1 Jalan Pengaturcara U1/51A, Seksyen U1, 40150 Shah Alam, Selangor, Malaysia  
Tel: +60-3-5022-1288, Fax: +60-3-5022-1290

**Renesas Electronics India Pvt. Ltd.**  
No.777C, 100 Feet Road, HAL 2nd Stage, Indiranagar, Bangalore 560 038, India  
Tel: +91-80-67208700

**Renesas Electronics Korea Co., Ltd.**  
17F, KAMCO Yangjae Tower, 262, Gangnam-daero, Gangnam-gu, Seoul, 06265 Korea  
Tel: +82-2-558-3737, Fax: +82-2-558-5338