

RX Family

Memory Access Driver Interface Module Using Firmware Integration Technology

Summary

This application note describes the memory access driver interface module using Firmware Integration Technology (FIT). It is referred to below as the MEMDRV FIT module.

Note that the MEMDRV FIT module functions as an adapter between an upper layer consisting of serial NOR or NAND flash command control middleware and a lower layer consisting of an RSPI, QSPI, or SCI (SPI mode) device driver. The MEMDRV FIT module does not include NOR/NAND flash command control middleware or a RSPI/QSPI device driver. These must be obtained separately.

Target Devices

Serial NOR flash memory

MX25/66L family serial NOR flash memory from Macronix International Co., Ltd.

MX25R family serial NOR flash memory from Macronix International Co., Ltd.

Serial NAND flash memory

TC58 family serial interface NAND from Toshiba Corporation

Microcontrollers on which operation has been confirmed:

RX111, RX110, RX113 and RX130 Group (RSPI)

RX230, RX231, RX23T and RX24T Group (RSPI)

RX64M and RX71M Group (RSPI, QSPI, SCI)

RX72T Group (RSPI, SCI)

When using this application note with other Renesas MCUs, careful evaluation is recommended after making modifications to comply with the alternate MCU.

Target Compilers

- Renesas Electronics C/C++ Compiler Package for RX Family
- GCC for Renesas RX
- IAR C/C++ Compiler for Renesas RX

For details of the confirmed operation contents of each compiler, refer to “5.1 Confirmed Operation Environment”.

Related Documents

- Firmware Integration Technology User's Manual (R01AN1833)
- RX Family Board Support Package Module Using Firmware Integration Technology (R01AN1685)
- RX Family RSPI Module Using Firmware Integration Technology (R01AN1827)
- RX Family QSPI Clock Synchronous Single Master Control Module Using Firmware Integration Technology (R01AN1940)
- RX Family SCI Multi-Mode Module Using Firmware Integration Technology (R01AN1815)
- RX Family DMA Controller DMACA Control Module Firmware Integration Technology (R01AN2063)
- RX Family DTC Module Using Firmware Integration Technology (R01AN1819)
- RX Family CMT Module Using Firmware Integration Technology (R01AN1856)
- RX Family LONGQ Module Using Firmware Integration Technology (R01AN1889)

Contents

1. Overview	4
1.1 MEMDRV FIT Module	4
1.2 Overview of MEMDRV FIT Module	4
1.3 Overview of API Functions	5
1.4 Processing Example	6
1.4.1 Software Configuration (NAND)	6
1.4.2 API Calling Procedures	7
2. API Information	9
2.1 Hardware Requirements	9
2.2 Software Requirements	9
2.3 Supported Toolchain	9
2.4 Interrupt Vector	9
2.5 Header Files	9
2.6 Integer Types	9
2.7 Compile Settings	10
2.8 Memory Usage	12
2.9 Arguments	13
2.10 Return Values	14
2.11 Callback Function	14
2.12 Adding the FIT Module to Your Project	14
2.13 “for”, “while”, and “do while” Expressions	15
3. API Functions	16
3.1 R_MEMDRV_Open ()	16
3.2 R_MEMDRV_Close ()	17
3.3 R_MEMDRV_Enable ()	18
3.4 R_MEMDRV_Disable ()	19
3.5 R_MEMDRV_EnableTxData ()	20
3.6 R_MEMDRV_DisableTxData ()	21
3.7 R_MEMDRV_EnableRxData ()	22
3.8 R_MEMDRV_DisableRxData ()	23
3.9 R_MEMDRV_Tx ()	24
3.10 R_MEMDRV_TxData ()	25
3.11 R_MEMDRV_Rx ()	26
3.12 R_MEMDRV_RxData ()	27
3.13 R_MEMDRV_ClearDMACFlagTx ()	28
3.14 R_MEMDRV_ClearDMACFlagRx ()	29
3.15 R_MEMDRV_1msInterval ()	30
3.16 R_MEMDRV_SetLogHdlAddress ()	31
3.17 R_MEMDRV_Log ()	32
3.18 R_MEMDRV_GetVersion ()	33
4. Pin Settings	34
5. Appendix	35
5.1 Confirmed Operation Environment	35

5.2 Troubleshooting	36
6. Reference Documents	37

1. Overview

1.1 MEMDRV FIT Module

The MEMDRV FIT module can be incorporated into your project as an API. For instructions for adding the MEMDRV FIT module, refer to 2.12, Adding the FIT Module to Your Project.

1.2 Overview of MEMDRV FIT Module

The MEMDRV FIT module uses the Renesas Electronics MCU to control Serial NAND Flash/NOR Flash/EEPROM memory. Table 1.1 gives an overview.

Table 1.1 Overview

Item		Contents
Master device		MCU manufactured by Renesas Electronics Corporation
Slave device		Serial NAND Flash memory Serial NOR Flash memory EEPROM Flash memory
Communication method		Serial communication (clock synchronous type)
The polarity and phase of the communication clock		SPI Mode 3(CPOL=1,CPHA=1)
Number of control devices		Max 2
Endian		Corresponds to little endian / big endian
Firmware Integration Technology(FIT)		Standard
FIT module to be used in combination	Basic setting	BSP FIT Module
	Serial communication	RSPI FIT Module(Single-SPI)(Note2)
		QSPI SMstr FIT Module(Single/Dual/Quad-SPI) (Note3)
		SCI FIT Module(SPI mode)(Note4)
	I / O setting	GPIO FIT Module
	Port setting	MPC FIT Module
	Data transfer (Note 1)	DMACA FIT Module
		DTC FIT Module
	Timer (Note 1)	CMT FIT Module
	Data management	LONGQ FIT Module

Note 1: Only when using DMAC transfer or DTC transfer

Note 2: RX Family RSPI Module Using Firmware Integration Technology (R01AN1827)

Note 3: RX Family QSPI Clock Synchronous Single Master Control Module Firmware Integration Technology (R01AN 1940)

Note 4: RX Family SCI Multi-Mode Module Using Firmware Integration Technology (R01AN1815)

1.3 Overview of API Functions

Table 1.2 lists the API functions contained in the MEMDRV FIT module.

Table 1.2 API Functions

Function	Description
R_MEMDRV_Open()	Memory driver open processing
R_MEMDRV_Close()	Memory driver close processing
R_MEMDRV_Enable ()	Memory driver enable processing
R_MEMDRV_Disable ()	Memory driver disable processing
R_MEMDRV_EnableTxData ()	Data transmit enable processing
R_MEMDRV_DisableTxData ()	Data transmit disable processing
R_MEMDRV_EnableRxData ()	Data receive enable processing
R_MEMDRV_DisableRxData ()	Data receive disable processing
R_MEMDRV_Tx()	Command transmit processing
R_MEMDRV_TxData()	Data transmit processing
R_MEMDRV_Rx()	State or ID receive processing
R_MEMDRV_RxData()	Data receive processing
R_MEMDRV_ClearDMACFlagTx()	DMAC/DTC transmit-related interrupt flag clear
R_MEMDRV_ClearDMACFlagRx()	DMAC/DTC receive-related interrupt flag clear
R_MEMDRV_1msInterval()	Interval timer count processing
R_MEMDRV_SetLogHdlAddress()	LONGQ FIT module handler address setting processing
R_MEMDRV_Log()	Error log acquisition processing using LONGQ FIT module
R_MEMDRV_GetVersion()	Memory driver version acquisition

1.4 Processing Example

1.4.1 Software Configuration (NAND)

Figure 1.1 shows the software configuration. Table 1.3 shows an overview of the various layers.

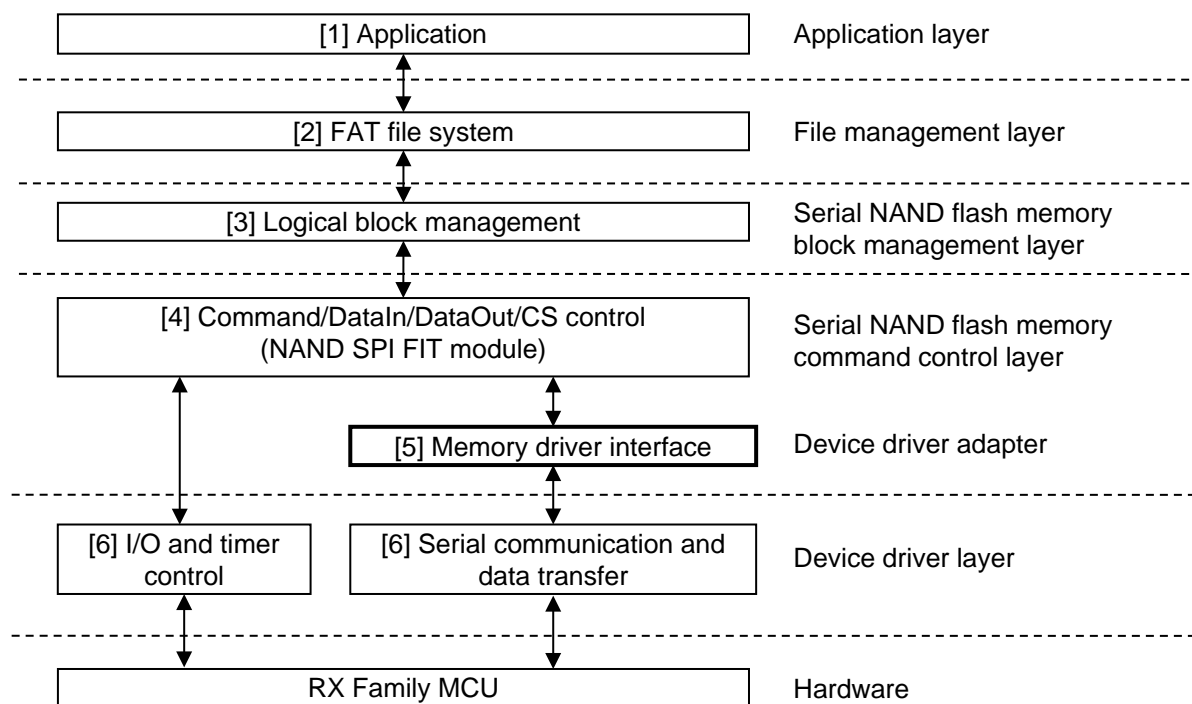


Figure 1.1 Software Configuration

Table 1.3 Overview of Software Blocks

Block Name	Overview
[1] Application	User application
[2] FAT file system	FAT file system
[3] Logical block management	Serial NAND flash memory logical block management
[4] Command/DataIn/DataOut/CS control	NAND SPI FIT module Command control block for accessing serial NAND flash memory
[5] Memory driver interface	Device driver adapter
[6] Peripheral IP control (serial communication, ports, etc.)	Device driver layer for executing the control functions listed below. FIT modules can be used to perform these control functions. <ul style="list-style-type: none"> Serial communication (clock synchronous single-master control) I/O control Pin settings Data transfer Timers

1.4.2 API Calling Procedures

Figure 1.2 shows the API calling procedure for CPU transmission and reception.

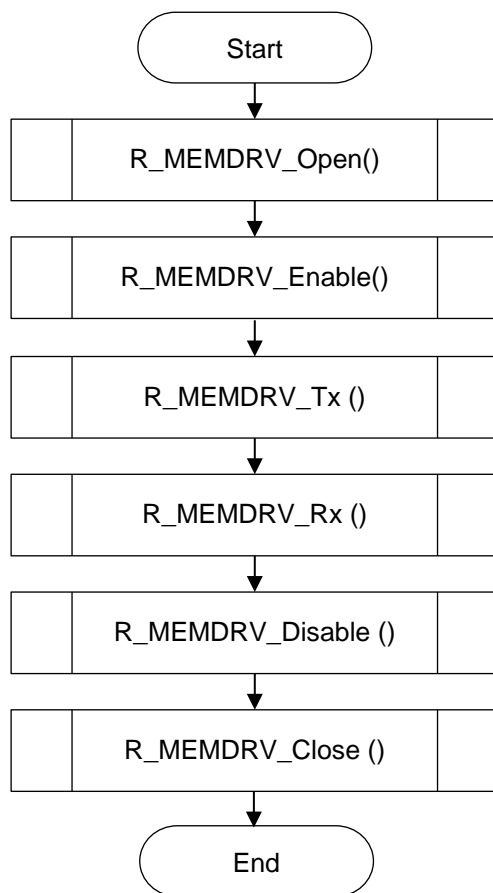


Figure 1.2 API Calling Procedure for CPU Transmission and Reception

Figure 1.3 shows the API calling procedure for using the DMAC or DTC.

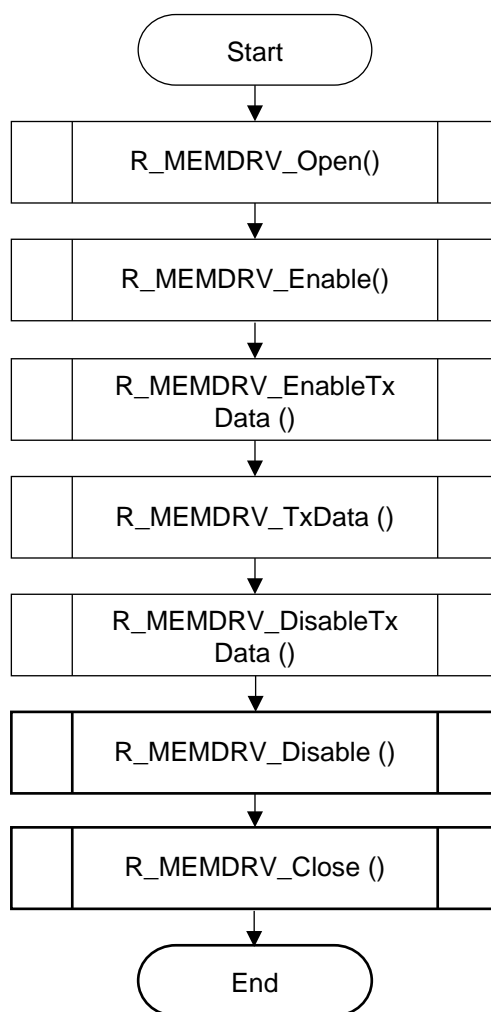


Figure 1.3 API Calling Procedure for Using DMAC/DTC

2. API Information

The operation of the FIT module has been confirmed under the conditions listed below.

2.1 Hardware Requirements

The MCU used must support the following functionality.

- Serial communication (RSPI, QSPI, or simple SPI mode of SCI)
- I/O ports
- DMAC or DTC data transfer (only when using the DMAC or DTC)
- Timers (only when using the DMAC or DTC)

2.2 Software Requirements

The driver is dependent on the following FIT modules.

- r_bsp Rev.5.00 or higher
- r_rspi_rx (when using the RSPI FIT module)
- r_qspi_smstr_rx (when using the QSPI SMstr FIT module for clock synchronous single-master control)
- r_sci_rx (only for CPU transfer when using the SCI FIT module)
- r_dtc_rx (only when using the DTC FIT module for data transfer)
- r_dmaca_rx (only when using the DMACA FIT module for data transfer)
- When substituting another timer or a software timer.
- r_longq (only when using the LONGQ FIT module with error log acquisition functionality enabled)

2.3 Supported Toolchain

The operation of the FIT module has been confirmed with the toolchain listed in 5.1, Confirmed Operation Environment.

2.4 Interrupt Vector

Interrupts are enabled during DMAC or DTC transfer operation. For details on interrupts, refer to the application note of the device driver used to control the MCU's serial communication function (clock synchronous single-master).

2.5 Header Files

All the API calls and interface definitions used are listed in r_memdrv_rx_if.h.

2.6 Integer Types

This project uses ANSI C99. These types are defined in stdint.h.

2.7 Compile Settings

The configuration option settings for the control software are specified in `r_memdrv_rx_config.h`.
The option names and setting values are described below.

Table 2.1 Configuration Options (config.h)

Configuration options in <code>r_memdrv_rx_config.h</code>	
MEMDRV_CFG_DEVx_INCLUDED The default value for device 0 is "1". The default value for device 1 is "0". The "x" in DEVx represents the device number (x = 0 or 1).	This definition is related to device x. (1: enabled, 0: disabled) This option must be set to "enabled" for at least one device.
MEMDRV_CFG_PARAM_CHECKING_ENABLE The default value is "BSP_CFG_PARAM_CHECKING_ENABLE".	Selects whether or not parameter check processing is included in the code. Parameter check processing is omitted from the code if "0" is selected, resulting in a smaller code size. A setting of "0" means that parameter check processing is omitted from the code. A setting of "1" means that parameter check processing is included in the code.
MEMDRV_CFG_DEVx_MODE_TRNS The DEVx default value is as follows: MEMDRV_TRNS_CPU	Defines the method used to transfer data to the MCU's on-chip RAM. Choose one of the following settings: MEMDRV_TRNS_CPU: CPU transfer (Software transfer) MEMDRV_TRNS_DMACH: DMAC transfer MEMDRV_TRNS_DTC: DTC transfer
MEMDRV_CFG_DEVx_MODE_DRV The DEVx default value is as follows: MEMDRV_DRV_RX_FIT_RSPI	Defines the device driver used. Choose one of the following settings: MEMDRV_DRV_RX_FIT_RSPI: RSPI clock synchronous control FIT module MEMDRV_DRV_RX_FIT_QSPI_SMSTR: QSPI clock synchronous single-master control FIT module MEMDRV_DRV_RX_FIT_SCI_SPI: SCI clock synchronous control FIT module(working in SPI mode)
MEMDRV_CFG_DEVx_MODE_DRV_CH The DEV0 default value is as follows: MEMDRV_DRV_CH0	Defines the channel number of the device driver used. Choose one of the following (CH0 to CH15): MEMDRV_DRV_CH0 MEMDRV_DRV_CH1 ... MEMDRV_DRV_CH15
MEMDRV_CFG_DEVx_BR The default value is "(uint32_t)(1000000)".	Sets the bit rate used when issuing commands.
MEMDRV_CFG_DEVx_BR_WRITE_DATA The default value is "(uint32_t)(1000000)".	Sets the bit rate used when outputting data.
MEMDRV_CFG_DEVx_BR_READ_DATA The default value is "(uint32_t)(1000000)".	Sets the bit rate used when inputting data.
MEMDRV_CFG_DEVx_DMACH_NO_Tx The DEV0 default value is "0".	If the DAMC FIT module will be used, specify the DMAC channel number. This DMAC channel is used when transferring data from the MCU's

Configuration options in r_memdrv_rx_config.h	
The DEV1 default value is "2".	on-chip RAM to the data buffer of the serial communication function.
MEMDRV_CFG_DEVx_DMAC_CH_NO_Rx The DEV0 default value is "1". The DEV1 default value is "3".	If the DAMC FIT module will be used, specify the DMAC channel number. This DMAC channel is used when transferring data from the data buffer of the serial communication function to the MCU's on-chip RAM.
MEMDRV_CFG_DEVx_DMAC_INT_PRL_Tx The DEVx default value is "10".	If the DAMC FIT module will be used, specify the DMAC interrupt priority level. This DMAC channel is used when transferring data from the MCU's on-chip RAM to the data buffer of the serial communication function.
MEMDRV_CFG_DEVx_DMAC_INT_PRL_Rx The DEVx default value is "10".	If the DAMC FIT module will be used, specify the DMAC interrupt priority level. This DMAC channel is used when transferring data from the data buffer of the serial communication function to the MCU's on-chip RAM.
MEMDRV_CFG_LONGQ_ENABLE The default value is "0" (disabled).	When using the FIT module's BSP environment, you can specify whether or not to use debug error log acquisition processing (1: enabled, 0: disabled). When disabled, the processing is omitted from the code. When enabled, the processing is included in the code. The separate LONGQ FIT module is required in order to use this option. Also, enable #define xxx_LONGQ_ENABLE in the device driver.

2.8 Memory Usage

Table 2.2 lists the required memory sizes for the MEMDRV FIT module.

The ROM (code and constants) and RAM (global data) usage are determined by the configuration options described in 2.7, Compile Settings. The values listed apply when using the C compiler referenced in 2.3, Supported Toolchain, with the compile options set to their default values. The default compile options are optimization level: 2, optimization type: size priority, data endian order: little-endian. The memory usage will differ depending on the C compiler version and the compile options.

The values in the table below are confirmed under the following conditions.

Module Revision: r_memdrv_rx rev1.01

Compiler Version: Renesas Electronics C/C++ Compiler Package for RX Family V3.01.00

(The option of “-lang = c99” is added to the default settings of the integrated development environment.)

GCC for Renesas RX 4.8.4.201803

(The option of “-std=gnu99” is added to the default settings of the integrated development environment.)

IAR C/C++ Compiler for Renesas RX version 4.10.1

(The default settings of the integrated development environment.)

Configuration Options: Default settings

Table 2.2 Memory Sizes

ROM, RAM and Stack Memory Usage								
Device	Category		Memory Used					
			Renesas Compiler		GCC		IAR Compiler	
			With Parameter Checking	Without Parameter Checking	With Parameter Checking	Without Parameter Checking	With Parameter Checking	Without Parameter Checking
RX130	ROM	1 channel used	2067 bytes	1892 bytes	4188 bytes	3940 bytes	2604 bytes	2392 bytes
		2 channels used	2067 bytes	1892 bytes	4188 bytes	3940 bytes	2604 bytes	2392 bytes
	RAM	1 channel used	25 bytes		28 bytes		16 bytes	
		2 channels used	25 bytes		28 bytes		16 bytes	
	Maximum usable stack size		16 bytes		-		212 bytes	
RX231	ROM	1 channel used	2067 bytes	1892 bytes	4188 bytes	3932 bytes	2606 bytes	2394 bytes
		2 channels used	2067 bytes	1892 bytes	4188 bytes	3932 bytes	2606 bytes	2394 bytes
	RAM	1 channel used	25 bytes		28 bytes		16 bytes	
		2 channels used	25 bytes		28 bytes		16 bytes	
	Maximum usable stack size		16 bytes		-		212 bytes	

RX64M	ROM	1 channel used	2067 bytes	1892 bytes	4188 bytes	3932 bytes	2606 bytes	2394 bytes
		2 channels used	2067 bytes	1892 bytes	4188 bytes	3932 bytes	2606 bytes	2394 bytes
	RAM	1 channel used	25 bytes		28 bytes		8 bytes	
		2 channels used	25 bytes		28 bytes		8 bytes	
	Maximum usable stack size		16 bytes		-		232 bytes	
RX71M	ROM	1 channel used	2077 bytes	1902 bytes	4188 bytes	4012 bytes	2606 bytes	2394 bytes
		2 channels used	2077 bytes	1902 bytes	4188 bytes	4012 bytes	2606 bytes	2394 bytes
	RAM	1 channel used	37 bytes		40 bytes		30 bytes	
		2 channels used	37 bytes		40 bytes		30 bytes	
	Maximum usable stack size		16 bytes		-		232 bytes	

2.9 Arguments

The structure for the arguments of the API functions is shown. This structure is listed in `r_memdrv_rx_if.h`, along with the prototype declarations of the API functions.

2.10 Return Values

The different values API functions can return.

Return Type: memdrv_err_t

Table 2.3 Return values

Values:	Cause
MEMDRV_SUCCESS	Successful operation
MEMDRV_ERR_PARAM	Parameter error
MEMDRV_ERR_HARD	Hardware error
MEMDRV_ERR_OTHER	Other error

2.11 Callback Function

The MEMDRV FIT module does not use callback functions.

2.12 Adding the FIT Module to Your Project

This module must be added to each project in which it is used. Renesas recommends using “Smart Configurator” described in (1) or (3). However, “Smart Configurator” only supports some RX devices. Please use the methods of (2) or (4) for unsupported RX devices.

- (1) Adding the FIT module to your project using “Smart Configurator” in e² studio

By using the “Smart Configurator” in e² studio, the FIT module is automatically added to your project. Refer to “Renesas e² studio Smart Configurator User Guide (R20AN0451)” for details.

- (2) Adding the FIT module to your project using “FIT Configurator” in e² studio

By using the “FIT Configurator” in e² studio, the FIT module is automatically added to your project. Refer to “Adding Firmware Integration Technology Modules to Projects (R01AN1723)” for details.

- (3) Adding the FIT module to your project using “Smart Configurator” on CS+

By using the “Smart Configurator Standalone version” in CS+, the FIT module is automatically added to your project. Refer to “Renesas e² studio Smart Configurator User Guide (R20AN0451)” for details.

- (4) Adding the FIT module to your project in CS+

In CS+, please manually add the FIT module to your project. Refer to “Adding Firmware Integration Technology Modules to CS+ Projects (R01AN1826)” for details.

2.13 “for”, “while”, and “do while” Expressions

This module uses for, while, and do while expressions (loop processing) for standby states such as waiting for register values to be updated. These instances of loop processing are indicated by the keyword WAIT_LOOP in the comments. Therefore, if you wish to incorporate failsafe processing into the instances of loop processing, you can locate them in the code by searching for the keyword WAIT_LOOP.

An example code listing is shown below.

```
Example use of while expression:
/* WAIT_LOOP */
while(0 == SYSTEM.OSCOVFSR.BIT.PLOVF)
{
    /* The delay period needed is to make sure that the PLL has stabilized. */
}

Example use of for expression:
/* Initialize reference counters to 0. */
/* WAIT_LOOP */
for (i = 0; i < BSP_REG_PROTECT_TOTAL_ITEMS; i++)
{
    g_protect_counters[i] = 0;
}

Example use of do while expression:
/* Reset completion waiting */
do
{
    reg = phy_read(ether_channel, PHY_REG_CONTROL);
    count++;
} while ((reg & PHY_CONTROL_RESET) && (count < ETHER_CFG_PHY_DELAY_RESET)); /* WAIT_LOOP */
```

3. API Functions

3.1 R_MEMDRV_Open ()

This function opens the memory driver. This function must be run before calling other API functions.

Format

```
memdrv_err_t R_MEMDRV_Open (  
    uint8_t      devno,  
    st_memdrv_info_t  *p_memdrv_info  
)
```

Parameters

uint8_t devno
Device number
st_memdrv_info_t *p_memdrv_info
Memory driver information structure
uint32_t cnt;
Data length
uint8_t *p_data;
Pointer to data storage location
uint8_t io_mode;
QSPI transfer mode (SINGLE/DUAL/QUAD)

Return Values

MEMDRV_SUCCESS	/* Normal end */
MEMDRV_ERR_PARAM	/*parameter error*/
MEMDRV_ERR_OTHER	/* Other error */

Properties

Prototype declarations are contained in r_memdrv_rx_if.h.

Description

Initializes the FIT module used for SPI/QSPI/SCI communication and data transfer (only when DTC/DMAC is selected).

Reentrant

Reentry from another device is allowed.

Example

```
memdrv_err_t ret_drv = MEMDRV_SUCCESS;  
st_memdrv_info_t memdrv_info;  
  
memdrv_info.cnt = 0;  
memdrv_info.p_data = NULL;  
memdrv_info.io_mode = MEMDRV_MODE_SINGLE;  
  
ret_drv = R_MEMDRV_Open(devno, &memdrv_info);
```

Special Notes

None

3.2 R_MEMDRV_Close ()

This function closes the memory driver.

Format

```
memdrv_err_t R_MEMDRV_Close (  
    uint8_t      devno,  
    st_memdrv_info_t *p_memdrv_info  
)
```

Parameters

uint8_t devno
Device number

st_memdrv_info_t *p_memdrv_info
Memory driver information structure

uint32_t cnt;
Data length

uint8_t *p_data;
Pointer to data storage location

uint8_t io_mode;
QSPI transfer mode (SINGLE/DUAL/QUAD)

Return Values

MEMDRV_SUCCESS	<i>/* Normal end */</i>
MEMDRV_ERR_PARAM	<i>/*parameter error*/</i>
MEMDRV_ERR_OTHER	<i>/* Other error */</i>

Properties

Prototype declarations are contained in r_memdrv_rx_if.h.

Description

Closes the FIT module used for SPI/QSPI/SCI communication and data transfer (only when DTC/DMAC is selected).

Reentrant

Reentry from another device is allowed.

Example

```
memdrv_err_t ret_drv = MEMDRV_SUCCESS;  
st_memdrv_info_t memdrv_info;  
  
memdrv_info.cnt = 0;  
memdrv_info.p_data = NULL;  
memdrv_info.io_mode = MEMDRV_MODE_SINGLE;  
  
ret_drv = R_MEMDRV_Close(devno,&memdrv_info);
```

Special Notes

None

3.3 R_MEMDRV_Enable ()

This function enables the memory driver.

Format

```
memdrv_err_t R_MEMDRV_Enable (  
    uint8_t      devno,  
    st_memdrv_info_t *p_memdrv_info  
)
```

Parameters

uint8_t devno
Device number
st_memdrv_info_t *p_memdrv_info
Memory driver information structure
uint32_t cnt;
Data length
uint8_t *p_data;
Pointer to data storage location
uint8_t io_mode;
QSPI transfer mode (SINGLE/DUAL/QUAD)

Return Values

MEMDRV_SUCCESS	<i>/* Normal end */</i>
MEMDRV_ERR_PARAM	<i>/*parameter error*/</i>
MEMDRV_ERR_OTHER	<i>/* Other error */</i>

Properties

Prototype declarations are contained in r_memdrv_rx_if.h.

Description

Processing to enable the memory driver.

Reentrant

Reentry from another device is allowed.

Example

```
memdrv_err_t ret_drv = MEMDRV_SUCCESS;  
st_memdrv_info_t memdrv_info;  
  
memdrv_info.cnt = 0;  
memdrv_info.p_data = NULL;  
memdrv_info.io_mode = MEMDRV_MODE_SINGLE;  
  
ret_drv = R_MEMDRV_Enable(devno,&memdrv_info);
```

Special Notes

None

3.4 R_MEMDRV_Disable ()

This function disables the memory driver.

Format

```
memdrv_err_t R_MEMDRV_Disable (
    uint8_t          devno,
    st_memdrv_info_t *p_memdrv_info
)
```

Parameters

```
uint8_t      devno;
    Device number
st_memdrv_info_t  *p_memdrv_info;
    Memory driver information structure
uint32_t      cnt;
    Data length
uint8_t      *p_data;
    Pointer to data storage location
uint8_t      io_mode;
    QSPI transfer mode (SINGLE/DUAL/QUAD)
```

Return Values

```
MEMDRV_SUCCESS          /* Normal end */
MEMDRV_ERR_PARAM        /*parameter error*/
```

Properties

Prototype declarations are contained in `r_memdrv_rx_if.h`.

Description

Disables the memory driver communication settings.

Reentrant

Reentry from another device is allowed.

Example

```
memdrv_err_t ret_drv = MEMDRV_SUCCESS;
st_memdrv_info_t memdrv_info;

memdrv_info.cnt = 0;
memdrv_info.p_data = NULL;
memdrv_info.io_mode = MEMDRV_MODE_SINGLE;

ret_drv = R_MEMDRV_Disable(devno,&memdrv_info);
```

Special Notes

None

3.5 R_MEMDRV_EnableTxData ()

This function enables data transmission.

Format

```
memdrv_err_t R_MEMDRV_EnableTxData (  
    uint8_t      devno,  
    st_memdrv_info_t  *p_memdrv_info  
)
```

Parameters

uint8_t devno
Device number
st_memdrv_info_t *p_memdrv_info
Memory driver information structure
uint32_t cnt;
Data length
uint8_t *p_data;
Pointer to data storage location
uint8_t io_mode;
QSPI transfer mode (SINGLE/DUAL/QUAD)

Return Values

MEMDRV_SUCCESS	<i>/* Normal end */</i>
MEMDRV_ERR_PARAM	<i>/* Parameter error */</i>
MEMDRV_ERR_OTHER	<i>/* Other error */</i>

Properties

Prototype declarations are contained in r_memdrv_rx_if.h.

Description

Enables the DMAC/DTC FIT module used for data transmission.

Reentrant

Reentry from another device is allowed.

Example

```
memdrv_err_t ret_drv = MEMDRV_SUCCESS;  
st_memdrv_info_t memdrv_info;  
  
memdrv_info.cnt = 0;  
memdrv_info.p_data = NULL;  
memdrv_info.io_mode = MEMDRV_MODE_SINGLE;  
  
ret_drv = R_MEMDRV_EnableTxData(devno,&memdrv_info);
```

Special Notes

None

3.6 R_MEMDRV_DisableTxData ()

This function disables data transmission by the memory driver.

Format

```
memdrv_err_t R_MEMDRV_DisableTxData (  
    uint8_t      devno,  
    st_memdrv_info_t  *p_memdrv_info  
)
```

Parameters

uint8_t devno
Device number
st_memdrv_info_t *p_memdrv_info
Memory driver information structure
uint32_t cnt;
Data length
uint8_t *p_data;
Pointer to data storage location
uint8_t io_mode;
QSPI transfer mode (SINGLE/DUAL/QUAD)

Return Values

MEMDRV_SUCCESS	<i>/* Normal end */</i>
MEMDRV_ERR_PARAM	<i>/* Parameter error */</i>
MEMDRV_ERR_OTHER	<i>/* Other error */</i>

Properties

Prototype declarations are contained in r_memdrv_rx_if.h.

Description

Disables the DMAC/DTC FIT module settings used for data transmission.

Reentrant

Reentry from another device is allowed.

Example

```
memdrv_err_t ret_drv = MEMDRV_SUCCESS;  
st_memdrv_info_t memdrv_info;  
  
memdrv_info.cnt = 0;  
memdrv_info.p_data = NULL;  
memdrv_info.io_mode = MEMDRV_MODE_SINGLE;  
  
ret_drv = R_MEMDRV_DisableTxData(devno, &memdrv_info);
```

Special Notes

None

3.7 R_MEMDRV_EnableRxData ()

This function enables data reception.

Format

```
memdrv_err_t R_MEMDRV_EnableRxData (  
    uint8_t      devno,  
    st_memdrv_info_t *p_memdrv_info  
)
```

Parameters

uint8_t devno
Device number
st_memdrv_info_t *p_memdrv_info
Memory driver information structure
uint32_t cnt;
Data length
uint8_t *p_data;
Pointer to data storage location
uint8_t io_mode;
QSPI transfer mode (SINGLE/DUAL/QUAD)

Return Values

MEMDRV_SUCCESS	<i>/* Normal end */</i>
MEMDRV_ERR_PARAM	<i>/* Parameter error */</i>
MEMDRV_ERR_OTHER	<i>/* Other error */</i>

Properties

Prototype declarations are contained in r_memdrv_rx_if.h.

Description

Enables the DMAC/DTC FIT module settings used for data reception.

Reentrant

Reentry from another device is allowed.

Example

```
memdrv_err_t ret_drv = MEMDRV_SUCCESS;  
st_memdrv_info_t memdrv_info;  
  
memdrv_info.cnt = 0;  
memdrv_info.p_data = NULL;  
memdrv_info.io_mode = MEMDRV_MODE_SINGLE;  
  
ret_drv = R_MEMDRV_EnableRxData(devno, &memdrv_info);
```

Special Notes

None

3.8 R_MEMDRV_DisableRxData ()

This function disables data reception by the memory driver.

Format

```
memdrv_err_t R_MEMDRV_DisableRxData (  
    uint8_t      devno,  
    st_memdrv_info_t *p_memdrv_info  
)
```

Parameters

uint8_t devno
Device number
st_memdrv_info_t *p_memdrv_info
Memory driver information structure
uint32_t cnt;
Data length
uint8_t *p_data;
Pointer to data storage location
uint8_t io_mode;
QSPI transfer mode (SINGLE/DUAL/QUAD)

Return Values

MEMDRV_SUCCESS	<i>/* Normal end */</i>
MEMDRV_ERR_PARAM	<i>/* Parameter error */</i>
MEMDRV_ERR_OTHER	<i>/* Other error */</i>

Properties

Prototype declarations are contained in r_memdrv_rx_if.h.

Description

Disables the DMAC/DTC FIT module settings used for data reception.

Reentrant

Reentry from another device is allowed.

Example

```
memdrv_err_t ret_drv = MEMDRV_SUCCESS;  
st_memdrv_info_t memdrv_info;  
  
memdrv_info.cnt = 0;  
memdrv_info.p_data = NULL;  
memdrv_info.io_mode = MEMDRV_MODE_SINGLE;  
  
ret_drv = R_MEMDRV_DisableRxData(devno, &memdrv_info);
```

Special Notes

None

3.9 R_MEMDRV_Tx ()

This function performs command transmission processing.

Format

```
memdrv_err_t R_MEMDRV_Tx (  
    uint8_t      devno,  
    st_memdrv_info_t *p_memdrv_info  
)
```

Parameters

uint8_t devno
Device number

st_memdrv_info_t *p_memdrv_info
Memory driver information structure

uint32_t cnt;
Data length

uint8_t *p_data;
Pointer to data storage location

uint8_t io_mode;
QSPI transfer mode (SINGLE/DUAL/QUAD)

Return Values

MEMDRV_SUCCESS	/* Normal end */
MEMDRV_ERR_PARAM	/* Parameter error */
MEMDRV_ERR_HARD	/* Hardware error */
MEMDRV_ERR_OTHER	/* Other error */

Properties

Prototype declarations are contained in r_memdrv_rx_if.h.

Description

Transmits the data specified by the memory driver information structure. Supports CPU transfer only.

Reentrant

Reentry from another device is allowed.

Example

```
memdrv_err_t ret_drv = MEMDRV_SUCCESS;  
st_memdrv_info_t memdrv_info;  
uint8_t * p_data;  
  
memdrv_info.cnt = 16;  
memdrv_info.p_data = p_data;  
memdrv_info.io_mode = MEMDRV_MODE_SINGLE;  
  
ret_drv = R_MEMDRV_Tx(devno, &memdrv_info);
```

Special Notes

None

3.10 R_MEMDRV_TxData ()

This function performs data transmission processing.

Format

```
memdrv_err_t R_MEMDRV_TxData (
    uint8_t      devno,
    st_memdrv_info_t *p_memdrv_info
)
```

Parameters

uint8_t devno
Device number

st_memdrv_info_t *p_memdrv_info
Memory driver information structure

uint32_t cnt;
Data length

uint8_t *p_data;
Pointer to data storage location

uint8_t io_mode;
QSPI transfer mode (SINGLE/DUAL/QUAD)

Return Values

MEMDRV_SUCCESS	/* Normal end */
MEMDRV_ERR_PARAM	/* Parameter error */
MEMDRV_ERR_HARD	/* Hardware error */
MEMDRV_ERR_OTHER	/* Other error */

Properties

Prototype declarations are contained in r_memdrv_rx_if.h.

Description

Transmits the data specified by the memory driver information structure. Supports CPU, DMAC, and DTC transfer.

Reentrant

Reentry from another device is allowed.

Example

```
memdrv_err_t ret_drv = MEMDRV_SUCCESS;
st_memdrv_info_t memdrv_info;
uint8_t * p_data;

memdrv_info.cnt = 16;
memdrv_info.p_data = p_data;
memdrv_info.io_mode = MEMDRV_MODE_SINGLE;

ret_drv = R_MEMDRV_TxData(devno, &memdrv_info);
```

Special Notes

None

3.11 R_MEMDRV_Rx ()

This function performs processing to receive the state and ID.

Format

```
memdrv_err_t R_MEMDRV_Rx (  
    uint8_t      devno,  
    st_memdrv_info_t *p_memdrv_info  
)
```

Parameters

uint8_t devno
Device number

st_memdrv_info_t *p_memdrv_info
Memory driver information structure

uint32_t cnt;
Data length

uint8_t *p_data;
Pointer to data storage location

uint8_t io_mode;
QSPI transfer mode (SINGLE/DUAL/QUAD)

Return Values

MEMDRV_SUCCESS	/* Normal end */
MEMDRV_ERR_PARAM	/* Parameter error */
MEMDRV_ERR_HARD	/* Hardware error */
MEMDRV_ERR_OTHER	/* Other error */

Properties

Prototype declarations are contained in r_memdrv_rx_if.h.

Description

Receives the data specified by the memory driver information structure. Supports CPU transfer only.

Reentrant

Reentry from another device is allowed.

Example

```
memdrv_err_t ret_drv = MEMDRV_SUCCESS;  
st_memdrv_info_t memdrv_info;  
uint8_t * p_data;  
  
memdrv_info.cnt = 16;  
memdrv_info.p_data = p_data;  
memdrv_info.io_mode = MEMDRV_MODE_SINGLE;  
  
ret_drv = R_MEMDRV_Rx(devno, &memdrv_info);
```

Special Notes

None

3.12 R_MEMDRV_RxData ()

This function performs data reception processing.

Format

```
memdrv_err_t R_MEMDRV_RxData (  
    uint8_t      devno,  
    st_memdrv_info_t *p_memdrv_info  
)
```

Parameters

uint8_t devno
Device number

st_memdrv_info_t *p_memdrv_info
Memory driver information structure

uint32_t cnt;
Data length

uint8_t *p_data;
Pointer to data storage location

uint8_t io_mode;
QSPI transfer mode (SINGLE/DUAL/QUAD)

Return Values

MEMDRV_SUCCESS	/* Normal end */
MEMDRV_ERR_PARAM	/* Parameter error */
MEMDRV_ERR_HARD	/* Hardware error */
MEMDRV_ERR_OTHER	/* Other error */

Properties

Prototype declarations are contained in r_memdrv_rx_if.h.

Description

Receives the data specified by the memory driver information structure. Supports CPU, DMAC, and DTC transfer.

Reentrant

Reentry from another device is allowed.

Example

```
memdrv_err_t ret_drv = MEMDRV_SUCCESS;  
st_memdrv_info_t memdrv_info;  
uint8_t * p_data;  
  
memdrv_info.cnt = 16;  
memdrv_info.p_data = p_data;  
memdrv_info.io_mode = MEMDRV_MODE_SINGLE;  
  
ret_drv = R_MEMDRV_RxData(devno, &memdrv_info);
```

Special Notes

None

3.13 R_MEMDRV_ClearDMACFlagTx ()

This function clears the transmit empty interrupt flag set at DMAC transfer end.

Format

```
void R_MEMDRV_ClearDMACFlagTx (  
    uint8_t      devno  
)
```

Parameters

uint8_t channel
Device channel number

Return Values

None

Properties

Prototype declarations are contained in r_memdrv_rx_if.h.

Description

Clears the transmit empty interrupt flag. Use an interrupt generated at DMAC transfer end.

Reentrant

Reentry from another device is allowed.

Example

```
uint8_t channel = 0;  
  
R_MEMDRV_ClearDMACFlagTx(channel);
```

Special Notes

None

3.14 R_MEMDRV_ClearDMACFlagRx ()

This function clears the receive buffer full interrupt flag set at DMAC transfer end.

Format

```
void R_MEMDRV_ClearDMACFlagRx (  
    uint8_t      devno  
)
```

Parameters

uint8_t channel
Device channel number

Return Values

None

Properties

Prototype declarations are contained in r_memdrv_rx_if.h.

Description

Clears the receive buffer full interrupt flag. Use an interrupt generated at DMAC transfer end.

Reentrant

Reentry from another device is allowed.

Example

```
uint8_t channel = 0;  
  
R_MEMDRV_ClearDMACFlagRx(channel);
```

Special Notes

None

3.15 R_MEMDRV_1msInterval ()

This function performs interval timer count processing.

Format

```
void R_MEMDRV_1msInterval (  
    void  
)
```

Parameters

None

Return Values

None

Properties

Prototype declarations are contained in r_memdrv_rx_if.h.

Description

Increments the driver software's internal timer counter while waiting for DMAC or DTC transfer end.

Reentrant

None

Example

```
R_MEMDRV_1msInterval();
```

Special Notes

None

3.16 R_MEMDRV_SetLogHdlAddress ()

This function processes setting of the LONGQ FIT module handler address.

Format

```
memdrv_err_t R_MEMDRV_SetLogHdlAddress (  
    uint32_t      user_long_que  
)
```

Parameters

uint32_t user_long_que
LONGQ FIT module handler address

Return Values

MEMDRV_SUCCESS	<i>/* Normal end */</i>
MEMDRV_ERR_PARAM	<i>/* Parameter error */</i>
MEMDRV_ERR_OTHER	<i>/* Other error */</i>

Properties

Prototype declarations are contained in r_memdrv_rx_if.h.

Description

Sets the handler address of the LONGQ FIT module in the memory driver.

Reentrant

None

Example

```
memdrv_err_t ret = MEMDRV_SUCCESS;  
uint32_t long_que_hdl_address = 0;  
  
ret = R_MEMDRV_SetLogHdlAddress(long_que_hdl_address);
```

Special Notes

None

3.17 R_MEMDRV_Log ()

This function performs processing to get the error log using the LONGQ FIT module.

Format

```
uint32_t R_MEMDRV_Log (  
    uint32_t flg,  
    uint32_t fid,  
    uint32_t line  
)
```

Parameters

flg
 0x00000001 (fixed value)
fid
 0x0000003f (fixed value)
line
 0x00001fff (fixed value)

Return Values

0	<i>/* Successful operation */</i>
1	<i>/* Error */</i>

Properties

Prototype declarations are contained in r_memdrv_rx_if.h.

Description

Gets the error log.

Call this function to complete acquisition of the error log.

Reentrant

None

Example

```
memdrv_err_t ret_drv = MEMDRV_SUCCESS;  
st_memdrv_info_t memdrv_info;  
uint8_t * p_data;  
  
memdrv_info.cnt = 16;  
memdrv_info.p_data = p_data;  
memdrv_info.io_mode = MEMDRV_MODE_SINGLE;  
  
ret_drv = R_MEMDRV_Tx(devno,&memdrv_info);  
if(MEMDRV_SUCCESS != ret_drv)  
{  
    R_MEMDRV_Log(0x00000001, 0x0000003f, 0x00001fff);  
    R_MEMDRV_Close(devno,&memdrv_info);  
}
```

Special Notes

Do not fail to add the separate LONG FIT module.

3.18 R_MEMDRV_GetVersion ()

This function gets the memory driver version information.

Format

```
uint32_t R_MEMDRV_GetVersion (  
    void  
)
```

Parameters

None

Return Values

Upper 2 bytes:	Major version (decimal notation)
Lower 2 bytes:	Minor version (decimal notation)

Properties

Prototype declarations are contained in r_memdrv_rx_if.h.

Description

Returns the driver version information.

Reentrant

None

Example

```
uint32_t version = 0;  
  
version = R_MEMDRV_GetVersion();
```

Special Notes

None

4. Pin Settings

In order to use the MEMDRV FIT module, it is necessary to assign pins to the peripheral function input and output signals with the multi-function pin controller (MPC) (referred to as “pin settings”). These settings should be made via the lower-layer driver config procedure.

5. Appendix

5.1 Confirmed Operation Environment

This section describes operation confirmation environment for the MEMDRV FIT module.

Table 5.1 Confirmed Operation Environment

Item	Description
Integrated development environment	Renesas Electronics e ² studio V7.3.0
C compiler	Renesas Electronics C/C++ compiler for RX Family V.3.01.00 Compile option: The following option is added to the default settings of the integrated development environment. -lang = c99
Endian order	Big-endian/little-endian
Module revision	Ver. 1.00
Board used	Renesas Starter Kit+ for RX65N (product No.: RTK500565Nxxxxxxx) Renesas Starter Kit for RX72T (product No.: RTK5572Txxxxxxx)

Table 5.2 Confirmed Operation Environment

Item	Description
Integrated development environment	Renesas Electronics e ² studio V7.3.0 IAR Embedded Workbench for Renesas RX 4.10.01
C compiler	Renesas Electronics C/C++ Compiler Package for RX Family V.3.01.00 Compiler option: The following option is added to the default settings of the integrated development environment. -lang = c99 GCC for Renesas RX 4.08.04.201803 Compiler option: The following option is added to the default settings of the integrated development environment. -std=gnu99 IAR C/C++ Compiler for Renesas RX version 4.10.01 Compiler option: The default settings of the integrated development environment.
Endian order	Big-endian/little-endian
Module revision	Ver. 1.01
Board used	Renesas Starter Kit+ for RX65N (product No.: RTK500565Nxxxxxx)

5.2 Troubleshooting

1. Q: I added the FIT module to my project, but when I build it I get the error “Could not open source file ‘platform.h’.”

A: The FIT module may not have been added to the project properly. Refer to the documents listed below to confirm the method for adding FIT modules:

- Using CS+
Adding Firmware Integration Technology Modules to CS+ Projects (R01AN1826)
- Using e² studio
Adding Firmware Integration Technology Modules to Projects (R01AN1723)

When using the FIT module, the RX Family board support package FIT module (BSP module) must also be added to the project. Refer to the application note “RX Family: Board Support Package Module Using Firmware Integration Technology” (R01AN1685) for instructions for adding the BSP module.

2. Q: I added the FIT module to the project, but when I build it I get the error “This MCU is not supported by the current r_memdrv_rx module.”

A: The FIT module you added may not support the target device chosen in the user project. Check to make sure the FIT module supports the target device.

6. Reference Documents

User's Manual: Hardware

The latest version can be downloaded from the Renesas Electronics website.

Technical Update/Technical News

The latest information can be downloaded from the Renesas Electronics website.

User's Manual: Development Tools

RX Family C/C++ Compiler CC-RX User's Manual (R20UT3248)

The latest version can be downloaded from the Renesas Electronics website.

Related Technical Updates

This module reflects the content of the following technical updates.

There are no applicable technical updates.

Revision History

Rev.	Date	Description	
		Page	Summary
1.00	Feb. 20, 2019		First edition issued
1.01	May. 20, 2019	-	Update the following compilers GCC for Renesas RX IAR C/C++ Compiler for Renesas RX
		1	Added Target Compilers.
		1	Deleted R01AN1723, R01AN1826, R20AN0451 from Related Documents.
		9	Added revision of dependent r_bsp module in 2.2 Software Requirements.
		10	Table 2.1 Configuration Options (config.h), MEMDRV_CFG_DEVx_MODE_DRV fixed.
		12	2.8 Memory Usage, amended.
		16	Deleted Target devices describing "WAIT_LOOP" in 2.13 "for", "while" and "do while" comment.
		35	Added Table 5.2 Operation Confirmation Environment (Ver. 1.01).

General Precautions in the Handling of Microprocessing Unit and Microcontroller Unit Products

The following usage notes are applicable to all Microprocessing unit and Microcontroller unit products from Renesas. For detailed usage notes on the products covered by this document, refer to the relevant sections of the document as well as any technical updates that have been issued for the products.

1. Precaution against Electrostatic Discharge (ESD)

A strong electrical field, when exposed to a CMOS device, can cause destruction of the gate oxide and ultimately degrade the device operation. Steps must be taken to stop the generation of static electricity as much as possible, and quickly dissipate it when it occurs. Environmental control must be adequate. When it is dry, a humidifier should be used. This is recommended to avoid using insulators that can easily build up static electricity.

Semiconductor devices must be stored and transported in an anti-static container, static shielding bag or conductive material. All test and measurement tools including work benches and floors must be grounded. The operator must also be grounded using a wrist strap. Semiconductor devices must not be touched with bare hands. Similar precautions must be taken for printed circuit boards with mounted semiconductor devices.

2. Processing at power-on

The state of the product is undefined at the time when power is supplied. The states of internal circuits in the LSI are indeterminate and the states of register settings and pins are undefined at the time when power is supplied. In a finished product where the reset signal is applied to the external reset pin, the states of pins are not guaranteed from the time when power is supplied until the reset process is completed. In a similar way, the states of pins in a product that is reset by an on-chip power-on reset function are not guaranteed from the time when power is supplied until the power reaches the level at which resetting is specified.

3. Input of signal during power-off state

Do not input signals or an I/O pull-up power supply while the device is powered off. The current injection that results from input of such a signal or I/O pull-up power supply may cause malfunction and the abnormal current that passes in the device at this time may cause degradation of internal elements. Follow the guideline for input signal during power-off state as described in your product documentation.

4. Handling of unused pins

Handle unused pins in accordance with the directions given under handling of unused pins in the manual. The input pins of CMOS products are generally in the high-impedance state. In operation with an unused pin in the open-circuit state, extra electromagnetic noise is induced in the vicinity of the LSI, an associated shoot-through current flows internally, and malfunctions occur due to the false recognition of the pin state as an input signal become possible.

5. Clock signals

After applying a reset, only release the reset line after the operating clock signal becomes stable. When switching the clock signal during program execution, wait until the target clock signal is stabilized. When the clock signal is generated with an external resonator or from an external oscillator during a reset, ensure that the reset line is only released after full stabilization of the clock signal. Additionally, when switching to a clock signal produced with an external resonator or by an external oscillator while program execution is in progress, wait until the target clock signal is stable.

6. Voltage application waveform at input pin

Waveform distortion due to input noise or a reflected wave may cause malfunction. If the input of the CMOS device stays in the area between V_{IL} (Max.) and V_{IH} (Min.) due to noise, for example, the device may malfunction. Take care to prevent chattering noise from entering the device when the input level is fixed, and also in the transition period when the input level passes through the area between V_{IL} (Max.) and V_{IH} (Min.).

7. Prohibition of access to reserved addresses

Access to reserved addresses is prohibited. The reserved addresses are provided for possible future expansion of functions. Do not access these addresses as the correct operation of the LSI is not guaranteed.

8. Differences between products

Before changing from one product to another, for example to a product with a different part number, confirm that the change will not lead to problems. The characteristics of a microprocessing unit or microcontroller unit products in the same group but having a different part number might differ in terms of internal memory capacity, layout pattern, and other factors, which can affect the ranges of electrical characteristics, such as characteristic values, operating margins, immunity to noise, and amount of radiated noise. When changing to a product with a different part number, implement a system-evaluation test for the given product.

Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
5. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.

"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.

"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.

Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.

6. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
7. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
8. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
9. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
10. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
11. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.

(Note1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.

(Note2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.4.0-1 November 2017)

Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu,
Koto-ku, Tokyo 135-0061, Japan
www.renesas.com

Trademarks

All trademarks and registered trademarks are the property of their respective owners.

Contact information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit:
www.renesas.com/contact/.