


venture mk8

Takedown Guide

Step Zero: Safety first! Do not attempt to disassembly this blaster until you've learned how it works and how to properly operate / service it. *If you install a spring with a large amount of preload, the catch house fly off during takedown.*


Step 1:

Remove the Actuator Pin, Main Body Pin, and loosen the two Thumbscrews.

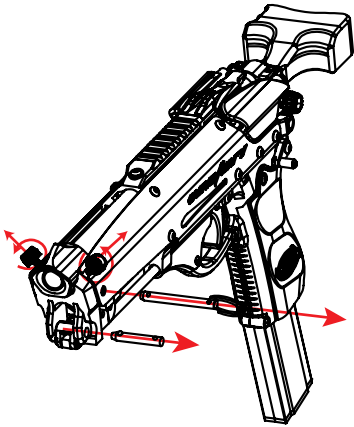



Step 2:

Pull out the muzzle. It may be a bit tight, Make sure the muzzle comes out with the two priming guides.

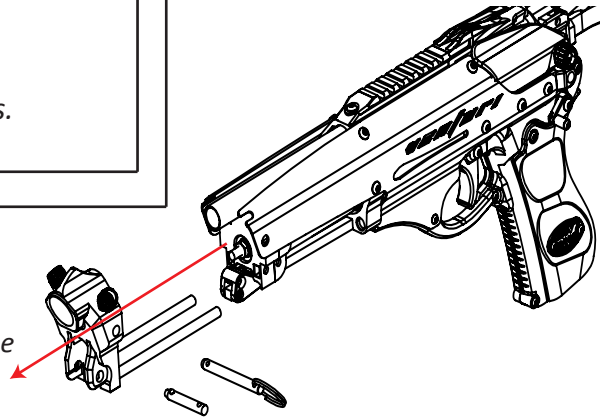


Step 3:

Loosen the M5 Thumbscrew securing the *pusher* and slide panels, removing those panels afterwards. You can then pull the *pusher* out of the blaster.

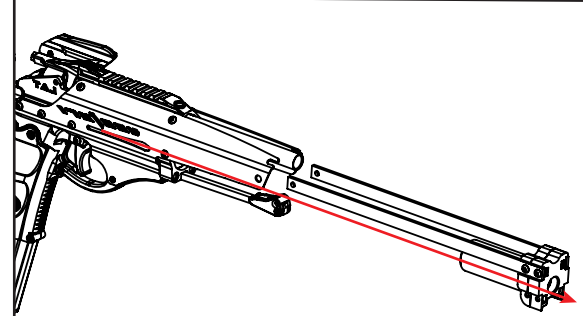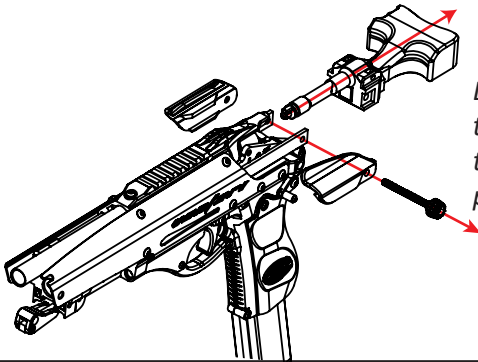

Step 4:

Once the front plate and pusher are removed, you can pull the whole *Catch House* assembly, along with the priming bars attached to them. After removing the *Catch House*, you can remove the main blaster spring.

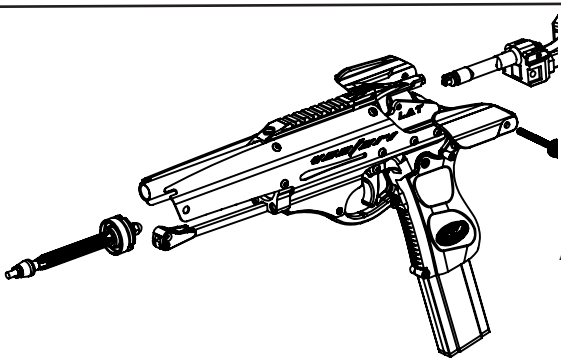

Step 5:

Once the Catch House assembly is removed, you can reach in the front of the blaster to remove the Plunger. From here you can clean / service the O rings.

This work is licensed under the Creative Commons Attribution-NonCommercial 4.0 International License. To view a copy of this license, visit <http://creativecommons.org/licenses/by-nc/4.0/>

Northeast Designs