


## Install serial driver

If the driver of the CP2102 chip has been installed in the computer system, you can skip the following content and do not need to install the driver again.


1. Find the CP2102\_USB driver.zip file in the supporting materials, download it to the local computer and unzip it, and get the following files.

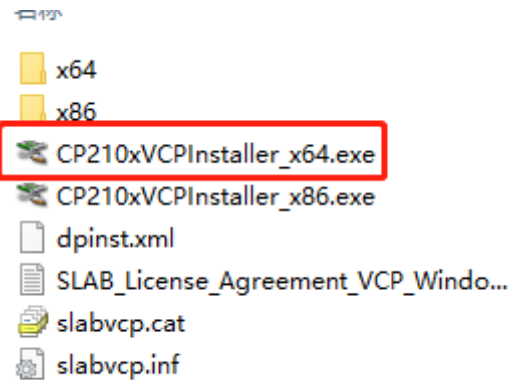

2. Take Win10 64-bit system as an example, double-click the CP210xVCPIInstaller\_x64.exe file to open the installer, and then follow the prompts to click Next until it is completed.





 要继续，请接受以下许可协议。 要阅读全部协议，请使用滚动条或按 Page Down 键。


LICENSE AGREEMENT  
SILICON LABS VCP DRIVER  
IMPORTANT: READ CAREFULLY BEFORE AGREEING TO TERMS

THIS PRODUCT CONTAINS THE SILICON LABS VCP DRIVER AND INSTALLER PROGRAMS AND OTHER THIRD PARTY SOFTWARE. TOGETHER THESE PRODUCTS ARE REFERRED TO AS THE "LICENSED SOFTWARE". USE OF THE LICENSED SOFTWARE IS SUBJECT TO THE TERMS OF THIS LICENSE AGREEMENT.

☒ 我接受这个协议(A) ☐ 我不接受这个协议(B)

另存为(S) 打印(P)

< 上一步(B) 下一页(N) > 取消



### Completing the Installation of the CP210x USB to UART Bridge Driver

此计算机上成功地安装了此驱动程序。

现在您可以将设备连接到此计算机。如果此设备附有说明，请先阅读。

| 驱动程序名                   | 状态    |
|-------------------------|-------|
| ✓ Silicon Laboratori... | 可以使用了 |

< 上一步(B) 完成 取消

3. Check whether the serial port is detected.

Right-click on 'My Computer', select 'Manage', then click on 'Device Manager', and double-click on 'Ports' to display the list.

Insert the USB-TypeC data cable to connect the module to the USB port of the computer, and the CP210x USB device port will be added at this time.

计算机管理

文件(F) 操作(A) 查看(V) 帮助(H)



计算机管理(本地)

- 系统工具
  - 任务计划程序
  - 事件查看器
  - 共享文件夹
  - 本地用户和组
  - 性能
  - 设备管理器
- 存储
  - 磁盘管理
- 服务和应用程序

DESKTOP-1

- IDE ATA/ATAPI 控制器
- 处理器
- 磁盘驱动器
- 存储控制器
- 打印队列
- 端口 (COM 和 LPT)
  - Silicon Labs CP210x USB to UART Bridge (COM2)
  - 通信端口 (COM1)
- 计算机
- 监视器
- 键盘
- 其他设备