




How to Run OTOM V1.09- Using License


Note: Regarding the software license, you should have an internet connection for using this software.

After successful installation of the software:


- 1- Run as administrator: right click

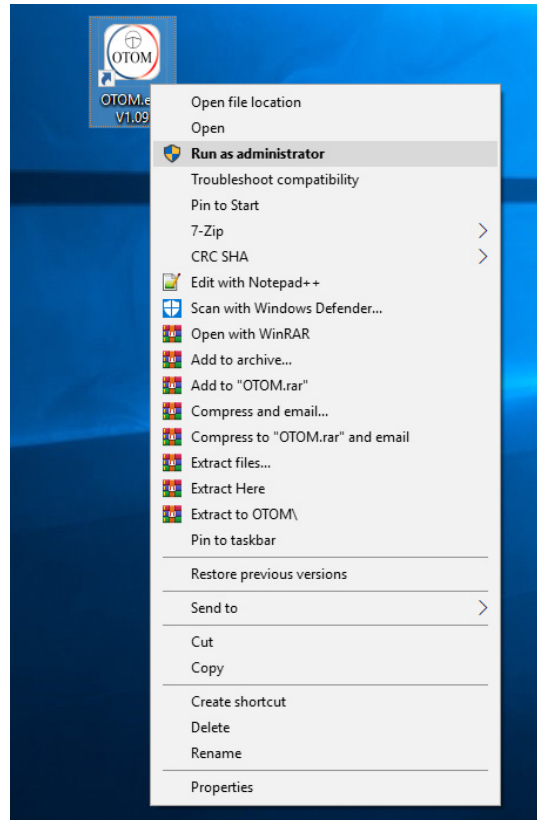


- 1- Run as administrator: depends on your firewall setting, you might accept this window later.

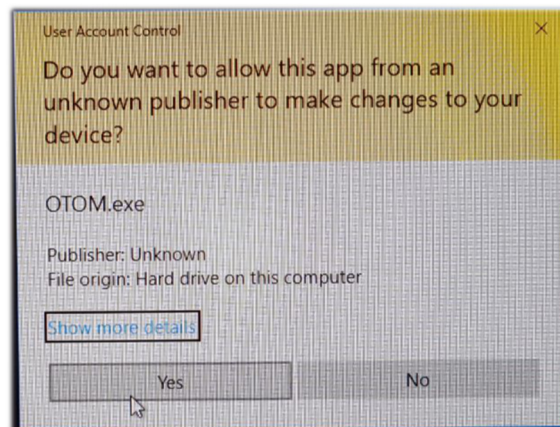

2- Write your account name and click OK.

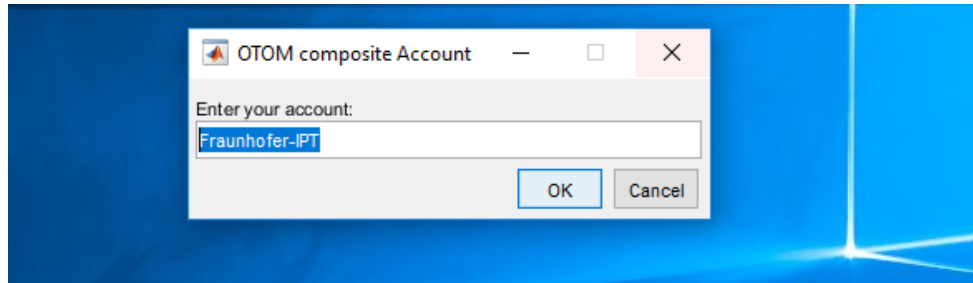


3- Your PC is not registered with your account for the first time, Software is deactivated now.

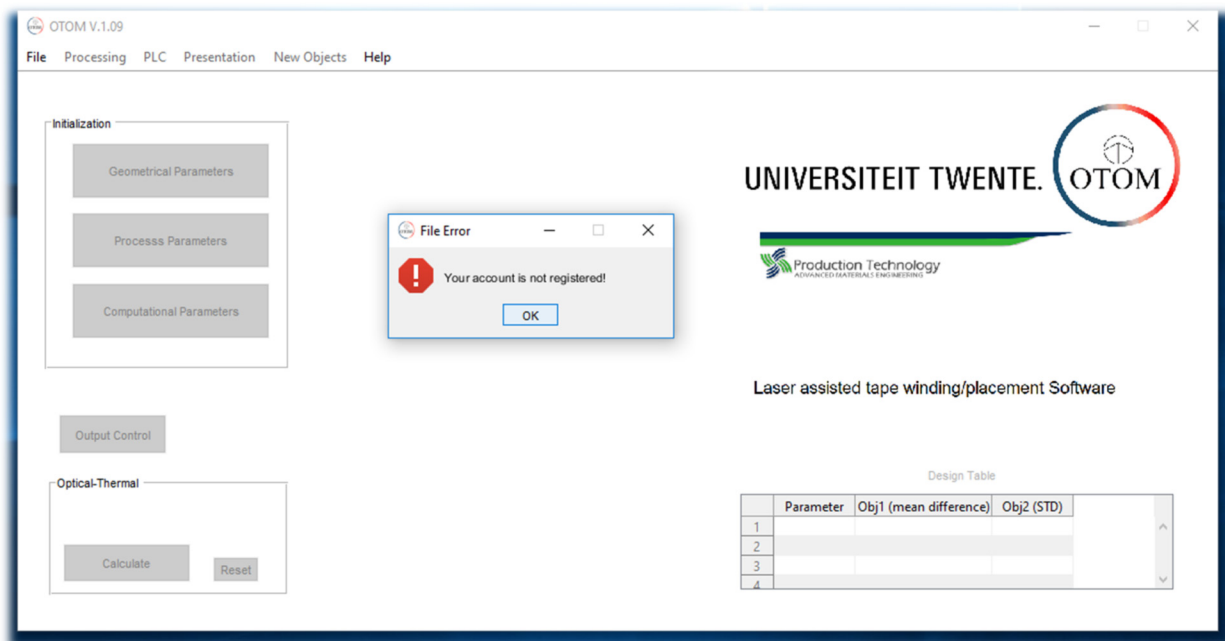




- 4- For PC registration and software activation, you should click on *File > Share*

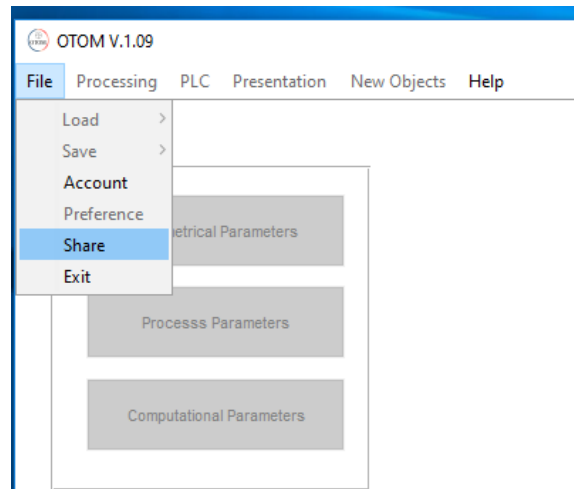

- 5- It is asked whether you want to share PC information, including Serial-ID of the electrical chipset of your hardware, with OTOMcomposite or not?

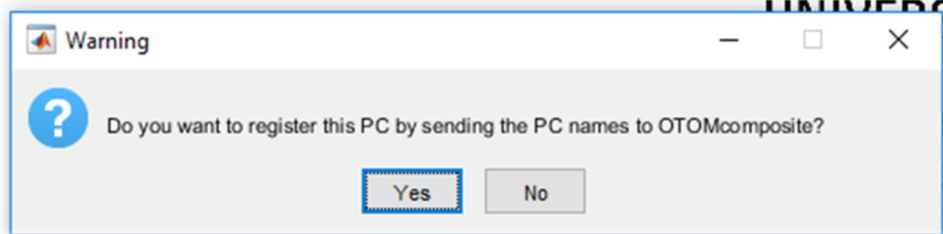


- 6- If you click “Yes”, an E-mail automatically will be sent to info@otomcomposite.com via your Outlook application. An example is shown below.





- 7- Your PC information and your account name have been saved in *OTOMcomposite.com*. An operator in *OTOMcomposite* will verify your data. If your Device is verified with your account name, you can use Software just by clicking on File> Account.

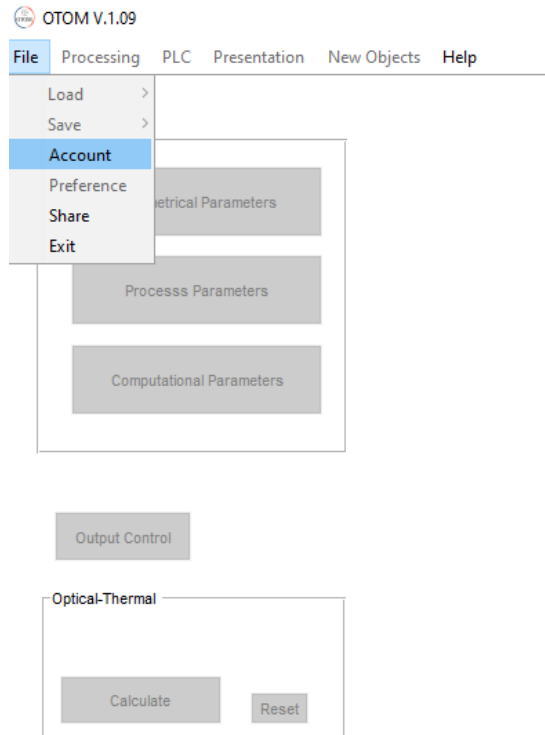



- 8- With your verified PC and Account name, you are using **Original verified License.** Then Software is totally activated.

