

PA
MUSE

COCKPIT
DOOR VIDEO
OFF

ADIRS
ON BAT

IR1
FAULT
OFF

IR3
FAULT
OFF

IR2
FAULT
OFF

ADR1
FAULT
OFF

ADR3
FAULT
OFF


ADR2
FAULT
OFF

FLT CTL

ELAC1
FAULT
OFF

SEC1
FAULT
OFF

FAC1
FAULT
OFF

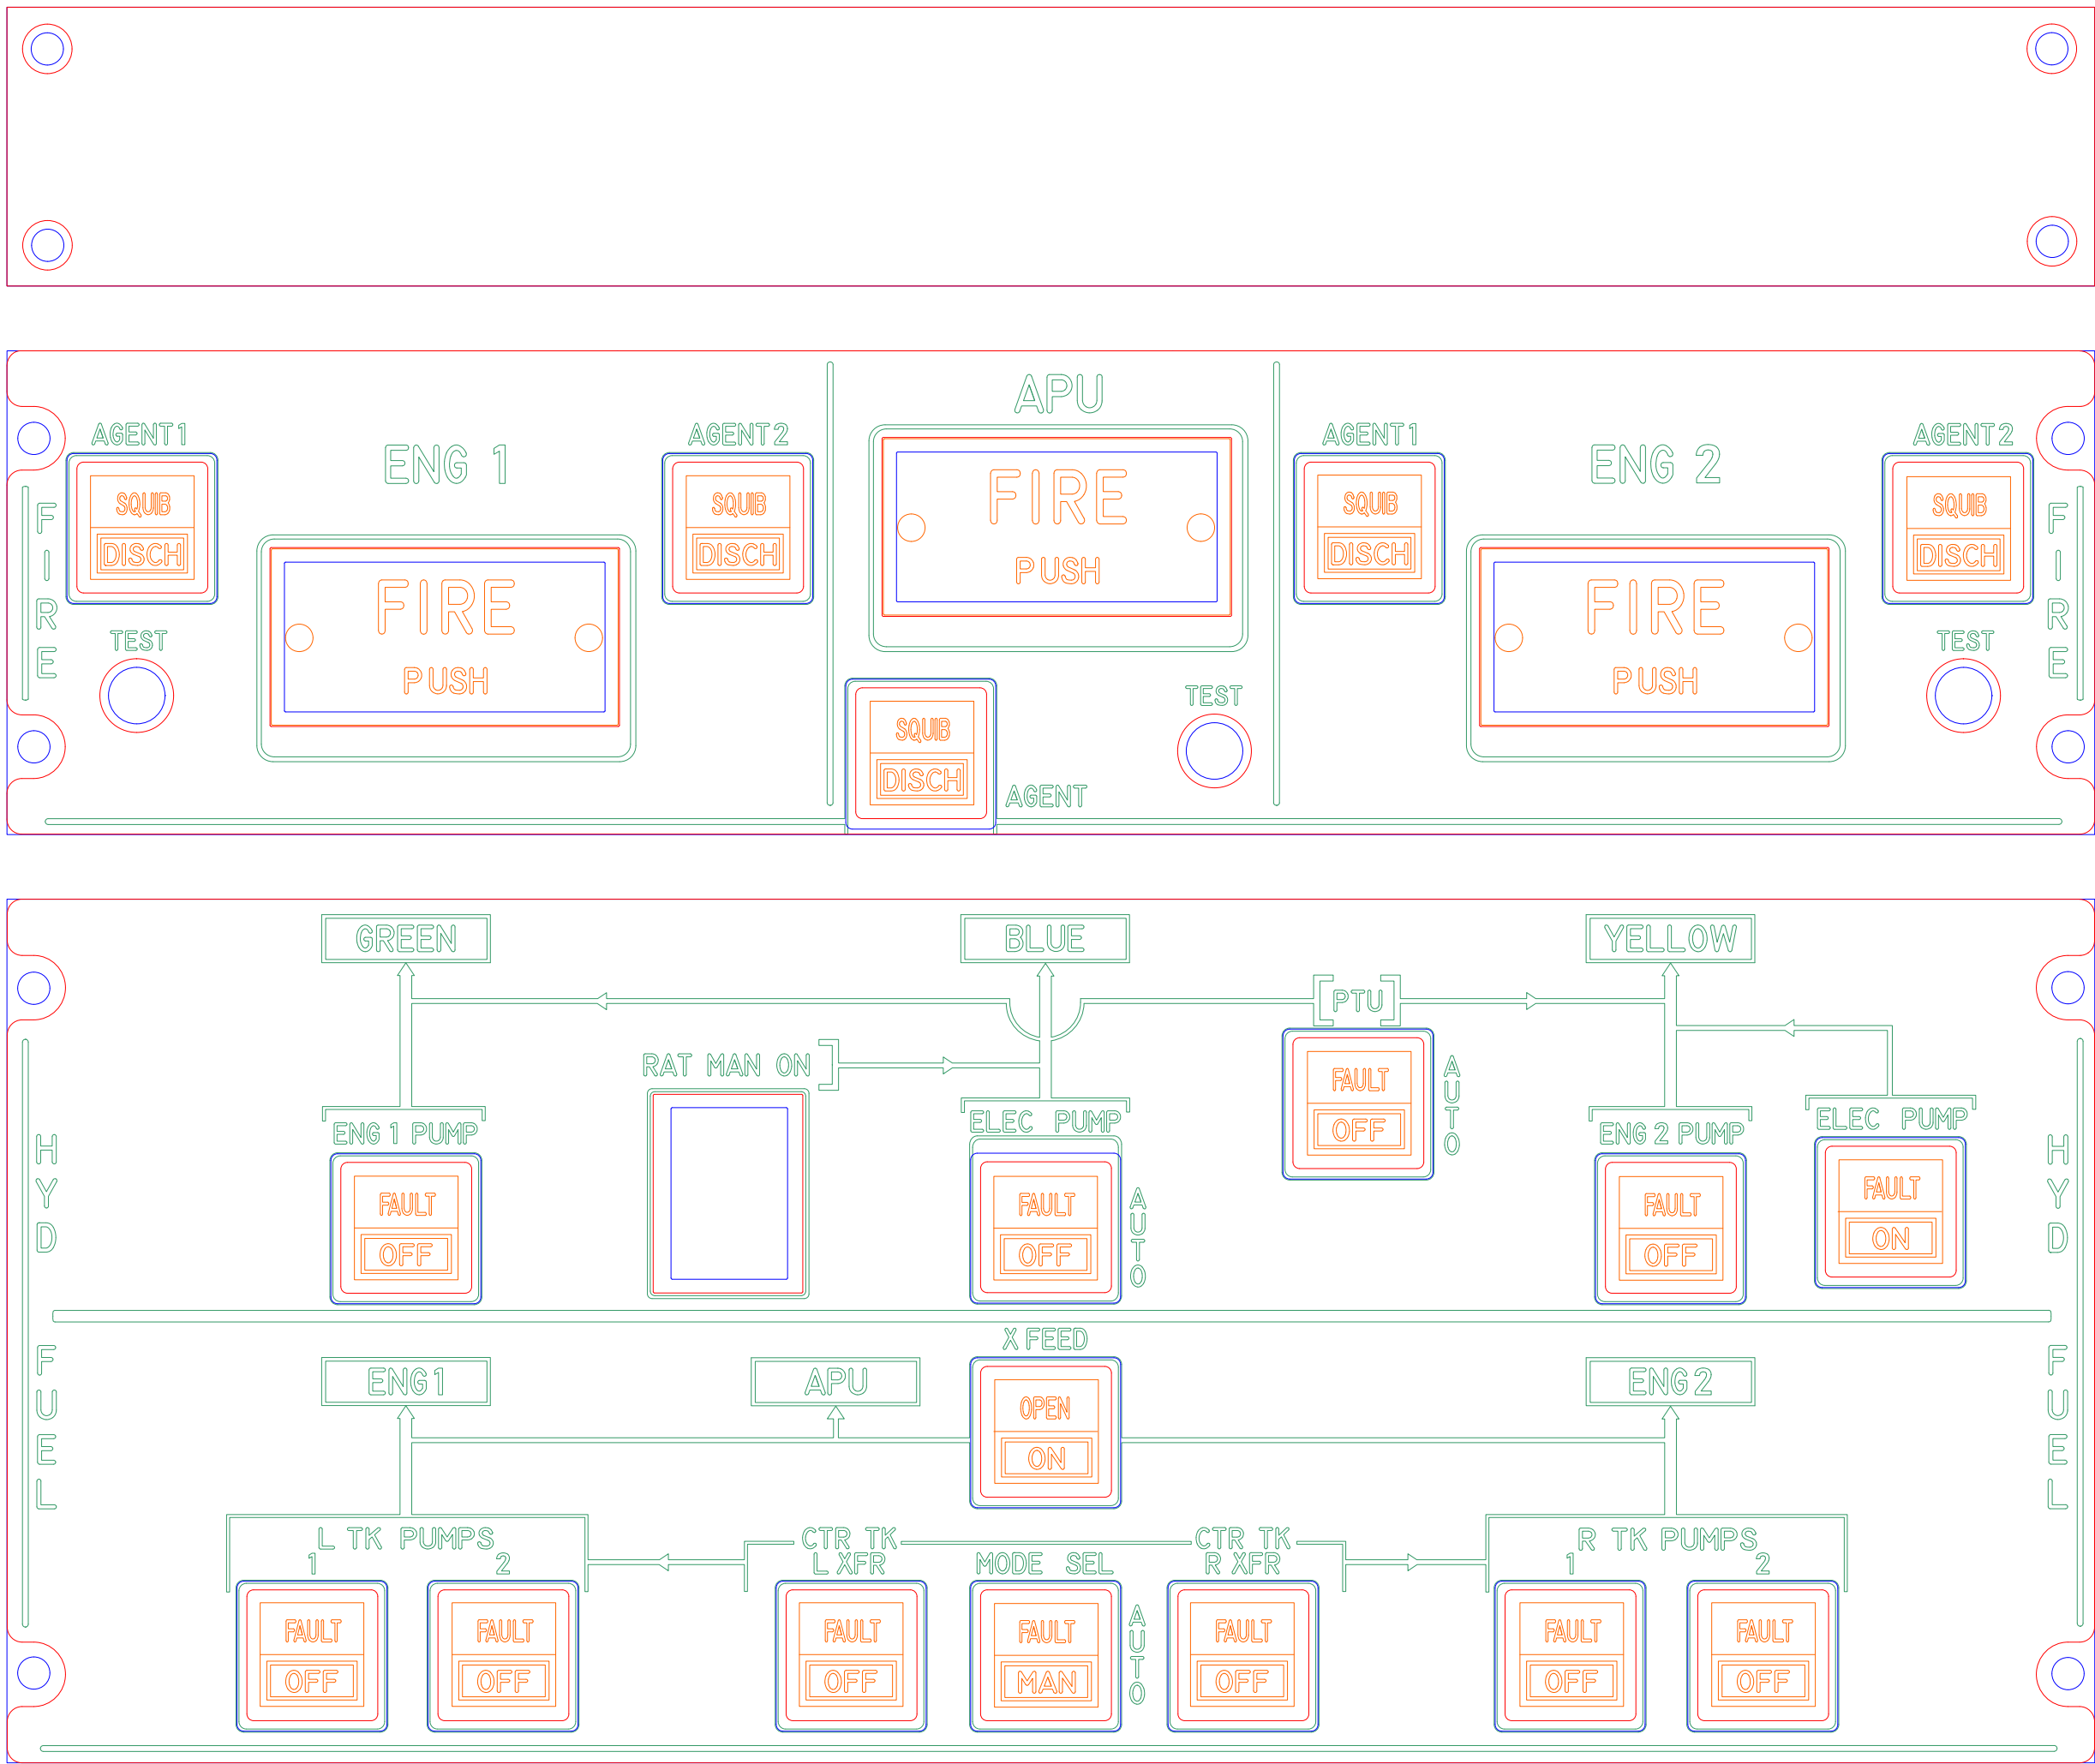

VHF1
CALL

VHF2
CALL

VHF3
CALL

HF1
CALL

HF2

INT

CAB

MT

VORT
RAD

VOR2

MKR

ILS

ADF1

ADF2

-PA

ACTIVE

STBY/CRS


OFF

EVAC

COMMAND
EVAC
ON

HORN SHUT OFF

CAPT & PURS
CAPT

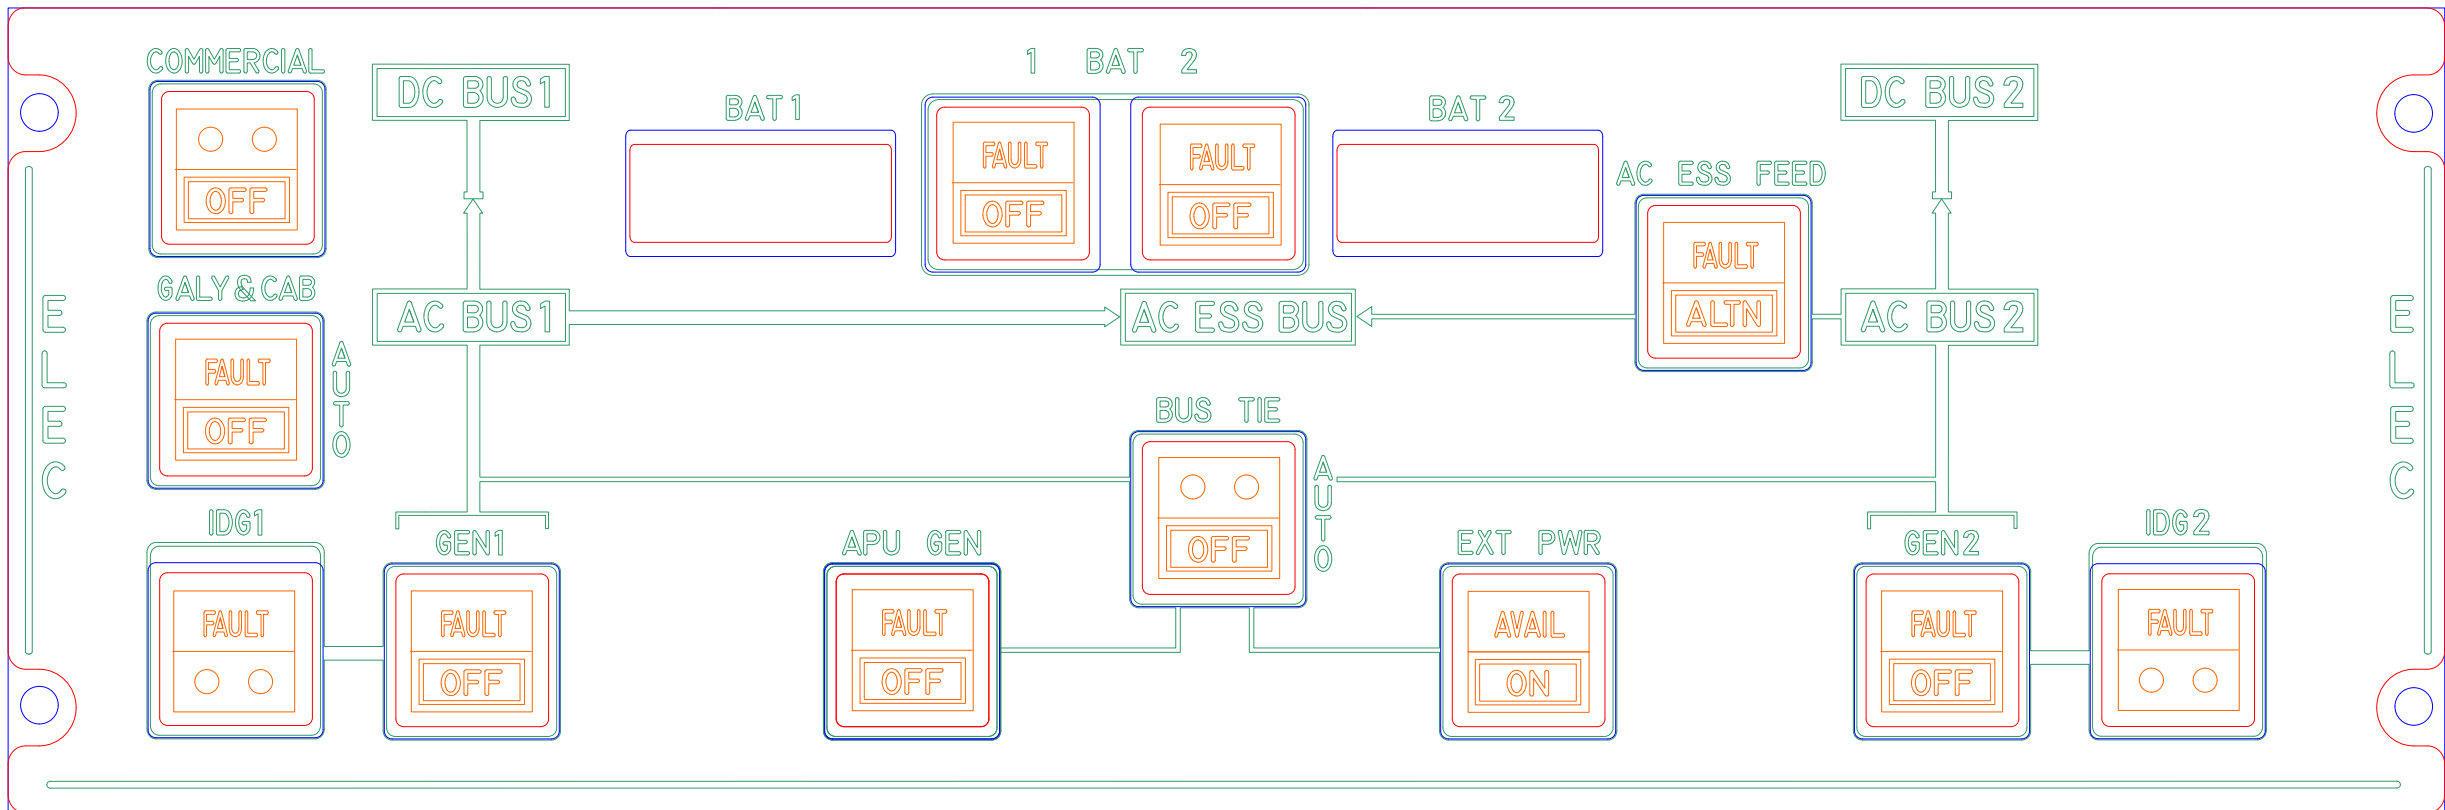

FLT CTL

ELAC 2
FAULT
OFF

SEC2
FAULT
OFF

SEC3
FAULT
OFF

FAC2
FAULT
OFF

EMER ELEC PWR

EMER GEN TEST

GEN 1 LINE
SMOKE
OFF

RAT & GEN
FAULT

MAN ON
AUTO

GPWS

TERR
FAULT
OFF

SYS
FAULT
OFF

G/S MODE
OFF

FLAP MODE
OFF


LDG FLAP3
ON

RCDR

GND CTL
ON

CVR ERASE

CVR TEST

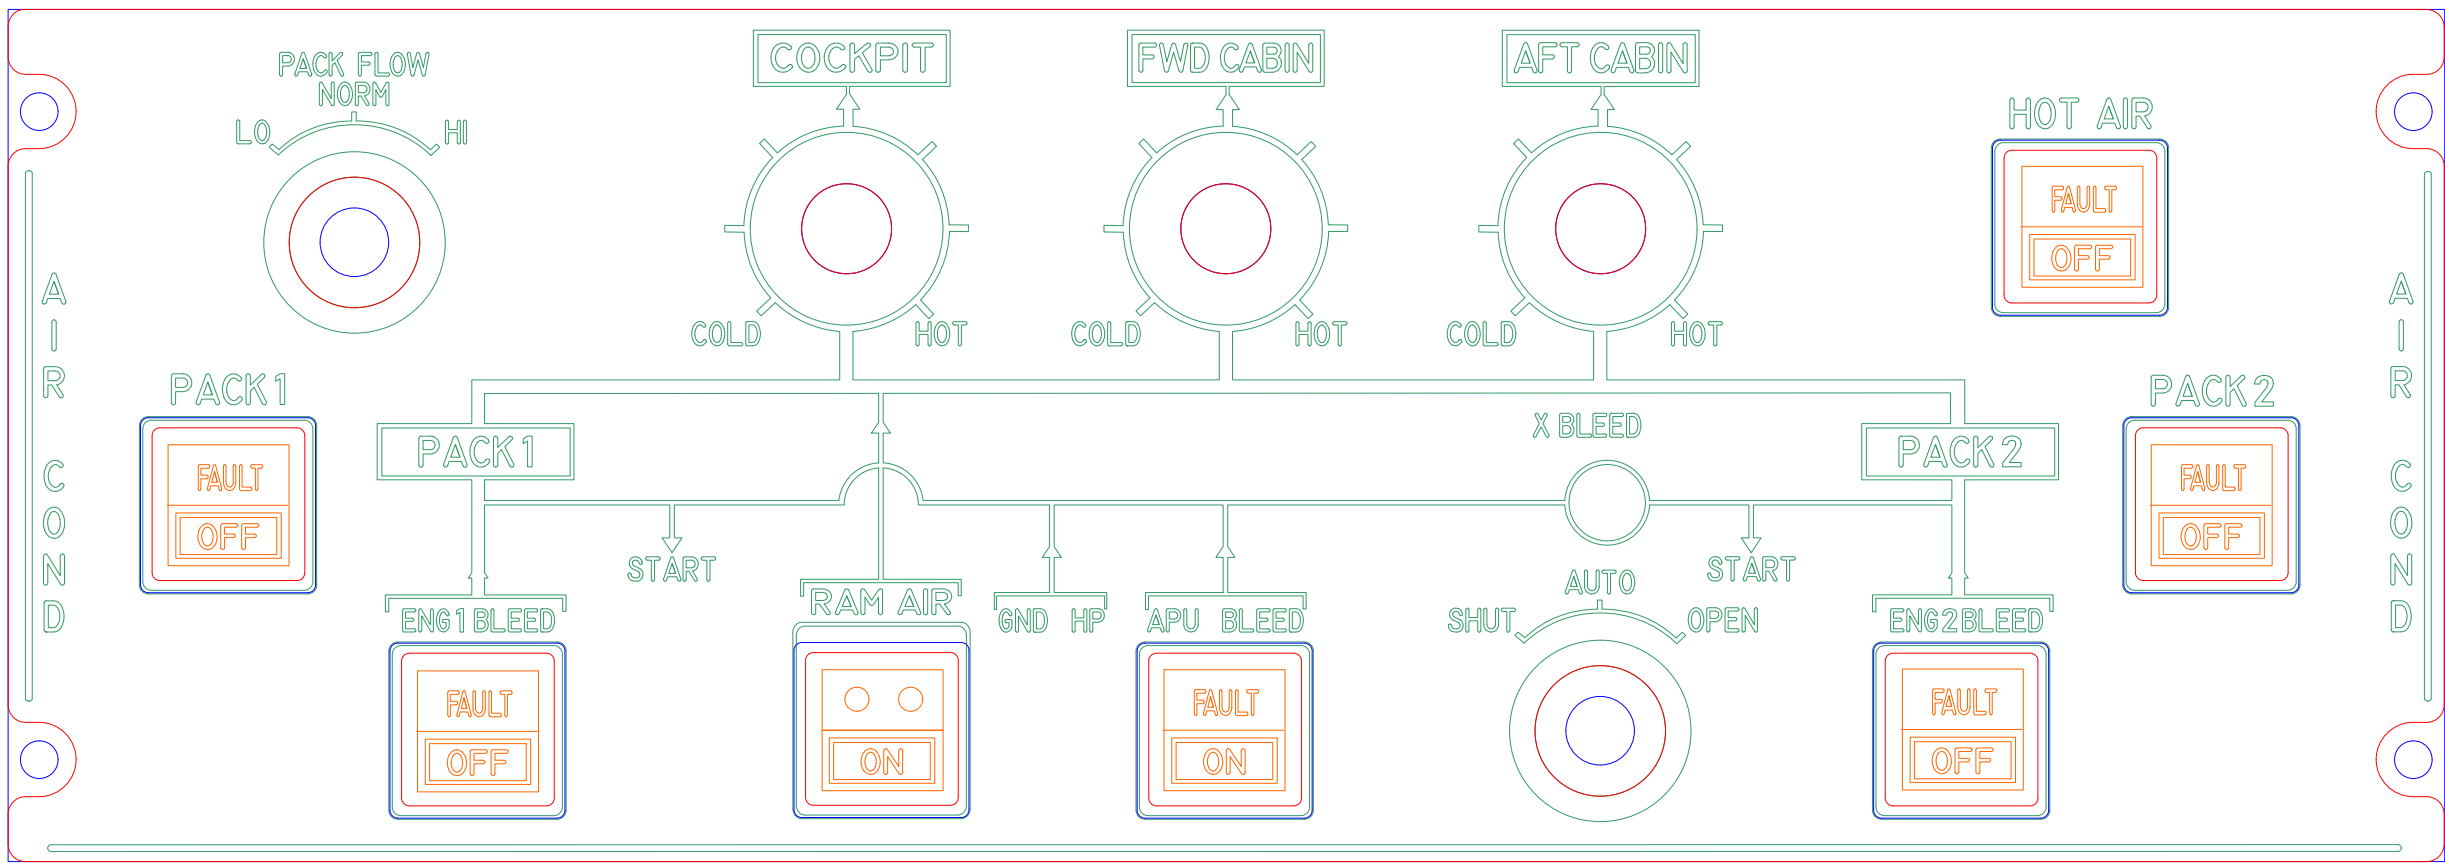

CARGO VENT

AFT ISOL VALVE
FAULT
OFF

DISCH

CARGO SMOKE

DISCH

DISCH

FWD
SMOKE
DISCH

TEST

FWD
SMOKE
DISCH

DISCH

HIGH ALT
LANDING
ON

MASK MAN ON
AUTO

OXYGEN

PASSENGER
SYS ON

CREW SUPPLY
OFF

CALLS

MECH

ALL

FWD

AFT

EMER
CALL
ON

RAIN RPLNT

WIPER
OFF
SLOW
FAST

WING
FAULT
ON

ANTI ICE
ENG1
FAULT
ON

ENG2
FAULT
ON

PROBE/WINDOW
HEAT
ON

CABIN PRESS
MAN W/S CTL
UP
DN

LDG ELEV
AUTO

DITCHING
ON

EXT LT

STROBE
ON
OFF

BEACON
ON
OFF

WING
ON
OFF

NAV & LOGO
2
1
OFF

RWY TURN OFF
ON
OFF

LAND
L
ON
OFF

R
ON
OFF

NOSE
T.O
TAXI
OFF

APU

MASTER SW
FAULT
ON

START
AVAIL
ON

OVHD INTEG LT
OFF
BRT

ICE IND & STBY COMPASS
OFF

INT LT
DOME
BRT
DM
OFF

ANN LT
TEST
BRT
DM

SEAT BELTS
ON
OFF

NO SMOKING
ON
OFF

SIGNS
EMER EXIT LT
OFF

EMER EXIT LT
ON
ARM
OFF

VENTILATION

BLOWER
FAULT
OVRD

EXTRACT
FAULT
OVRD

CAB FANS
OFF

WIPER

MAN START
1
ON

2
ON

ENG

RAIN RPLNT