

---

# Command Reference: ReadPlanStationsFromStateMod()


Read plan station data from a StateMod plan stations file

## StateMod Command

Version 3.12.00, 2010-12-14

The `ReadPlanStationsFromStateMod()` command reads a list of plan stations from a StateMod plan stations file and defines plan stations in memory. The plan stations can then be manipulated and output with other commands. Comments immediately prior to a plan's data records are associated with the plan and will be output when the plan stations are written with a `WritePlanStationsToStateMod()` command.

The following dialog is used to edit the command and illustrates the syntax of the command.

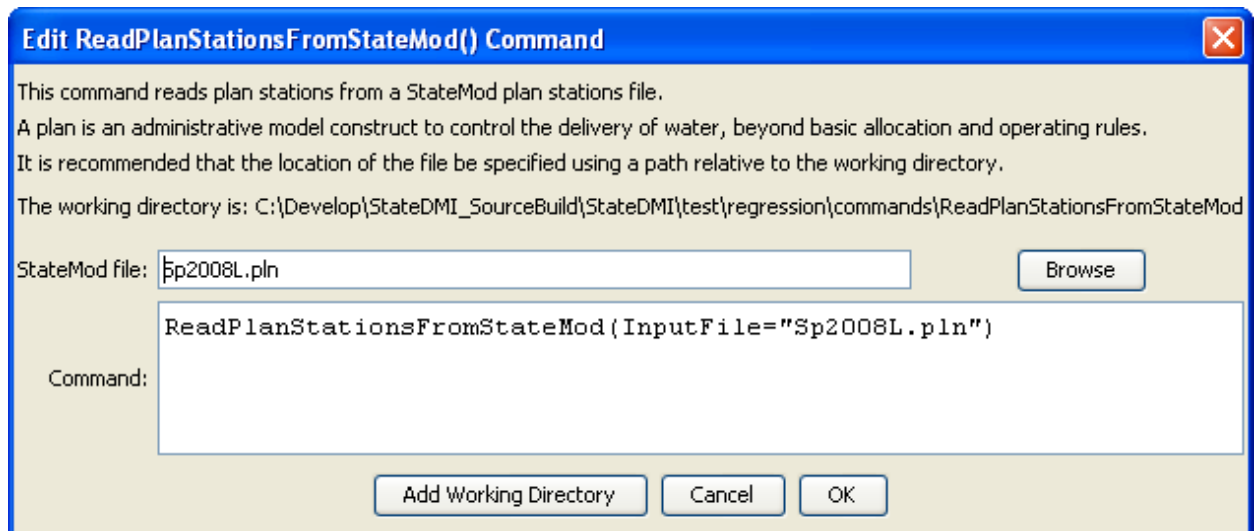

ReadPlanStationsFromStateMod

**ReadPlanStationsFromStateMod() Command Editor**

The command syntax is as follows:

```
ReadPlanStationsFromStateMod(Parameter=Value,...)
```

#### Command Parameters

Parameter	Description	Default
InputFile	The name of the StateMod plan stations file to read.	None – must be specified.