
Command Reference: ReadInstreamFlowRightsFromStateMod()


Read instream flow right data from a StateMod instream flow rights file

StateMod Command

Version 3.09.01, 2010-02-02

The `ReadInstreamFlowRightsFromStateMod()` command reads instream flow rights from a StateMod instream flow rights file. The instream flow rights can then be manipulated and output with other commands.

The following dialog is used to edit the command and illustrates the syntax of the command.

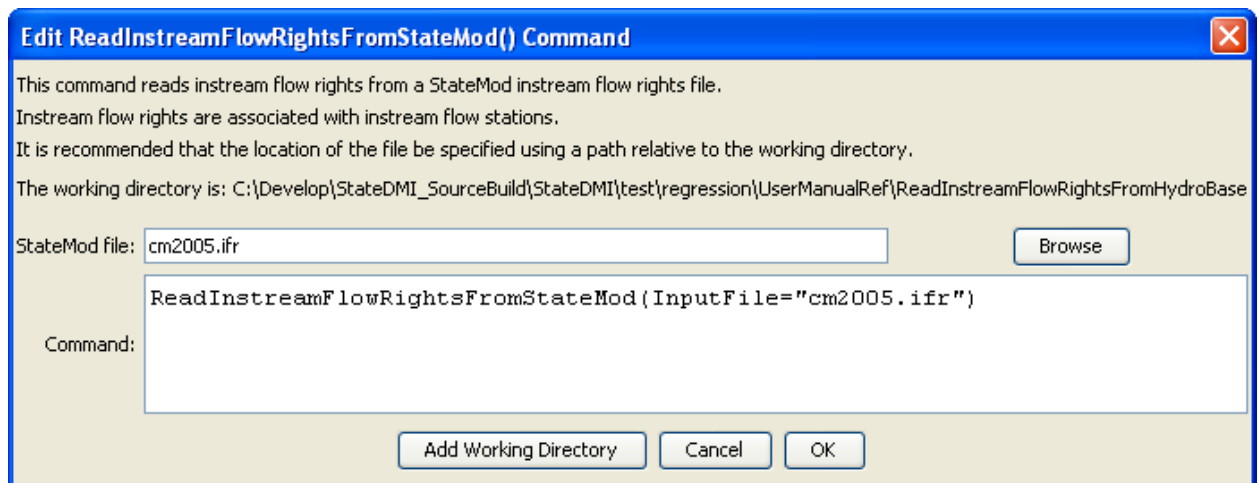

ReadInstreamFlowRightsFromStateMod

ReadInstreamFlowRightsFromStateMod() Command Editor

The command syntax is as follows:

```
ReadInstreamFlowRightsFromStateMod (Parameter=Value,...)
```

Command Parameters

Parameter	Description	Default
InputFile	The name of the StateMod instream flow rights file to be read.	None – must be specified.