
Command Reference: SortInstreamFlowStations()


Sort instream flow stations

StateMod Command

Version 3.09.01, 2010-02-01

The `SortInstreamFlowStations()` command sorts the instream flow stations.

The following dialog is used to edit the command and illustrates the syntax of the command.

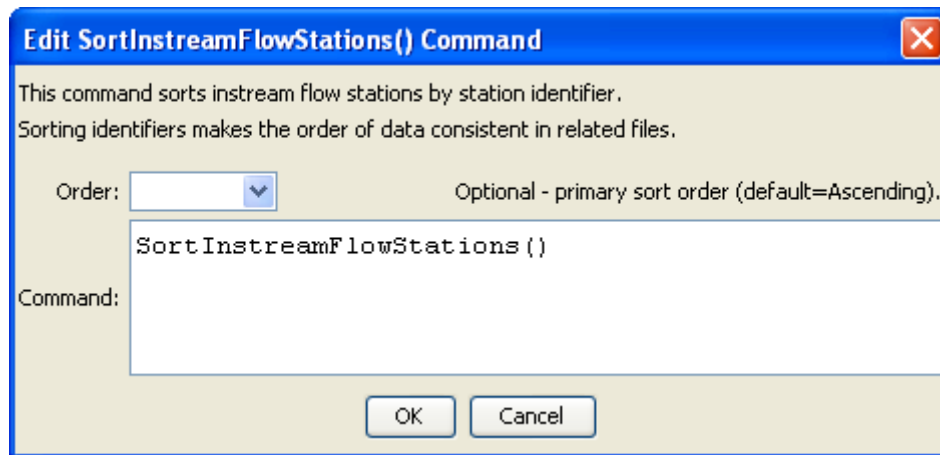

SortInstreamFlowStations

SortInstreamFlowStations() Command Editor

The command syntax is as follows:

```
SortInstreamFlowStations (Parameter=Value,...)
```

Command Parameters

Parameter	Description	Default
Order	Indicate the order for the sort. Currently only Ascending is supported. The older Alphabetical is automatically converted to Ascending.	Ascending