
Command Reference: ReadOperationalRightsFromStateMod()


Read operational right data from a StateMod operational rights file

StateMod Command

Version 3.12.00, 2010-12-14

The `ReadOperationalRightsFromStateMod()` command reads a list of operational rights from a StateMod operational rights file and defines operational rights in memory. The rights can then be manipulated and output with other commands. Comments immediately prior to a right's data records are associated with the right and will be output when the rights are written with a `WriteOperationalRightsToStateMod()` command.

The following dialog is used to edit the command and illustrates the syntax of the command.

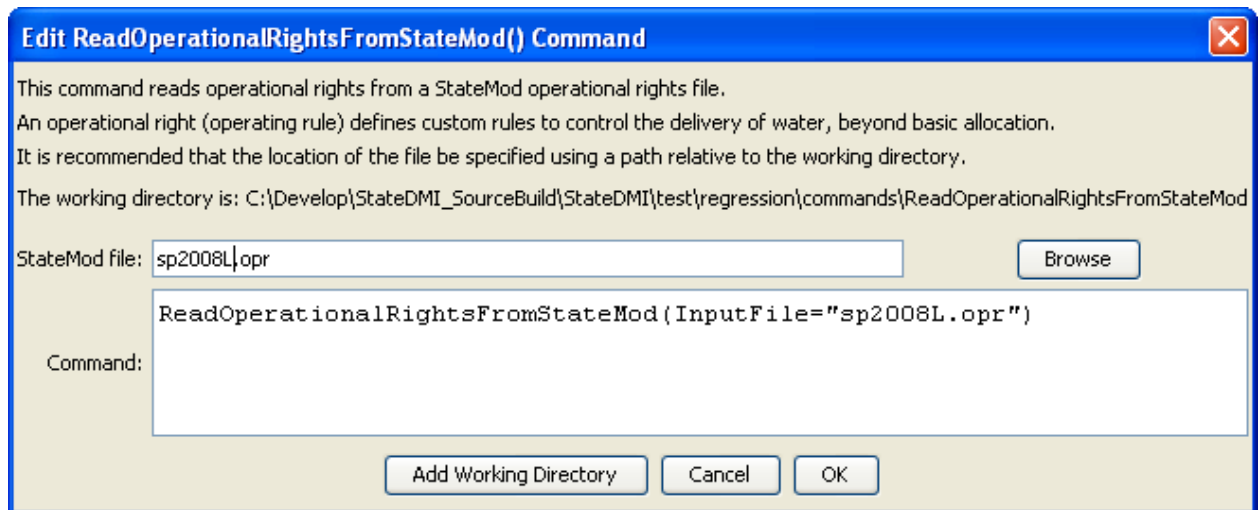

ReadOperationalRightsFromStateMod

ReadOperationalRightsFromStateMod() Command Editor

The command syntax is as follows:

```
ReadOperationalRightsFromStateMod (Parameter=Value, ...)
```

Command Parameters

Parameter	Description	Default
InputFile	The name of the StateMod operational rights file to read.	None – must be specified.