
Command Reference: ReadControlFromStateMod()


Read control file data from a StateMod control file

StateMod Command

Version 3.12.00, 2011-01-17

The `ReadControlFromStateMod()` command reads a StateMod control file, which contains global parameters for the data set. The primary purpose of this command currently is to facilitate software testing of reading and writing the control file; however, in the future the functionality may be enhanced. The response file can be written using the `WriteControlToStateMod()` command.

The following dialog is used to edit the command and illustrates the syntax of the command.

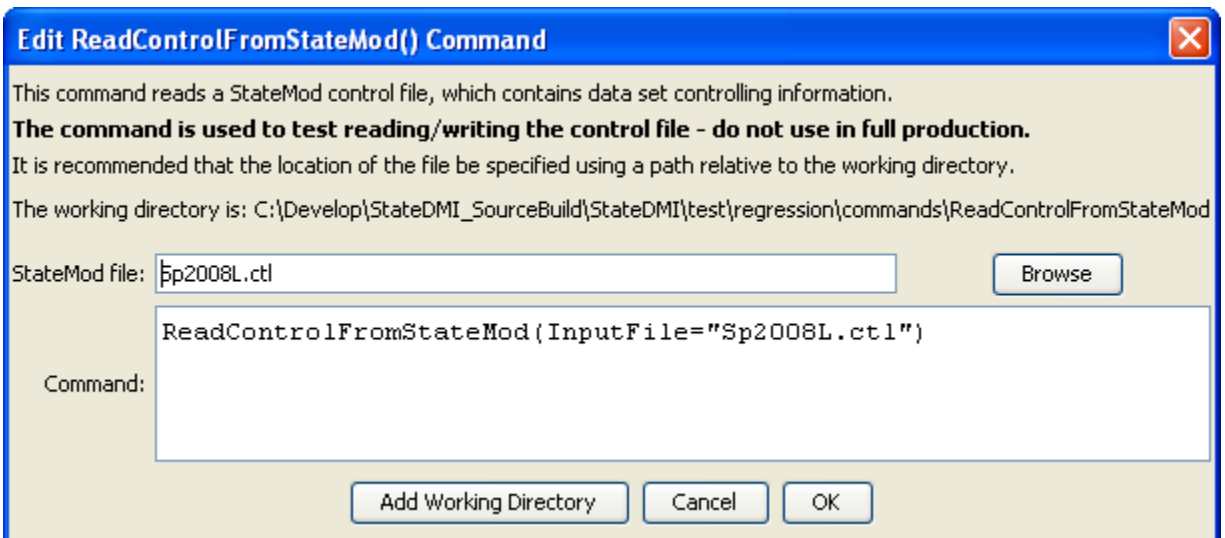

ReadControlFromStateMod

ReadControlFromStateMod() Command Editor

The command syntax is as follows:

```
ReadControlFromStateMod (Parameter=Value, ...)
```

Command Parameters

Parameter	Description	Default
InputFile	The name of the StateMod control file to read.	None – must be specified.