
Command Reference:

ReadInstreamFlowStationsFromStateMod()


Read instream flow station data from a StateMod instream flow stations file

StateMod Command

Version 3.09.01, 2010-02-01

The `ReadInstreamFlowStationsFromStateMod()` command reads a list of instream flow stations from a StateMod instream flow stations file and defines instream flow stations in memory. The instream flow stations can then be manipulated and output with other commands.

The following dialog is used to edit the command and illustrates the syntax of the command.

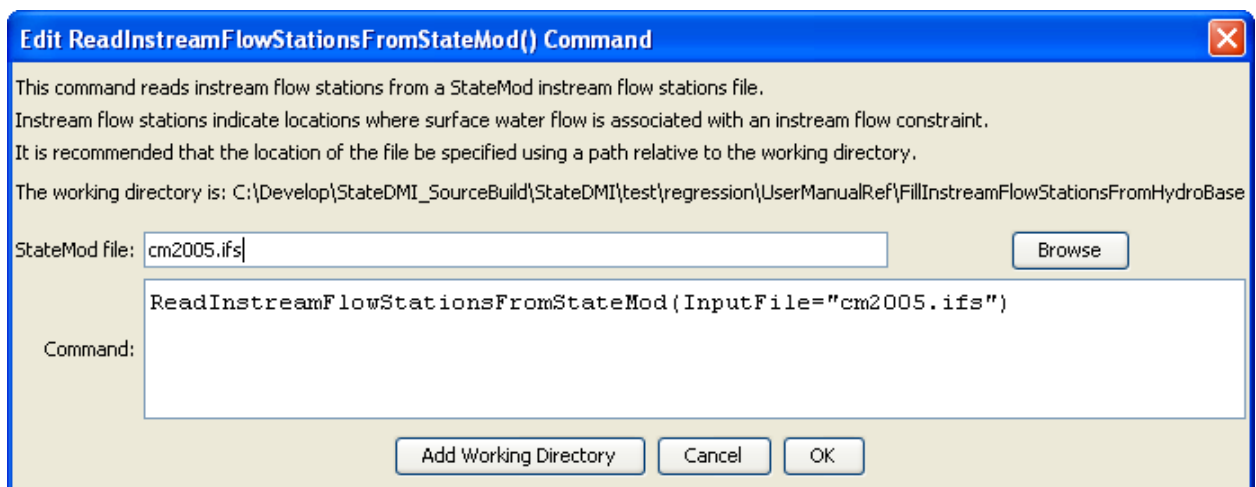

ReadInstreamFlowStationsFromStateMod

ReadInstreamFlowStationsFromStateMod() Command Editor

The command syntax is as follows:

```
ReadInstreamFlowStationsFromStateMod(Parameter=Value,...)
```

Command Parameters

| Parameter | Description | Default |
|-----------|--|---------------------------|
| InputFile | The name of the StateMod instream flow stations file to be read. | None – must be specified. |