
Command Reference: ReadStreamEstimateStationsFromStateMod()


Read stream estimate station data from a StateMod stream estimate stations file

StateMod Command

Version 3.09.01, 2010-02-01

The `ReadStreamEstimateStationsFromStateMod()` command reads a list of stream estimate stations from a StateMod stream estimate stations file and defines stream estimate stations in memory. The stream estimate stations can then be manipulated and output with other commands.

The following dialog is used to edit the command and illustrates the syntax of the command.

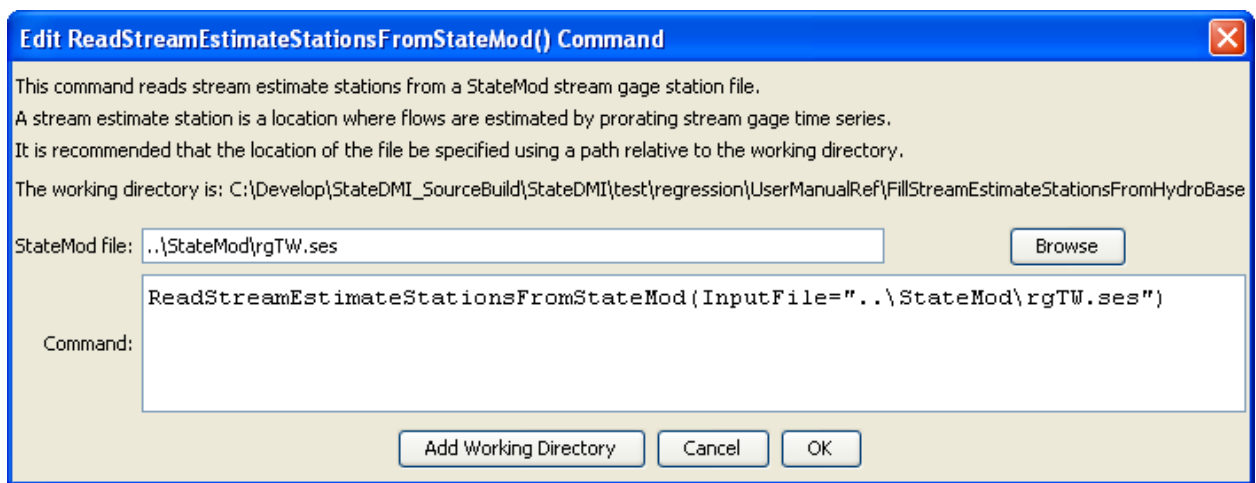

ReadStreamEstimateStationsFromStateMod

ReadStreamEstimateStationsFromStateMod() Command Editor

The command syntax is as follows:

```
ReadStreamEstimateStationsFromStateMod(Parameter=Value,...)
```

Command Parameters

Parameter	Description	Default
InputFile	The name of the StateMod stream estimate stations file to be read.	None – must be specified.