



DH152-160

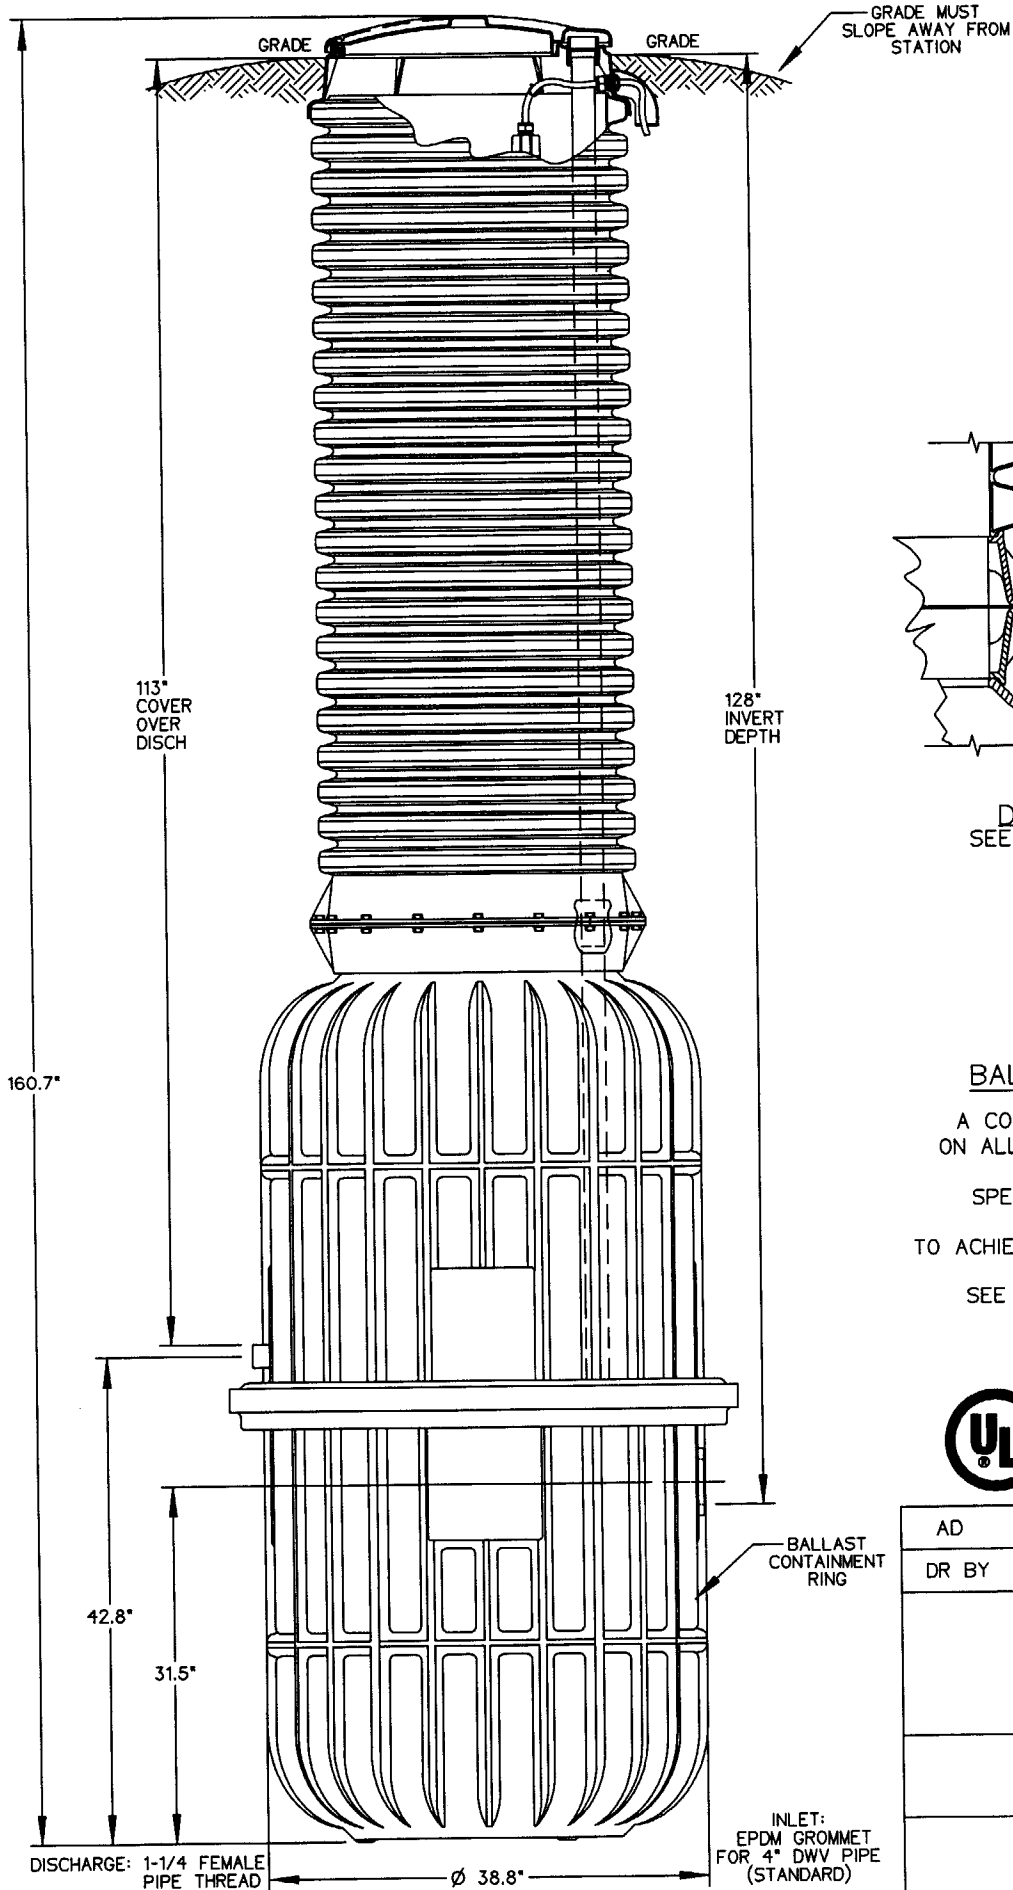

GRADE MUST SLOPE AWAY FROM STATION

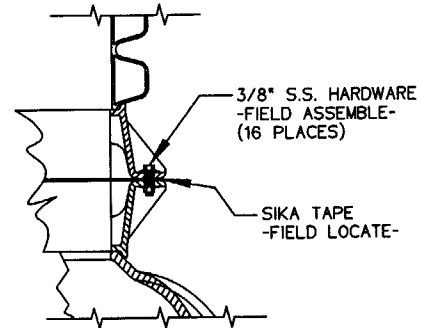

DETAIL, FIELD JOINT
SEE INSTALLATION INSTRUCTIONS
FOR FURTHER DETAILS

BALLAST REQUIREMENTS

A CONCRETE ANCHOR IS REQUIRED
ON ALL MODELS DH152-160 STATIONS

SPECIFIC CONCRETE DIMENSIONS
ARE REQUIRED
TO ACHIEVE NECESSARY BALLAST EFFECT

SEE INSTALLATION INSTRUCTIONS
FOR BALLAST DETAILS



AD	CAH	4/25/07	-	1/16
DR BY	CHK'D	DATE	ISSUE	SCALE
MODEL DH152-160				
NA0052P06				