




frequently asked questions

Connection Details for a PC to the NMEA FFD

General RS232 9-Way D-Type Serial Wiring Information

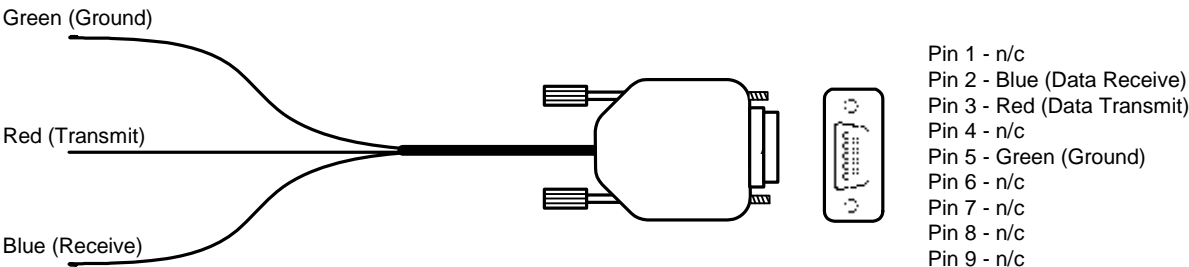

NMEA FFD Wiring (FFD's prior to s/n H054001)

NMEA FFD IN (from PC to B&G)	NMEA FFD OUT (from B&G to PC)	PC RS232 Lead	Function
Blue	Black	Green	PC Ground
~	Violet	Blue	PC Data Receive
Brown	~	Red	PC Data Transmit

NMEA FFD Wiring (FFD's from s/n H054001)

v1.5 NMEA

NMEA FFD IN (from PC to B&G)	NMEA FFD OUT (from B&G to PC)	PC RS232 Lead	Function
Blue	Black	Green	PC Ground
~	Violet	Blue	PC Data Receive
Brown	~	Red	PC Data Transmit

v2.XX NMEA

NMEA FFD IN (from PC to B&G)	NMEA FFD OUT (from B&G to PC)	PC RS232 Lead	Function
Blue	Yellow	Green	PC Ground
~	Violet	Blue	PC Data Receive
Brown	~	Red	PC Data Transmit

---0000000000---

B&G Customer Support
Premier Way
Abbey Park
Romsey
Hampshire
SO51 9DH
UK