

SS7 Simulator

Table of Contents

| | |
|--|----|
| Configuring Restcomm jSS7 Simulator..... | 1 |
| SCCP Layer of the Simulator | 1 |
| SS7 Simulator Test Cases..... | 3 |
| USSD Server..... | 3 |
| USSD Client | 4 |
| SMS Server..... | 5 |
| SMS Client | 7 |
| CAMEL SCF part..... | 12 |
| CAMEL SSF part | 13 |
| ATI Server | 14 |
| ATI Client | 14 |

SS7 Simulator is an application for testing the Restcomm jSS7 and understanding its functionality. The test cases will allow you to conduct various test scenarios and explore the Stack. The Simulator is also a good example of how to use this Stack. For details on installing the Simulator please refer to the Installation Guide. To know more about Running the Simulator please refer to [\[running_ss7_simulator\]](#) in this guide.

Before running a test all relevant layers of the Simulator must be configured. After running a test, you can perform some actions depending on the test. The results of the test are emitted as "notifications". Notifications are displayed in the GUI interface of the Simulator and JConsole application (which is also a GUI interface). Notifications are also written into a file "<host name>.log" (for example "a1.log") as well as printed onto a console.

Configuring Restcomm jSS7 Simulator

You must configure all relevant layers and the Testing Task prior to running a test with the Simulator. For details on how to launch the form for configuring the simulator, refer to [\[procedure_test_simulator\]](#).

SCCP Layer of the Simulator

SCCP layer supports message processing in two modes:

- Route on DPC and SSN mode
- Route on GlobalTitle mode

For both modes you must set the following options:

- Remote SPC
- Local SPC
- Network indicator
- Remote SSN
- Local SSN

When the SCCP layer is started, the following are created:

- Mtp3ServiceAccessPoint (using Local SPC and Network indicator) with a single Mtp3Destination (Remote SPC, all SLS's)
- RemoteSpc (using Remote SPC)
- RemoteSsn (using Remote SPC and Remote SSN)

For "Route on GlobalTitle" mode there are few extra options as below:

- GlobalTitle type ("Nature of address indicator only", "Translation type only", "Translation type,

numbering plan and encoding scheme", "Translation type, numbering plan, encoding scheme and NOA ind"), the last choice is default.

- AddressNature
- NumberingPlan
- Translation type (those four options are used for CalledPartyAddress, CallingPartyAddress and routing rules)
- CallingPartyAddress digits

If the "Route on GlobalTitle" mode is used, two rules for routing are created when the SCCP layer is started. All remotely originated messages are routed to a local user, All locally originated messages are routed to a remote user (to a peer with Remote SPC address).

SCCP layer provide CalledPartyAddress and CallingPartyAddress for upper layers and test cases. When "Route on DPC and SSN" mode is used, these are ROUTING_BASED_ON_DPC_AND_SSN with no GlobalTitle, pc=Local SPC (for CallingPartyAddress) or Remote SSN (for CalledPartyAddress), SSN=Local SSN and Remote SSN accordingly.

When "Route on GlobalTitle" mode ROUTING_BASED_ON_GT is used:

- CallingPartyAddress is created based on CallingPartyAddress digits and Local SSN.
- CalledPartyAddress is created using digits and SSN that are supplied by upper levels or test cases.

SCCP settings

Remote Spc: 2

Local Spc: 1

Network indicator: 2

Remote Ssn: 8

Local Ssn: 8

☐ Route on DPC and SSN mode

CallingPartyAddress: RoutingIndicator=RoutingOnDpcAndSsn, PC=localSpc, GT=null, SSN=localSsn
 CalledPartyAddress: RoutingIndicator=RoutingOnDpcAndSsn PC=remoteSpc, GT=null, SSN=remoteSsn

☒ Route on GlobalTitle mode

CallingPartyAddress: RoutingIndicator=RoutingOnGt, PC=0, GT=CallingPartyAddress digits, SSN=localSsn
 CalledPartyAddress: RoutingIndicator=RoutingOnGt, PC=0, GT and SSN is supplied by upper levels
 All messages will be routed to remoteSpc except messages with CallingPartyAddress digits or extra local addresses

Parameters for creating SccpAddress (when routing on GT)

GlobalTitle type: Translation type, numbering plan, encoding scheme and NOA ind

AddressNature: INTERNATIONAL

NumberingPlan: ISDN_TELEPHONY

Translation type: 0

CallingPartyAddress digits: 555555555

Load default values for side A Load default values for side B

Reload Save Cancel

Figure 1. SCCP Settings Form

SS7 Simulator Test Cases


USSD Server

UssdServer test can work in manual and automatic modes. In the manual mode a user manually inserts the response message value and sends ProcessUnstructuredSs response (or UnstructuredSs request) to the Ussd client. In the automatic mode UssdServer automatically sends a predefined message as an ProcessUnstructuredSs response ("Auto sending ProcessUnstructuredSsResponse" option) or automatically sends a predefined message as an UnstructuredSs request and then sends a predefined message ProcessUnstructuredSs response ("Auto sending Unstructured_SS_Request then after response sending ProcessUnstructuredSsResponse" option). Use "Auto sending ProcessUnstructuredSsResponse" option for UssdServer if UssdClient is used for a load test ("Auto sending ProcessUnstructuredSSRequest"). For load tests we recommend to check the option "One

notification for 100 dialogs" for preventing too many notifications when load testing.

UssdServer test can perform following tasks:

- Sending a ProcessUnstructuredSs response / UnstructuredSs request in automatic or manual modes. Ussd Client must initiate a dialog using ProcessUnstructuredSs request.
- Manually sending an UnstructuredSsNotify.

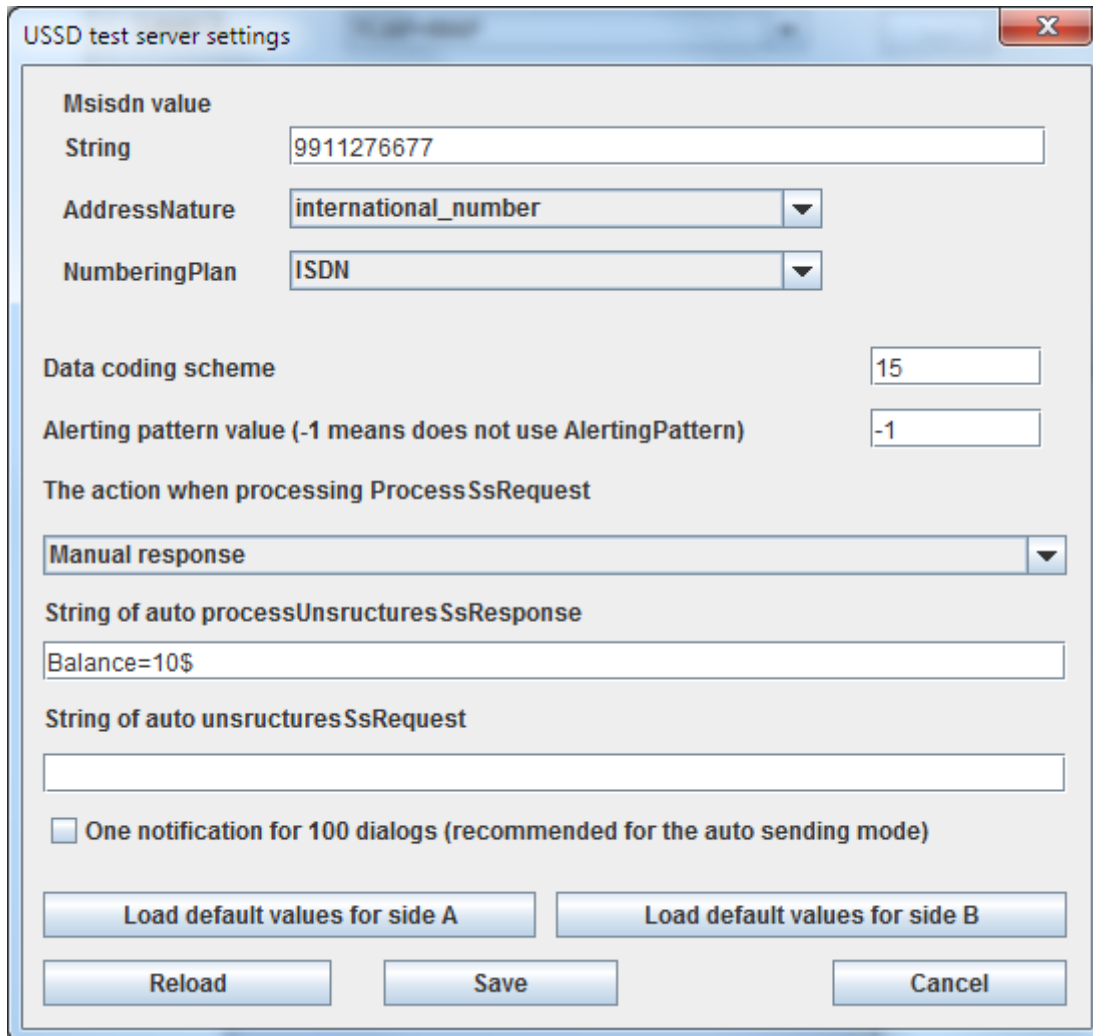

The image shows a Windows-style dialog box titled "USSD test server settings". It contains several input fields and dropdown menus. The "Msisdn value" field is a text box containing "9911276677". The "AddressNature" dropdown is set to "international_number". The "NumberingPlan" dropdown is set to "ISDN". The "Data coding scheme" field is a text box containing "15". The "Alerting pattern value (-1 means does not use AlertingPattern)" field is a text box containing "-1". The "The action when processing ProcessSsRequest" dropdown is set to "Manual response". The "String of auto processUnsructuresSsResponse" field is a text box containing "Balance=10\$". The "String of auto unsructuresSsRequest" field is an empty text box. There is a checkbox labeled "One notification for 100 dialogs (recommended for the auto sending mode)" which is currently unchecked. At the bottom, there are three buttons: "Load default values for side A", "Load default values for side B", and "Reload". At the very bottom, there are three buttons: "Reload", "Save", and "Cancel".

Figure 2. Ussd Server settings form

USSD Client

UssdClient test can perform following tasks:

- Sending a ProcessUnstructuredSs request, waiting for the answer and displaying the answer
- Sending a UnstructuredSs response as an answer for UnstructuredSs request
- Receiving UnstructuredSs notify and displaying it
- Special case for load testing: Sending to the Ussd server a flow of ProcessUnstructuredSs requests without stopping (and receiving responses).

For working in the manual mode select the option "Manual operation", for auto sending messages - the option "Auto sending ProcessUnstructuredSSRequest". You can send ProcessUnstructuredSs

request and UnstructuredSs response only manually by inserting a message text and pressing buttons. For working in the auto mode you should define the string of auto processUnstructuredSs request and the count of maximum active MAP dialogs (default value is 10). The more dialogs is defined the more messages per second will be sent. Msisdn, data coding schema and alerting pattern values should be also configured before test starting. For the auto mode we recommend to check the option "One notification for 100 dialogs" for preventing too many notifications when load testing.

You can send ProcessUnstructuredSs request and UnstructuredSs response manually by inserting a message text and pressing buttons. You can not send a new ProcessUnstructuredSs request till the response for previos request has been received (or till dialog timeout). You can also manually close the current dialog by pressing "Close current dialog" button.

USSD test client settings

General SRI response

Msisdn value

String 8923445566

AddressNature international_number

NumberingPlan ISDN

Data coding scheme (15-GSM7, 72-UCS2) 15

Alerting pattern value (-1 means does not use AlertingPattern) -1

Ussd client mode

Manual operation

String of auto processUnsructuresSs request

*123#

The count of maximum active MAP dialogs when the auto sending mode

10

☐ One notification for 100 dialogs (recommended for the auto sending mode)

Load default values for side A Load default values for side B

Reload Save Cancel

Figure 3. Ussd Client settings form

SMS Server

SMS Server simulates the behavior of SMSC, it can:

- Send sendRoutingInfoForSM to the HLR and receive the response
- Send mt-forwardSM to the VLR and receive the response

- Send sendRoutingInfoForSM to the HLR, receive the response and send mt-forwardSM using data from the first request
- Receive mo-forwardSM request from VLR and display the received message

We need to set the following options to SMS server:

- AddressNature and NumberingPlan for AddressString creation
- TypeOfNumber and NumberingPlanIdentification SMS tpdu addresses
- MAP protocol version (1, 2 or 3) (version 3 is default)
- Character set for SMS message encoding (GSM7 or UCS2)
- Origination Service center address string (this address must be equal the SCCP layer CallingPartyAddress digits)
- HLR and VLR SSN values (default values are 8 and 6)



if you want to use SMS Server and SMS Client for sending SMS to each other: set HLR SSN at SMS Server the equal value that VLR SSN (8 in our case)

Figure 4. SMS client settings form

After starting SMS server you can:

- For sending sendRoutingInfoForSM ("Send SRIForSM" button) we should set "Destination ISDN number"
- For sending sendRoutingInfoForSM and then mt-forwardSM ("Send SRIForSM + MtForwardSM" button) we should set "Message text", "Destination ISDN number" and "Origination ISDN number"
- For sending mt-forwardSM only ("Send MtForwardSM" button) we should set "Message text", "IMSI", "VLR number" and "Origination ISDN number"

SMS Client

SMS Client simulates the behavior of HLR or VLR, it can:

- Receive sendRoutingInfoForSM from SMSC and send as a response predefined IMSI and VLR number
- Receive mt-forwardSM from SMSC and display the received message
- Send mo-forwardSM to the SMSC

We need to set the following options to SMS client:

- AddressNature and NumberingPlan for AddressString creation
- TypeOfNumber and NumberingPlanIdentification SMS tpdu addresses
- MAP protocol version (1, 2 or 3) (version 3 is default)
- Character set for SMS message encoding (GSM7 or UCS2)
- Destination Service center address string (this address must be equal the SCCP layer CallingPartyAddress digits)
- SMSC SSN value (default value is 8)
- IMSI and VLR addresses values that will be used when responding on sendRoutingInfoForSM

SMS test client settings

General SRI response MtFSM response MoFSM request ReportSMDeliveryStatus response

MAP protocol version MAP protocol version 3

SMSC SSN for outgoing SccpAddress (default value: 8) 8

☐ One notification for 100 dialogs (recommended for bulk message mode)

☐ Return 20% delivery errors for SRI or MtForwardSM Requests

Load default values for side A Load default values for side B

Reload Save Cancel

SMS test client settings

General

SRI response

MtFSM response

MoFSM request

ReportSMDeliveryStatus response

IMSI for auto sendRoutingInfoForSM response

555667

VLR address for auto sendRoutingInfoForSM response

8786876

Reaction for SRI request

Return success

Sending InformServiceCenter for SRI request

No data in MWD file

☐ InformServiceCentre: ServiceCenter Address is not included in MWD

Load default values for side A

Load default values for side B

Reload

Save

Cancel

SMS test client settings

General SRI response **MtFSM response** MoFSM request ReportSMDeliveryStatus response

Reaction for MtFSM request Return success

☐ Continue dialog after MtForwardSM receiving (MtForwardSM response in TC-CONTINUE)

Load default values for side A Load default values for side B

Reload Save Cancel

SMS test client settings

General

SRI response

MtFSM response

MoFSM request

ReportSMDeliveryStatus response

Parameters for SMS tpdu destAddress

TypeOfNumber

InternationalNumber

NumberingPlanIdentification

ISDNTelephoneNumberingPlan

Character set for SMS encoding

GSM7

Parameters for AddressString creation

AddressNature

international_number

NumberingPlan

ISDN

Destination Service center address string

1111

Load default values for side A

Load default values for side B

Reload

Save

Cancel

11

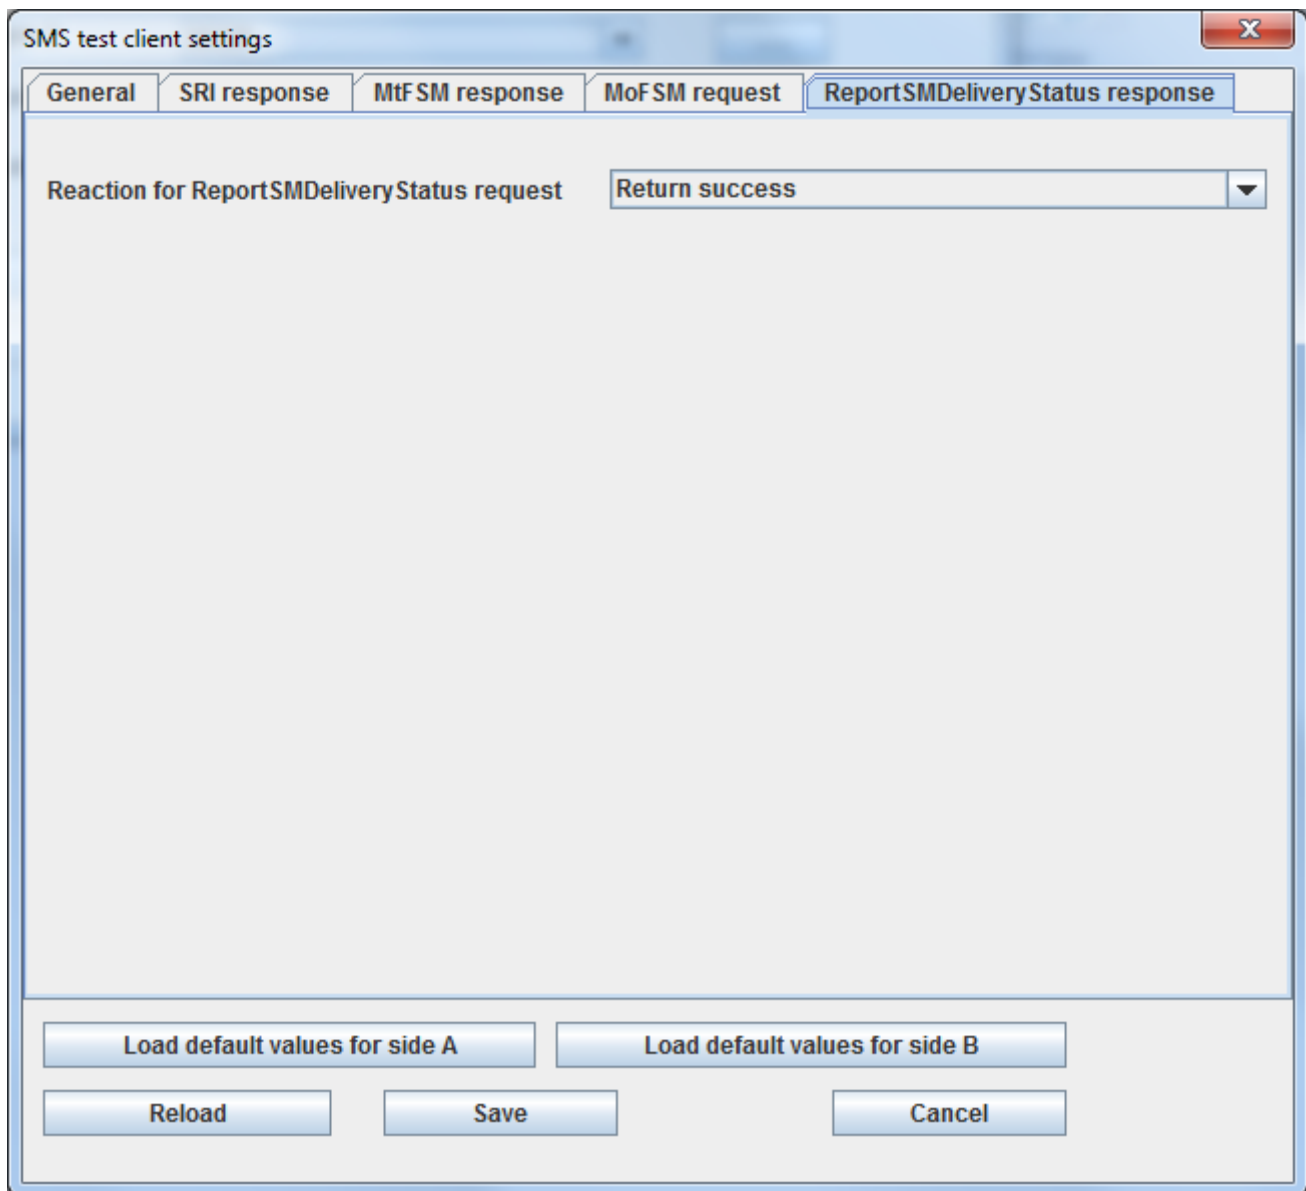


Figure 5. SMS client settings form

After starting SMS client you can:

- For sending mo-forwardSM ("Send MoForwardSM" button) we should set "Message text", "Destination ISDN number" and "Origination ISDN number"
- When receiving sendRoutingInfoForSM client automatically generate a response with preconfigured IMSI and VLR address

CAMEL SCF part

CAMEL SCF part simulates the behavior of CAMEL Service Control Function, it can:

- Send InitiateCallAttempt message to CAMEL SSF
- Send ApplyCharging message to CAMEL SSF
- Send Cancel message to CAMEL SSF
- Send Connect message to CAMEL SSF
- Send Continue message to CAMEL SSF

- Send ReleaseCall message to CAMEL SSF
- Send RequestReportBCSMEvent message to CAMEL SSF

We need to set the following options to CAMEL SCF:

- CAP Application content

Parameters of messages are hardcoded in current version and can not be configured.

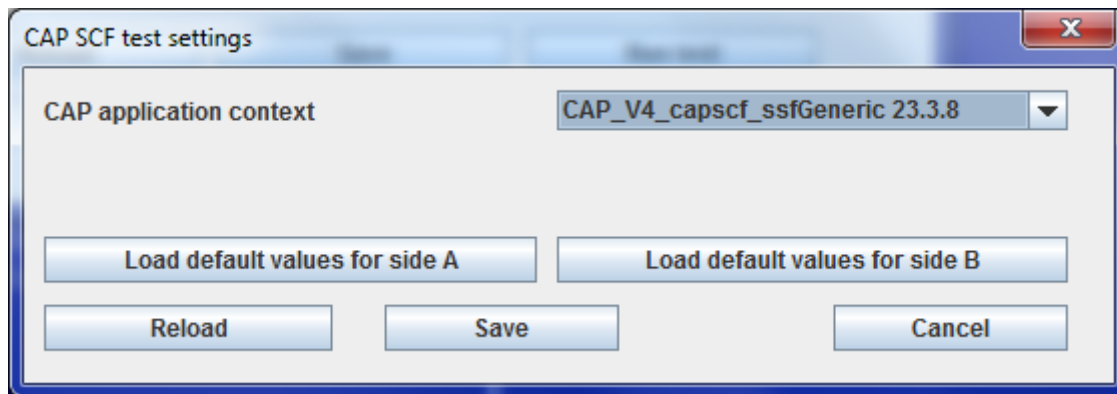


Figure 6. CAMEL SCF settings form

After CAMEL SCF server starting you can:

- For initiating of CAP dialog and sending InitiateCallAttempt - press "InitiateCallAttempt" button.
- For continuing of CAP dialog with sending ApplyCharging, Cancel, Connect, Continue, ReleaseCall or RequestReportBCSMEvent - press corresponded buttons.
- For ending of CAP dialog - press "Close Dialog" button.

CAMEL SSF part

CAMEL SSF part simulates the behavior of CAMEL Service Switching Function, it can:

- Send InitialDP message to CAMEL SCF
- Send AssistRequestInstructions message to CAMEL SCF
- Send ApplyChargingReport message to CAMEL SCF
- Send EventReportBCSM message to CAMEL SCF

We need to set the following options to CAMEL SSF:

- CAP Application content

Parameters of messages are hardcoded in current version and can not be configured.

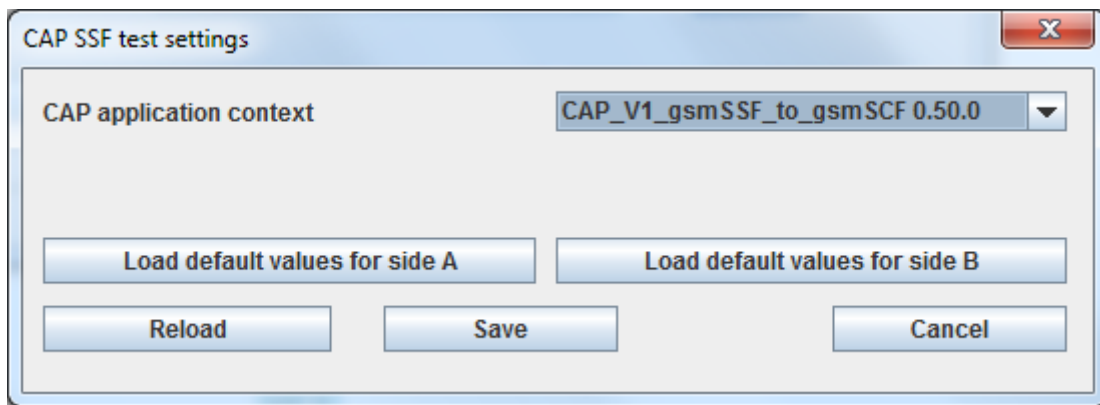


Figure 7. CAMEL SSF settings form

After CAMEL SSF server starting you can:

- For initiating of CAP dialog and sending InitialDP or AssistRequestInstructions message - press corresponded button.
- For continuing of CAP dialog with sending ApplyChargingReport or EventReportBCSM - press corresponded buttons.
- For ending of CAP dialog - press "Close Dialog" button.

ATI Server

ATI operation server task can be used for responding for AniTImeInterrogation MAP request. There are no configurable options for this mode now. SS7 Simulator will auto respond with ARI response with hardcoded parameters.

ATI Server test can perform following tasks:

- Auto sending of ATI Response.

ATI Client

ATI Client test can perform following tasks:

- Sending a AnyTimeInterrogation MAP (ATI) request and displaying of ATI response.

For sending of ATI Request we need to specify IMSI / MSISDN digits and push "Send ATI Request" button.

Before running of ATI Client a user need to specify parameters:

- Subscriber identity type (IMSI / MSISDN (default)).
- AddressNature and NumberingPlan for AddressString Creation.
- Requested info - which parameters will be requested from ATI server.
- GSM SCF address digits.

ATI test client settings

Subscriber identity type ☐ IMSI ☒ MSISDN

Parameters for AddressString creation

AddressNature

NumberingPlan

Requested info in ATI request

☐ Location Information

☐ Subscriber State

☐ Current Location

Domain Type ☒ No value ☐ csDomain ☐ psDomain

☐ Imei

☐ Ms Classmark

☐ Mnp Requested Info

Gsm SCF address digits

Load default values for side A Load default values for side B

Reload Save Cancel

Figure 8. ATI Client settings form