

Quick Start Guide

56-Port 25G/100G Top-of-Rack Switch

AS7326-56X

Package Contents



1



2




3



4



5



6



7

1. 25G/100G Top-of-Rack switch AS7326-56X
2. Rack Mounting Kit—2 front-post brackets, 2 rear-post brackets, 20 screws, and 2 ear-locking screws
3. Power cord (included with AC PSUs only)
4. Ground wire (included with DC PSUs only)
5. Dust Cover Kit—8 for QSFP28 ports and 50 for SFP28 ports
6. DC power cable (included with 48 VDC PSU only)
7. Documentation—Quick Start Guide (this document) and Safety and Regulatory Information



Caution: The device must be installed in a restricted-access location.

Attention: le périphérique doit être installé dans un emplacement à accès restreint.




Caution: The switch includes plug-in power supply (PSU) and fan tray modules that are installed into its chassis. All installed modules must have a matching airflow direction. That is, if the installed power modules have a front-to-back (F2B) airflow direction, all the installed fan tray modules must also have a F2B airflow direction.

Attention: Le commutateur comprend des modules d'alimentation et de bac de ventilateurs installés sur son châssis. Tous les modules installés doivent avoir une direction de circulation d'air correspondante. C'est-à-dire que tous les modules doivent avoir la même direction de circulation d'air : avant vers arrière (F2B), ou arrière vers avant (B2F).



Note: The switch has the Open Network Install Environment (ONIE) software installer pre-loaded on the switch, but no switch software image. Information about compatible switch software can be found at www.edge-core.com.

1 Attach the Brackets

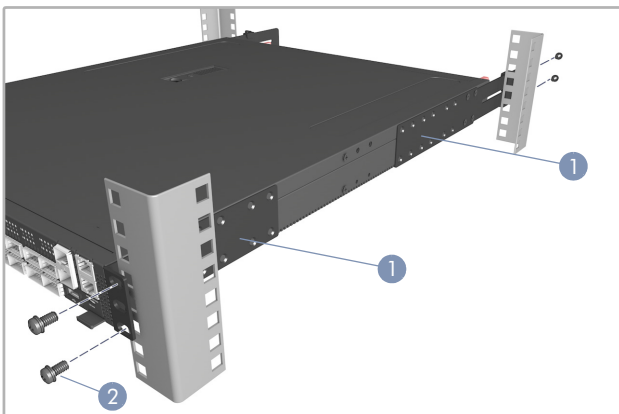


1. Attach each of the front- and rear-post brackets to the switch using four of the included bracket screws.
2. Use the screws and cage/clip nuts supplied with the rack to secure the switch in the rack.



Caution: Installing the switch in a rack requires two people. One person should position the switch in the rack, while the other person secures it using the rack screws.

Attention: Deux personnes sont nécessaires pour installer un commutateur dans un bâti : La première personne va positionner le commutateur dans le bâti, la seconde va le fixer avec des vis de montage.


2 Adjust Rear-Post Bracket Ears

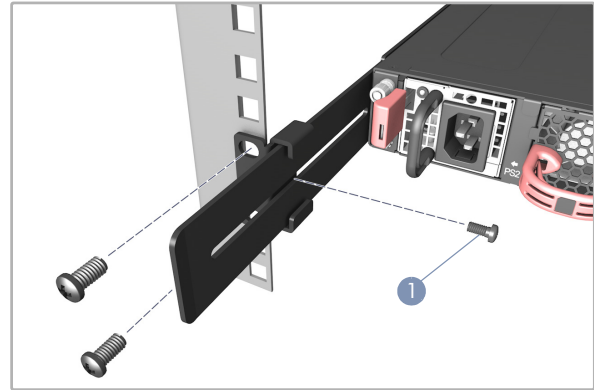

1. Lock the position of the rear-post bracket ears using the included position-locking screws.

You can adjust the rear-post bracket ears to fit different rack depths from 56 cm to 75 cm.

3 Ground the Switch

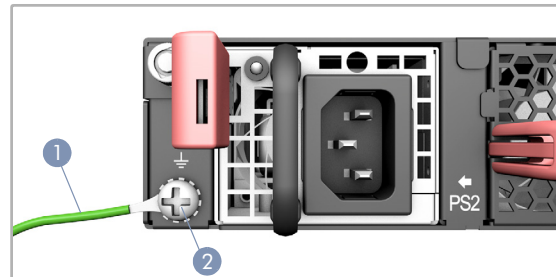


1. Ensure the rack is properly grounded and in compliance with ETSI ETS 300 253. Verify that there is a good electrical connection to the grounding point on the rack (no paint or isolating surface treatment).
2. Attach the grounding wire (#14 AWG) to the grounding point on the switch rear panel. Then connect the other end of the wire to rack ground.



Caution: The earth connection must not be removed unless all supply connections have been disconnected.

Attention: Le raccordement à la terre ne doit pas être retiré sauf si toutes les connexions d'alimentation ont été débranchées.

4 Connect Power

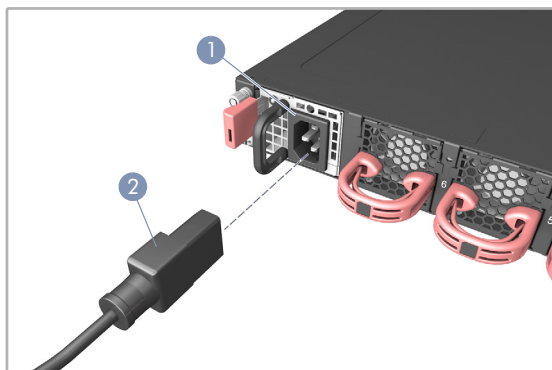

1. Install one or two AC or DC PSUs in the switch.


The switch supports up to two PSUs that must have the same matching airflow direction as the installed fan trays.

2. Connect an external AC or DC power source to the PSUs.




Caution: Use a UL/IEC/EN 60950-1 certified power supply to connect to a DC converter, and a #14 AWG (for -36 VDC to -72 VDC PSU) wire to connect to a DC PSU.

Attention: Utilisez une alimentation certifiée UL/IEC/EN 60950-1 pour le connecter à un convertisseur CC et un câble AWG #14 (pour -36 VDC à -72 VDC) pour vous connecter à une alimentation CC.

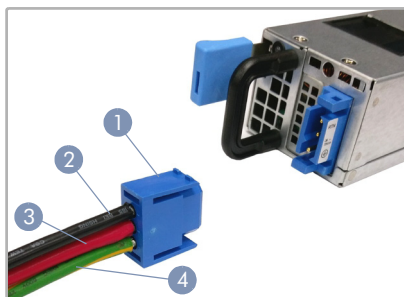

1. Positronic PLA03F7000/AA connector
2. DC Return (black wire)
3. -36 – -72 VDC (red wire)
4. Ground (yellow-green wire)

5 Verify Switch Operation

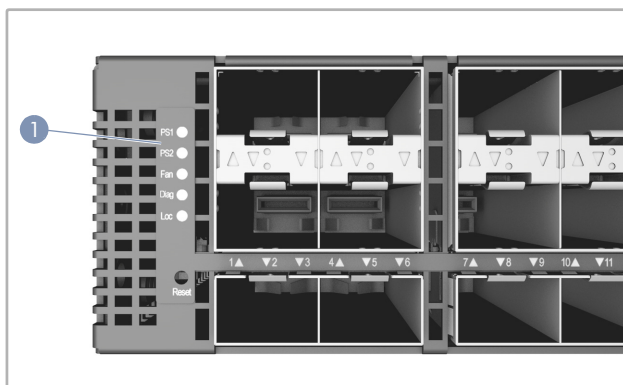

1. Verify basic switch operation by checking the system LEDs.

When operating normally, the PSU1/PSU2, Diag, and Fan LEDs should all be on green.

6 Perform Initial System Boot


1. If the network operating system (NOS) installer is located on a network server, first connect the RJ-45 Management (Mgmt) port to the network using 100-ohm Category 5, 5e or better twisted-pair cable. (Not required if the NOS installer is located on attached storage.)
2. Boot the switch. Wait for the ONIE software to locate and execute the NOS installer, and then wait for the installer to load the NOS software image.

Subsequent switch boots will bypass ONIE and directly run the NOS software.



Note: Refer to the network operating system (NOS) installer and NOS documentation for details on software options and set up for ONIE.

7 Connect Network Cables

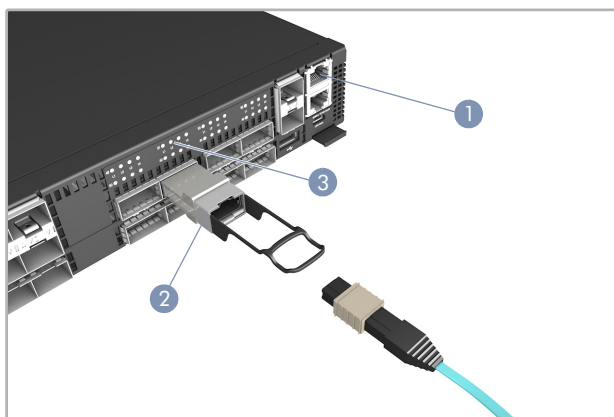

1. For the RJ-45 Management port, connect 100-ohm Category 5, 5e or better twisted-pair cable.
2. Connect DAC cables to the SFP28/QSFP28 slots. Or first install SFP28/QSFP28 transceivers in the slots and then connect fiber optic cabling to the transceiver ports.
3. As connections are made, check the port status LEDs to be sure the links are valid.

For the SFP28 ports:

- Green — 25 Gbps mode
- Yellow — 10 Gbps mode

Each QSFP28 port has four LEDs that indicate valid links in the following modes:

- 1 LED Green — 100 Gbps mode
- 1 LED Blue — 40 Gbps mode
- 1-4 LEDs Yellow — 25 Gbps breakout mode (four lanes)
- 1-4 LEDs Purple — 10 Gbps breakout mode (four lanes)

Hardware Specifications

Switch Chassis

Size (WxDxH) 438.4 x 536 x 43.5 mm (17.26 x 21.1 x 1.71 in.)

Weight 10 kg (22.05 lb), with two installed PSUs

Temperature F2B Operating: 0° C to 45° C (32° F to 113° F)
B2F Operating: 0° C to 40° C (32° F to 104° F)
Storage: -40° C to 70° C (-40° F to 158° F)

Humidity Operating: 5% to 95% (non-condensing)

Power Consumption 550 Watts maximum

AC PSU

Power Rating 100–240 VAC, 50-60 Hz, 650 Watts

AC Input 100–240 VAC, 50-60 Hz, 6 A maximum

48 VDC PSU

Power Rating 48 VDC, 650 Watts

DC Input -36 V – -72 V, 16 A maximum

Regulatory Compliances


Emissions EN 55032:2015+AC:2016, Class A
EN 61000-3-2:2014, Class A
EN 61000-3-3:2013
FCC Class A
VCCI Class A
CCC GB 9254-2008, Class A
BSMI Class A, CNS 13438

Immunity EN 55024:2010+A1:2015
IEC 61000-4-2/3/4/5/6/8/11

Safety UL (CSA 22.2 No 60950-1 & UL60950-1)
CB (IEC/EN60950-1)
CCC GB4943.1-2011
BSMI, CNS 14336-1

Taiwan RoHS CNS 15663

包装清单

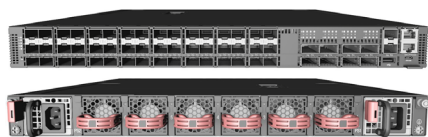

1



2




3



4



5



6



7

1. 25G 以太网交换机 AS7326-56X
2. 机架安装套件 — 2 个前柱支架，2 个后柱支架，20 个螺丝，2 个耳锁定螺丝
3. 电源线（仅随交流电源附带）
4. 接地线（仅随直流电源附带）
5. 防尘盖套件 — 对于 QSFP28 端口为 8 个，SFP28 端口为 50 个
6. DC 电源线（仅随 48 VDC 电源附带）
7. 文档 — 快速入门指南（本文档）以及安全和管制信息



小心： 必须将设备安装在限制访问的位置。




小心： 本交换机包括插入式电源 (PSU) 以及安装在其机箱中的风扇架模块。所有已安装模块都要求合适的气流方向。即，如果安装的电源模块有从前到后 (F2B) 的气流通过，则所有安装的风扇架模块也必须有 F2B 气流通过。



注意： 本交换机上已预装了 Open Network Install Environment (ONIE) 软件安装程序，但没有交换机软件映像。在以下网站可以找到有关兼容交换机软件的信息：
www.edge-core.com。

1 安装支架

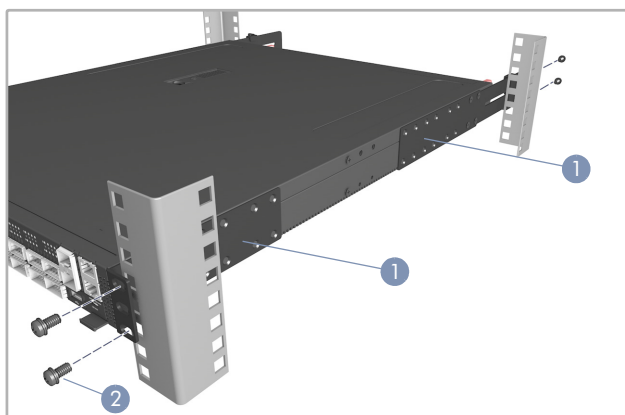


1. 使用四个随附的支架螺丝将各个前柱和后柱支架安装到交换机。
2. 使用机架附带的螺丝和笼具 / 夹子螺母将交换机固定在机架中。




小心： 将此交换机安装在机架中时需要两个人。一个人应在机架中托住交换机，另一个人使用机架螺丝固定它。

2 调整后柱支架吊耳

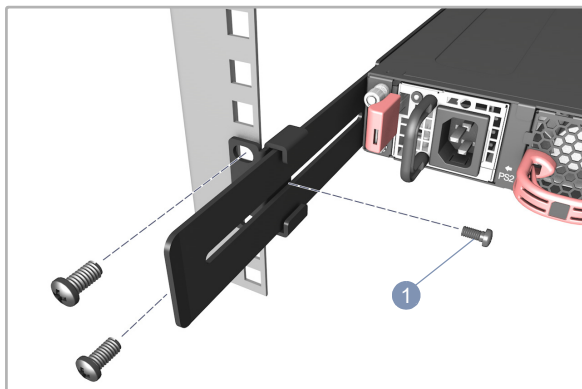

1. 使用随附的定位螺丝固定后柱支架吊耳的位置。
您可以调节后柱支架吊耳以适合 56 cm 到 75 cm 的不同机架深度。

3 将交换机接地

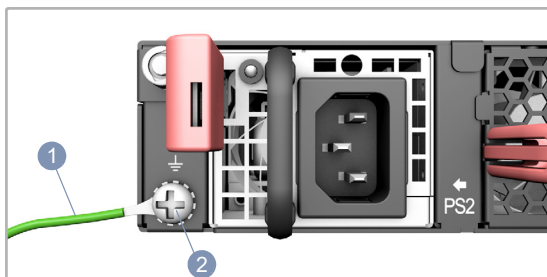


1. 确保机架已正确接地并符合 ETSI ETS 300 253 规范。确认到机架上接地点的电力连接良好（未经过油漆或绝缘表面处理）。
2. 将接地线 (#14 AWG) 连接到交换机后面板上的接地点。然后将的另一端连接到机架接地端。



小心： 必须在所有电源连接都断开的情况下才能移除接地连接。


4 连接电源

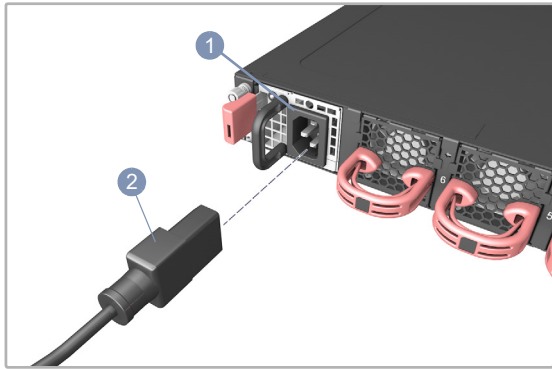

1. 将一个或两个 AC 或 DC PSU 安装在交换机中。
此交换机最多支持 2 个 PSU，并且它们的气流方向必须与所安装的风扇架相符。
2. 将外部 AC 或 DC 电源连接到 PSU。




小心： 使用 UL/IEC/EN 60950-1 认证电源连接到 DC 转换器，使用 #14 AWG（对于 -36 VDC 到 -72 VDC PSU）线连接到 DC PSU。

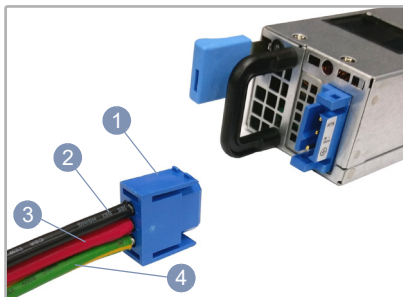

1. Positronic PLA03F7000/AA 连接器
2. DC 回路（黑线）
3. -36 – -72 VDC（红线）
4. 接地（黄绿线）

5 检查交换机运行

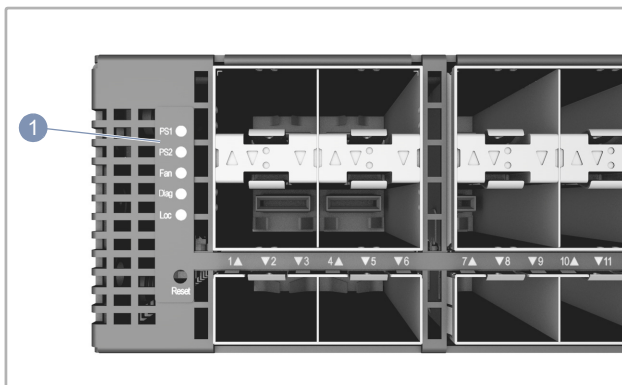

1. 通过系统 LED 检查交换机的基本运行。
若运行正常，PSU1/PSU2、Diag 和 Fan 等 LED 都应显示绿色。


6 执行初次系统启动

1. 如果网络操作系统 (NOS) 安装程序位于网络服务器中，应首先使用 100 欧姆的 5、5e 类或以上双绞线将 RJ-45 管理 (Mgmt) 端口连接到网络。（NOS 安装程序位于相连的存储装置中时不需要。）
2. 启动交换机。等待 ONIE 软件找到和执行 NOS 安装程序，然后等待安装程序加载 NOS 软件映像。
以后交换机启动时将跳过 ONIE 而直接运行 NOS 软件。



注意： 请参考网络操作系统 (NOS) 安装程序和 NOS 文档以详细了解软件选项和如何设置 ONIE。

7 连接网线

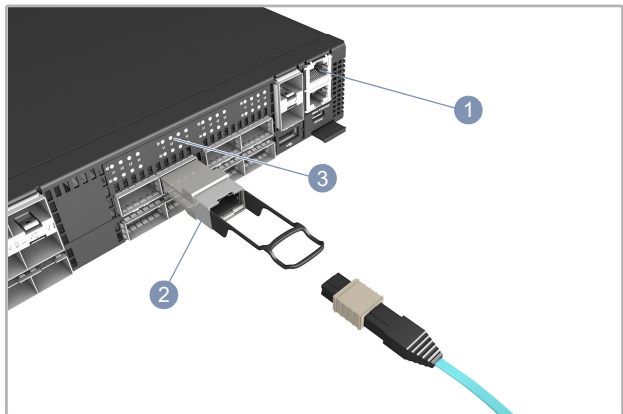

1. 对于 RJ-45 管理端口，连接 100 欧姆 5、5e 类或以上的双绞线。
2. 将 DAC 线连接到 SFP28/QSFP28 插槽。或者先将 SFP28/QSFP28 收发器安装到插槽，然后将光缆连接到收发器端口。
3. 建立连接后，检查端口状态 LED，确保连接正常。

对于 SFP28 端口：

- 绿色 — 25 Gbps 模式
- 黄色 — 10 Gbps 模式

每个 QSFP28 端口有四个 LED，在以下模式中指示正常连接：

- 1 LED 绿色 — 100 Gbps 模式
- 1 LED 蓝色 — 40 Gbps 模式
- 1-4 LED 黄色 — 25 Gbps 突破模式（四通道）
- 1-4 LED 紫色 — 10 Gbps 突破模式（四通道）

硬件规格

交换机机箱

尺寸 (WxDxH) 438.4 x 536 x 43.5 mm (17.26 x 21.1 x 1.71 英寸)

重量 10 kg (22.05 磅), 安装有两个 PSU

温度 F2B 操作时: 0° C 到 45° C (32° F 到 113° F)
 B2F 操作时: 0° C 到 40° C (32° F 到 104° F)
 存放时: -40° C 到 70° C (-40° F 到 158° F)

湿度 操作时: 5% 到 95% (非冷凝)

功耗 最大 550 W

AC PSU

电源额定值 100–240 VAC, 50-60 Hz, 650 W

交流输入 100–240 VAC, 50-60 Hz, 6 A 最大

48 VDC PSU

电源额定值 48 VDC, 650 W

直流输入 -36 V – -72 V, 最大 16 A

管制符合性

辐射

EN 55032:2015+AC:2016, A 级
 EN 61000-3-2:2014, A 级
 EN 61000-3-3:2013

FCC A 级

VCCI A 级

CCC GB 9254-2008, A 级

BSMI A 级, CNS 13438

抗干扰性

EN 55024:2010+A1:2015

IEC 61000-4-2/3/4/5/6/8/11

安全

UL (CSA 22.2 No 60950-1 & UL60950-1)

CB (IEC/EN60950-1)

CCC GB4943.1-2011

BSMI, CNS 14336-1

台湾 RoHS

CNS 15663

快速入門指南

25G 乙太網路交換器

AS7326-56X

包裝內容物



1



2




3



4



5



6



7

1. 25G 乙太網路交換器 AS7326-56X

2. 機櫃安裝套件 — 2 個前柱托架、2 個後柱托架、20 個螺絲和 2 個固定片鎖定螺絲

3. 電源線（僅 AC PSU 隨附）

4. 接地線（僅 DC PSU 隨附）

5. 防塵蓋套件 — 8 個用於 QSFP28 連接埠和 50 個用於 SFP28 連接埠

6. DC 電源線（僅 48 VDC PSU 隨附）

7. 文件 — 快速入門指南（本文件）及安全及法規資訊



注意：裝置必須安裝在限制進入地點。




注意：交換器包含安裝在其機箱中的插入式電源（PSU）和風扇托盤模組。所有已安裝之模組氣流方向，必須一致。亦即，若已安裝之電源模組具有從前到後（F2B）氣流方向，則所有已安裝之風扇托盤模組也必須具有 F2B 氣流方向。



說明：交換器上有預載入的開放網路安裝環境（ONIE）軟體安裝程式，但沒有交換器軟體映像檔。關於相容交換器軟體的資訊可參閱：
www.edge-core.com。

1 安裝托架

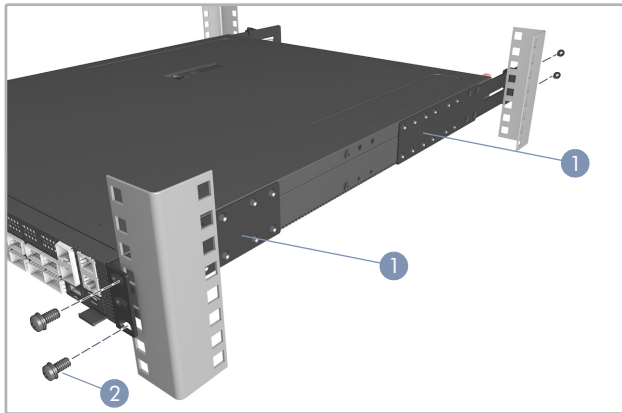


1. 利用四個所附之托架螺絲，將前柱和後柱托架安裝在交換器上。

2. 使用隨機櫃提供的螺絲及籠罩 / 夾片螺帽，將交換器固定在機櫃上。




注意：需要兩個人，將交換器裝到機櫃上。一個人應將交換器放到機櫃中，而另一個人使用機櫃螺絲將其固定。

2 調整後柱托架固定片

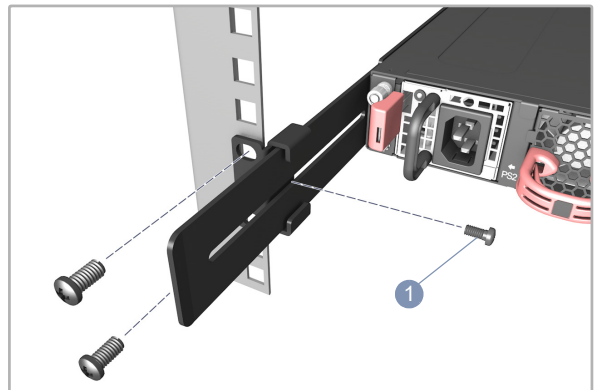

1. 利用所附的定位螺絲，鎖緊後柱托架固定片位置。您可以調整後柱托架固定片，裝配 56 cm 至 75 cm 不同的機櫃深度。

3 將交換器接地

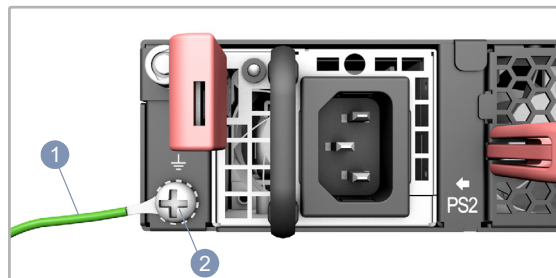


1. 請確保機櫃正確接地，並符合 ETSI ETS 300 253。確認與機櫃接地點間有良好的電氣連接性（無油漆或絕緣表面處理）。
2. 將接地線（#14 AWG）安裝在交換器後面板接地點上。接下來，將接地線另一端連接至機櫃接地。



注意：在切斷所有電源接線前，不得移除接地連接。


4 連接電源

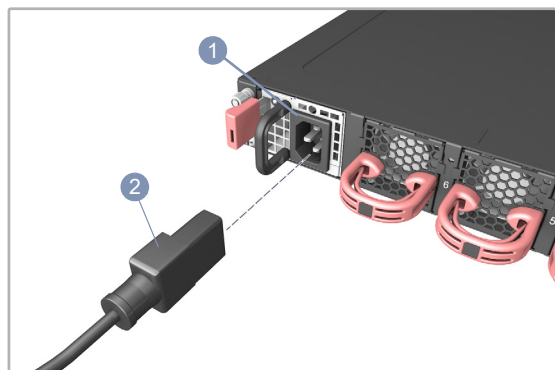

1. 在交換器中安裝 1 個或 2 個 AC 或 DC PSU。
交換器最多可支援兩個 PSU，其氣流方向必須與已安裝之風扇托盤一致。
2. 將外部 AC 或 DC 電源連接至 PSU。




注意：使用 UL/IEC/EN 60950-1 認證電源連接至 DC 轉換器，並使用 #14 AWG（用於 -36 VDC 至 -72 VDC PSU）接地線連接至 DC PSU。

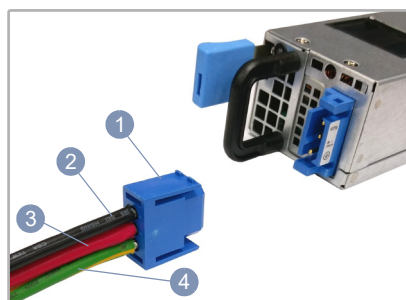

1. Positronic PLA03F7000/AA 接頭
2. DC 回流（黑線）
3. -36 – -72 VDC（紅線）
4. 接地（黃綠線）

5 確認交換器操作

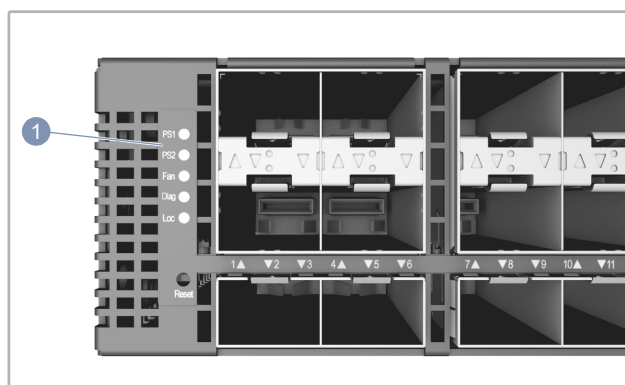

1. 檢查系統 LEDs，確認交換器基本操作。
正常操作時，PSU1/PSU2、Diag 及 Fan LED 均應為綠燈。


6 執行初次系統啟動

1. 若網路作業系統（NOS）安裝程式位於網路伺服器，先使用 100-ohm 第 5 類、5e 類或更優之雙絞線電纜，連接 RJ-45 管理（Mgmt）埠至網路。（若 NOS 安裝程式位於所附儲存設備中，則不需要。）
2. 啟動交換器。等待 ONIE 軟體找尋並執行 NOS 安裝程式，並等待安裝程式載入 NOS 軟體映像檔。
之後交換器啟動時，會跳過 ONIE，直接運行 NOS 軟體。



備註：有關 ONIE 軟體選項和設置的詳細資訊，請參閱網路作業系統（NOS）安裝程式和 NOS 文件。

7 連接網路線

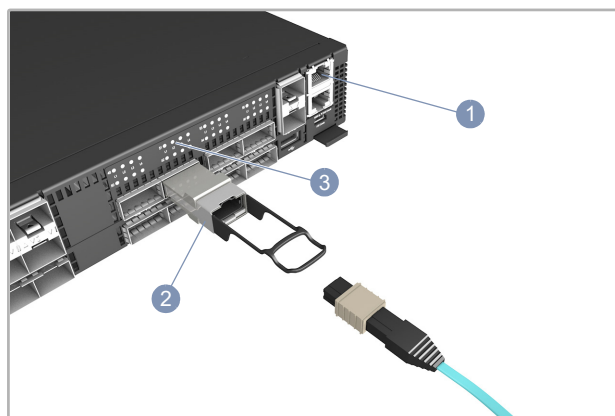

1. 使用 100-ohm 第 5 類、5e 類或更優之雙絞線電纜，連接至 RJ-45 管理埠。
2. 連接 DAC 電纜至 SFP28/QSFP28 插槽。或先將 SFP28/QSFP28 收發器裝到插槽中，然後連接光纖電纜至收發器埠。
3. 連接完成後，請檢查連接埠狀態 LED，確保連結有效。

SFP28 連接埠：

- 綠色 – 25 Gbps 模式
- 黃色 – 10 Gbps 模式

每個 QSFP28 連接埠有四個 LED，可指出在以下模式中的有效連結：

- 1 個 LED 亮綠光 – 100 Gbps 模式
- 1 個 LED 亮藍光 – 40 Gbps 模式
- 1-4 個 LED 亮黃光 – 25 Gbps 突圍模式（四道）
- 1-4 個 LED 亮紫光 – 10 Gbps 突圍模式（四道）

硬體規格

交換器機箱

尺寸 438.4 x 536 x 43.5 mm (17.26 x 21.1 x 1.71 吋)
(寬 x 深 x 高)

重量 10 kg (22.05 磅)，包含兩個安裝 PSU

溫度 F2B 操作：0° C 至 45° C (32° F 至 113° F)
B2F 操作：0° C 至 40° C (32° F 至 104° F)
儲存：-40° C 至 70° C (-40° F 至 158° F)

濕度 操作：5% 至 95% (無凝結)

耗電量 最大為 550 瓦

AC PSU

額定功率 100-240 VAC、50-60 Hz、650 瓦

AC 輸入 100-240 VAC、50-60 Hz、最大 6 A

48 VDC PSU

額定功率 48 VDC、650 瓦

DC 輸入 -36 V – -72 V、最大 16 A

法規符合性

排放 EN 55032:2015+AC:2016、等級 A (Class A)
EN 61000-3-2:2014、等級 A (Class A)
EN 61000-3-3:2013

FCC 等級 A (Class A)

VCCI 等級 A (Class A)

CCC GB 9254-2008、等級 A (Class A)

BSMI 等級 A (Class A)、CNS 13438

電磁耐受性 EN 55024:2010+A1:2015
IEC 61000-4-2/3/4/5/6/8/11

安全性 UL (CSA 22.2 No 60950-1 & UL60950-1)
CB (IEC/EN60950-1)
CCC GB4943.1-2011
BSMI、CNS 14336-1

臺灣限用有害
物質指令
(RoHS) CNS 15663