




1)
(i) First Quadrant

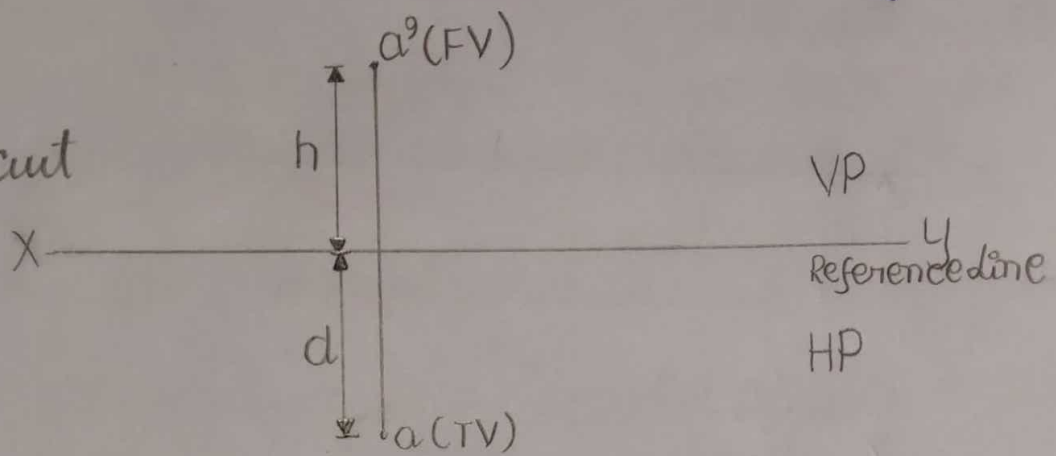

ii) Second Quadrant

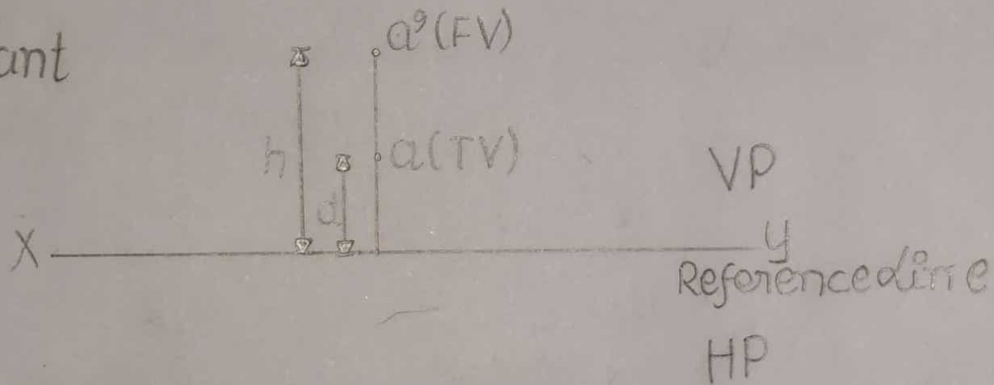


2) Second Quadrant

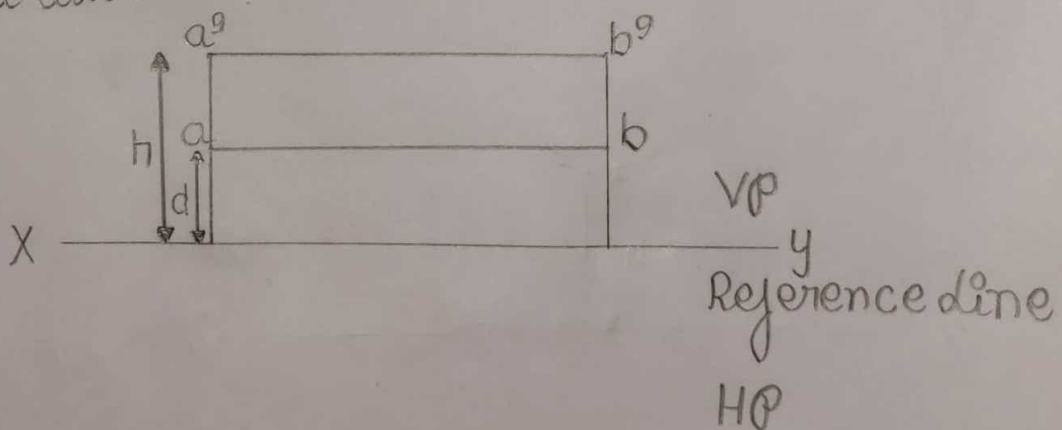


2) ii) Fourth Quadrant


Parth Dohra
2K20/B17/33
Pg 2

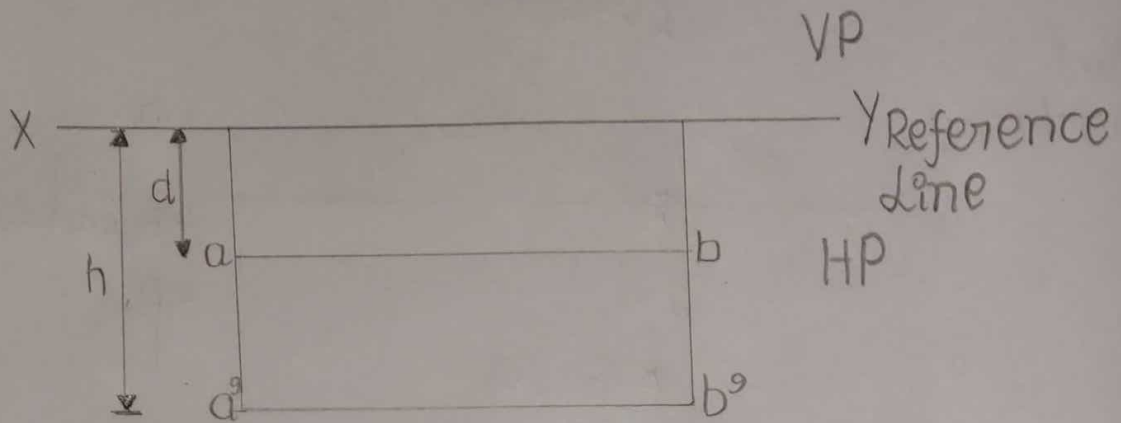

3)
i)

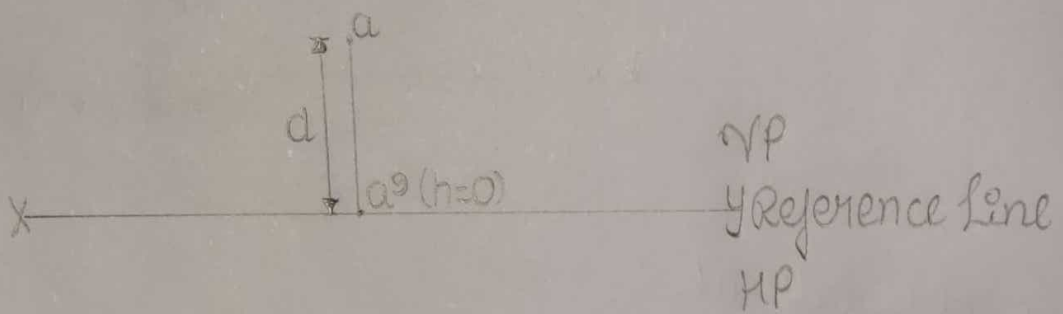


ii)

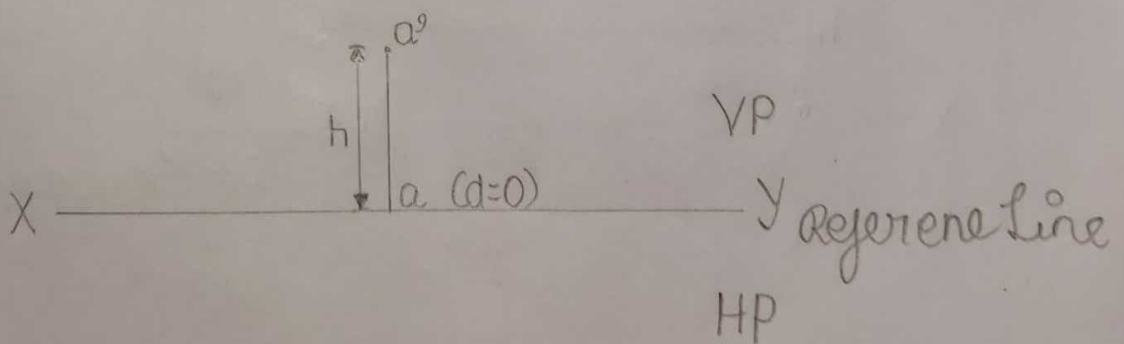


4.)

Parth Johari
2K20/B17/33
Pg 3

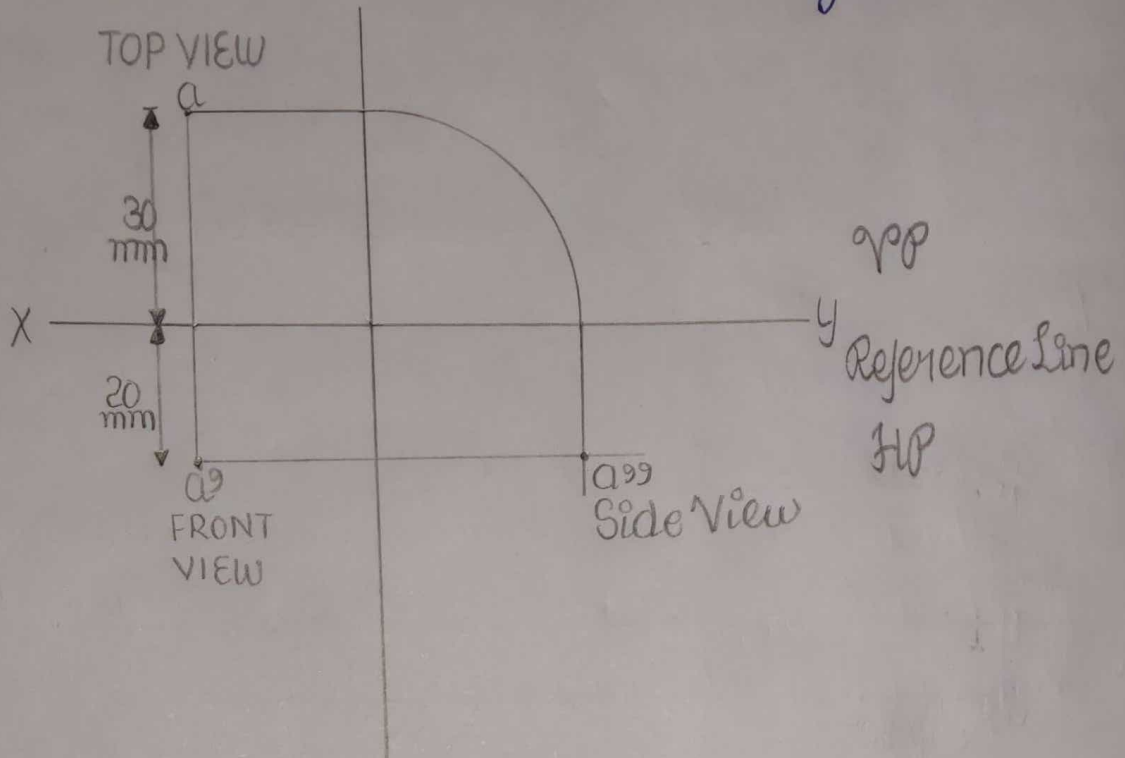


5.)

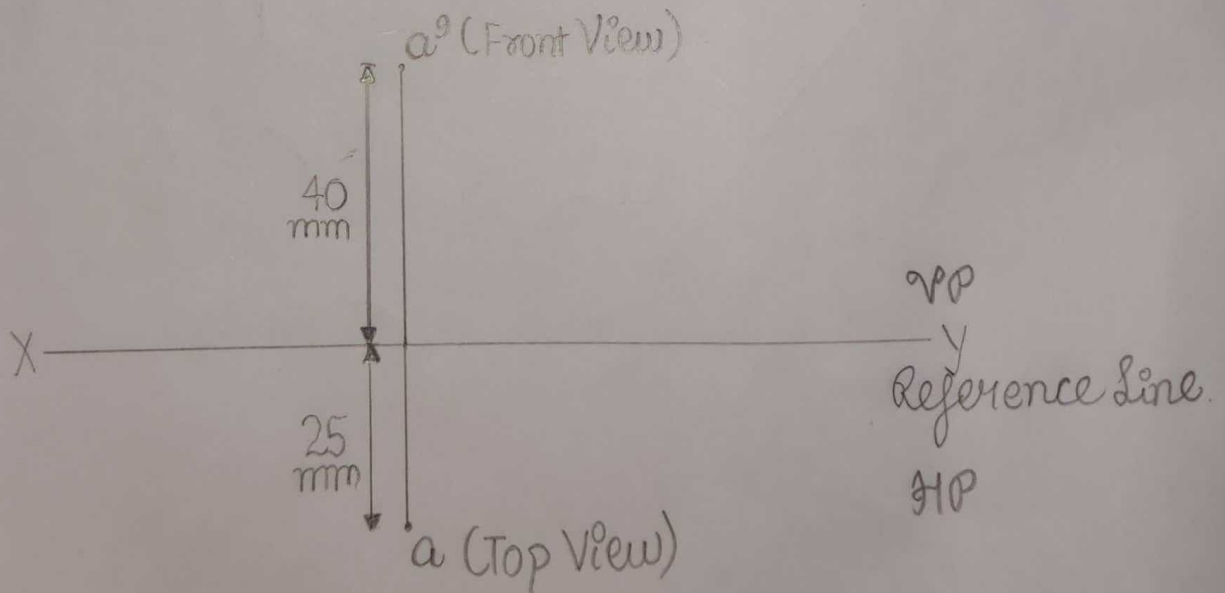


Q6) Page 4

Parth Johari
2K20/B17/33

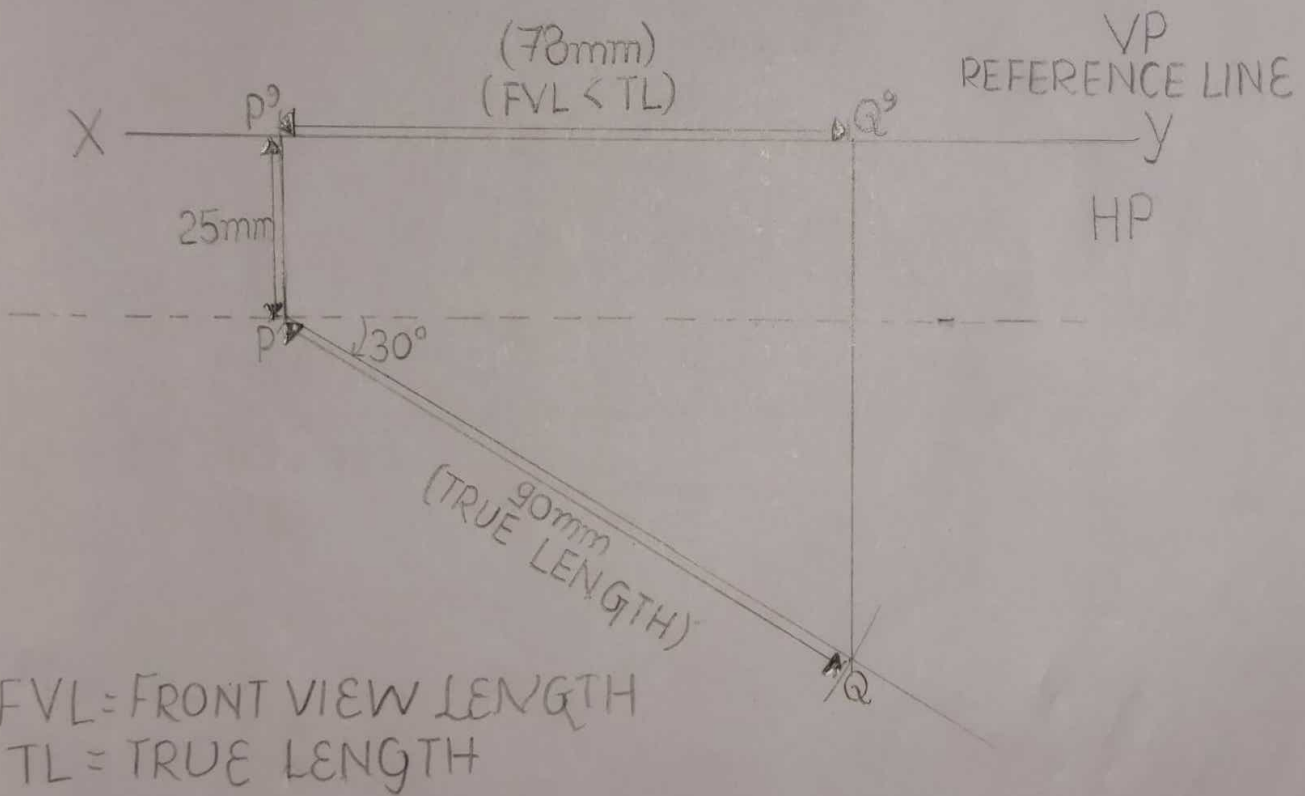

7.)

Parith Johra
2K20/B17/33
Page 5

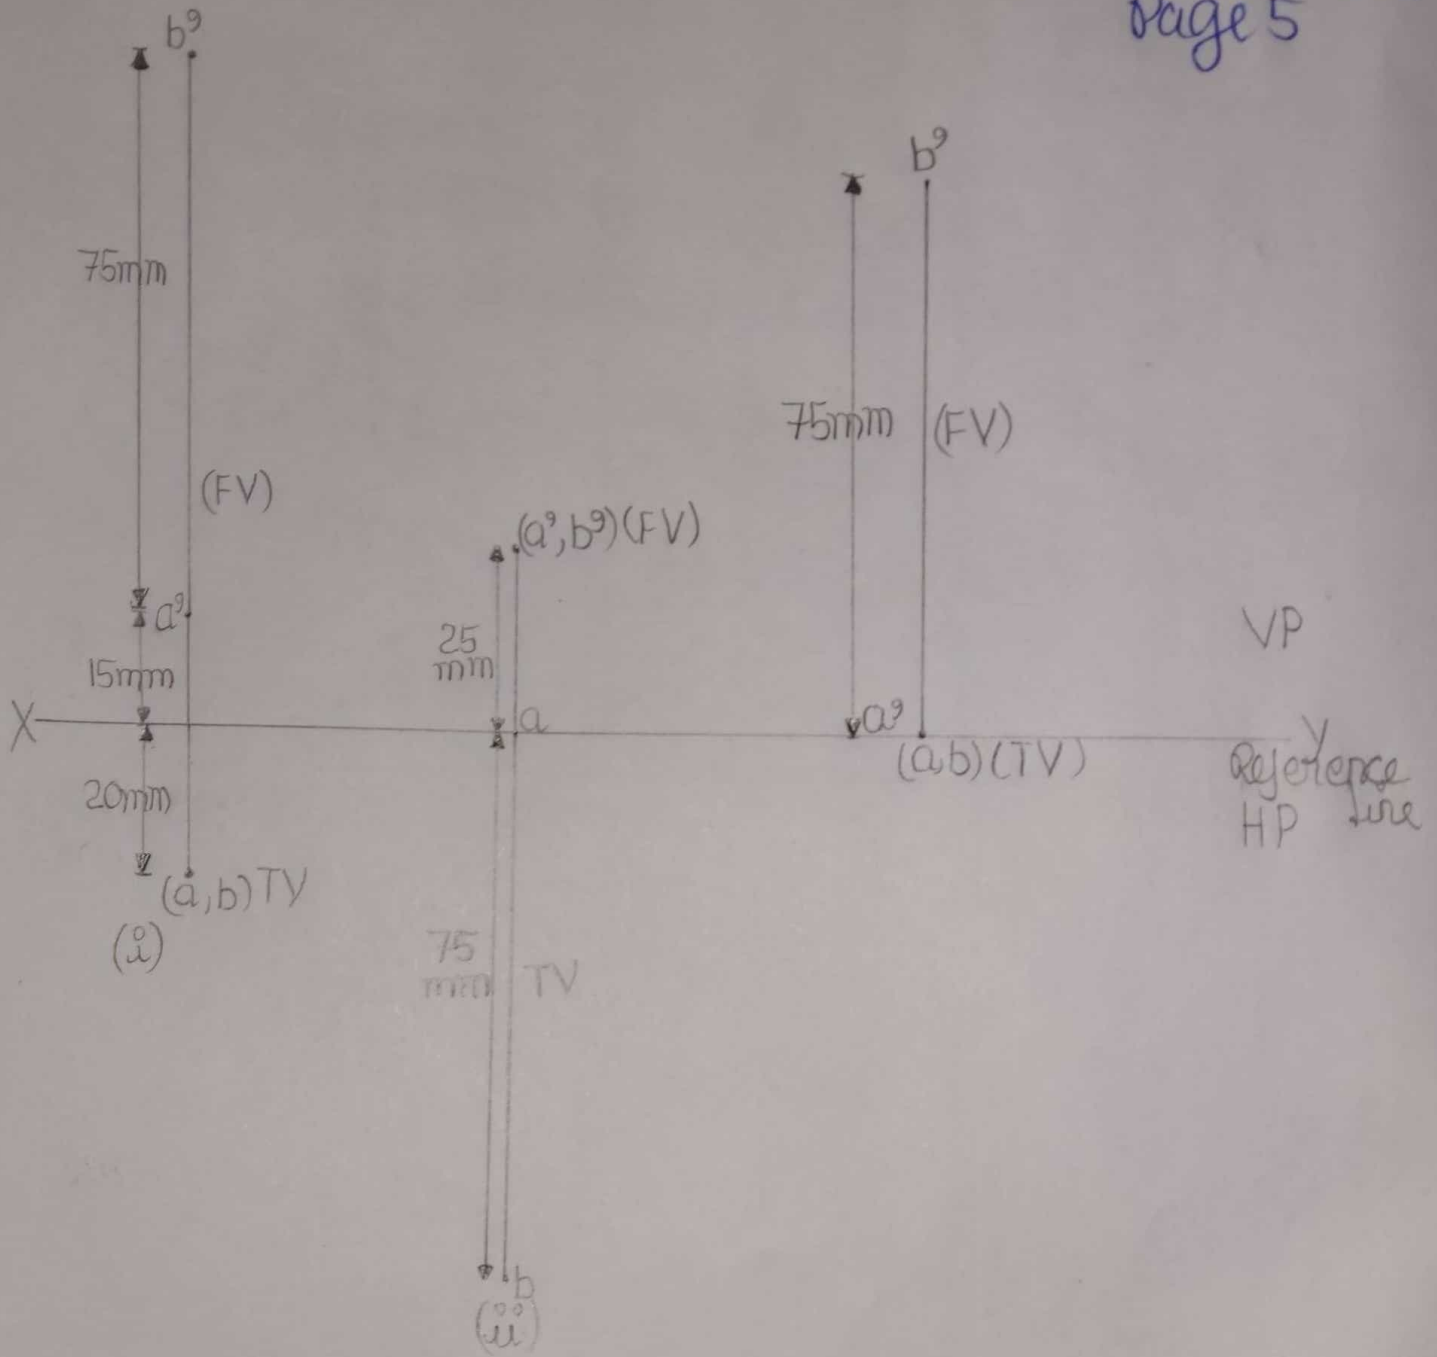

8.)

Ans 9.)

Page 6

Paath Johari
2K20/B17/33

The 'move' command is used to move objects at a specified distance and direction. Whenever we have to move the objects with precision we can use objectsnaps, grid snaps, coordinates, etc.

Ans 10

The copy command is used to copy the objects, the concept is the same as "Ctrl+C" to copy and "Ctrl+V" to paste, which can also be used in AutoCAD. The objects are copied in a specified direction and at a specified distance.