


DE-ENERGIZE TRANSFORMER BEFORE CHANGING TAPS	
HV CONNECTION (H1-H2-H3)	
% RATED VOLTS	CONNECTIONS
105	4 TO 5
102.5	3 TO 5
100	4 TO 6
97.5	3 TO 6
95	3 TO 7
92.5	2 TO 6
90	2 TO 7

The Tap Adjustment Table is found on the transformer label.

Torque connections to 72-in-lbs or 6 ft-lbs.

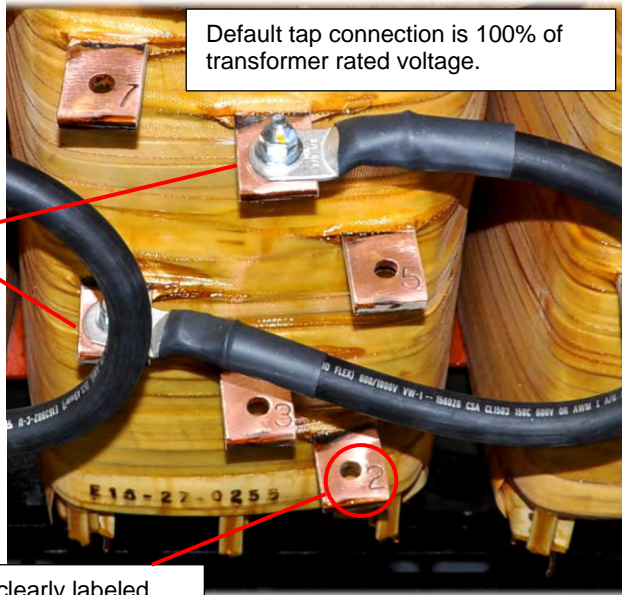

Default tap connection is 100% of transformer rated voltage.

Tap connection numbers are clearly labeled.