


Normally Open (NO)
Dry Contact
Connections

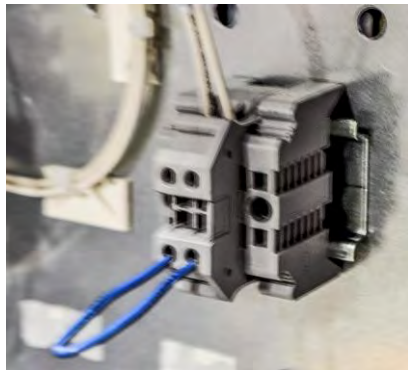

In a two-stage internal/external system, you can keep the external permissive dry contact signal permanently enabled by installing a jumper in the terminal block.