

Analog Point Name

Measured Value

Scroll through Analog Points using scroll bar.


Green dot means point is **OK**.

Red dot means point is in **alarm** condition.

Blue dot is for **status points**, not defined as alarm points.

Black dot (not shown) means point is not used or is **invalid** for this STS implementation.

The point you have scrolled to is highlighted.

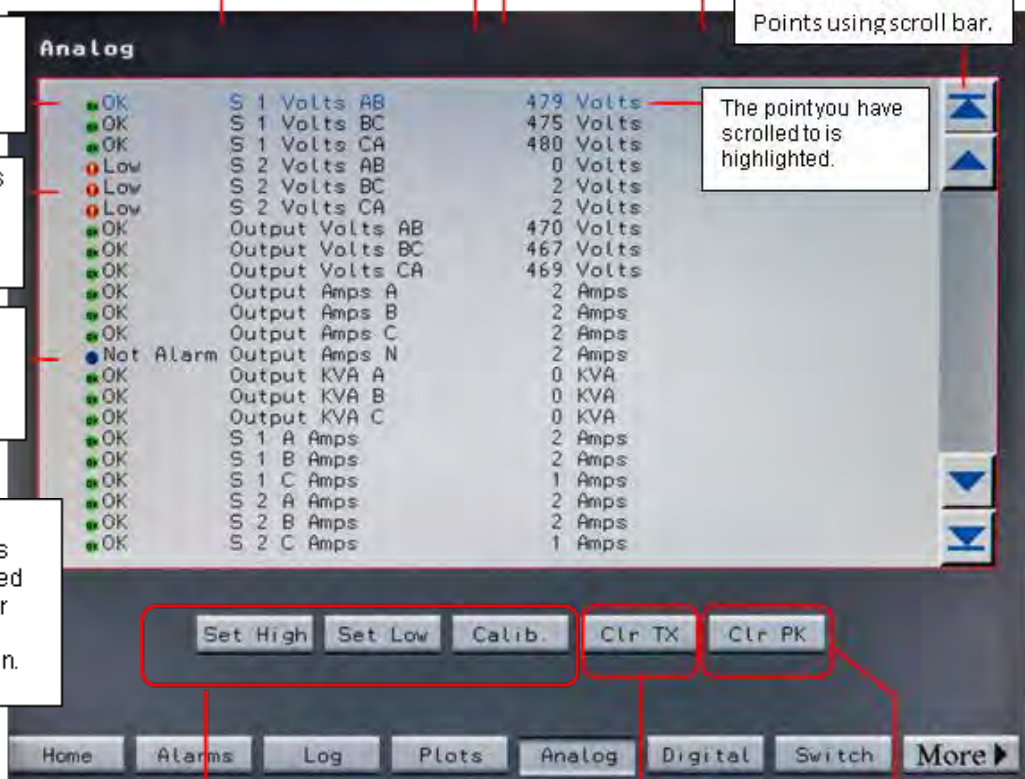

You can change analog point parameters using these buttons under Administrator or other higher access authority.

You can change the allowable measurement bracket for the point, thus changing the trigger for an alarm.

You can also calibrate the analog point's measurement.

Clr TX touched once clears the Transfer counter on the Home page. Touched twice, it also clears the total cumulative transfer counter.

Clr PK clears the peak (high) values of all analog points.