

To display this screen, select
Home → Devices → PDU → Readings


This **Sync** screen appears as the first “Readings” screen.

Outstanding input
voltage alarms prevent
release of the SKRU
key. Check the **Alarm**
screen and clear.

Voltage 1: voltage and
frequency

Voltage 2: voltage and
frequency

Circuit breaker status: closed
(red) or open (green).

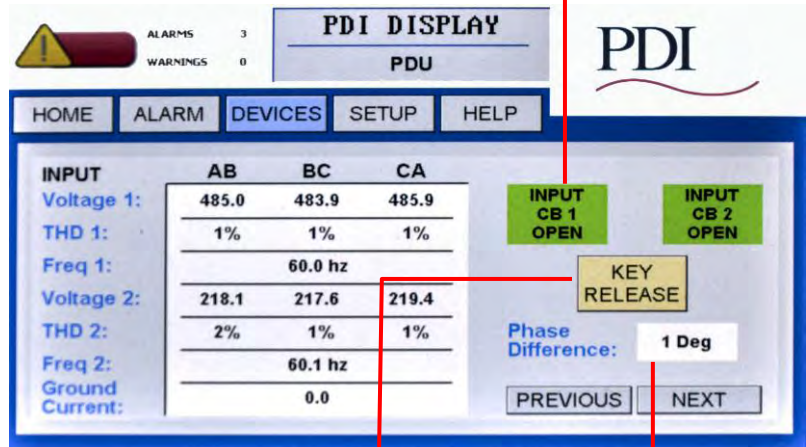

Touch **Key Release** to
release the SKRU key.

Phase difference between
sources must nominally be
 ≤ 20 degrees to release
SKRU key. Phase difference
maximum can be set during
PDU board setup.