


To display this screen, select  
**Home → Devices → PDU → Readings**  
This **Sync** screen appears as the first "Readings" screen.

Outstanding input  
voltage alarms prevent  
release of the SKRU  
key. Check the **Alarm**  
screen and clear.

Voltage 1: voltage and  
frequency

Voltage 2: voltage and  
frequency

Circuit breaker status: closed  
(red) or open (green).

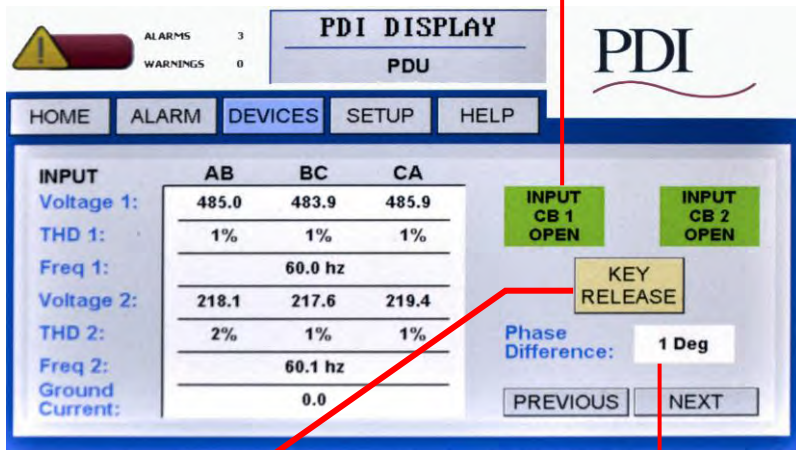

Touch **Key Release** to  
release the SKRU key.

**Phase difference\*** between sources  
must nominally be  $\leq 20$  degrees to  
release SKRU key.

**\*NOTE:** Phase difference maximum is set to 20 degrees by default but can be changed in manufacturing or by Eaton Service. Changing this parameter may adversely affect coordination with connected equipment. Customers wanting to change the maximum allowable phase difference should consult the factory at time of order or, for an installed PDU, consult Eaton Service.