


Select (touch) **PDU device name** in the device list. Device name turns blue when selected and device name displays in header.

**PDU** is the default generic device name.  
Users can change the device name in **SETTINGS**.


Touch **READINGS** to see PDU power monitoring data.

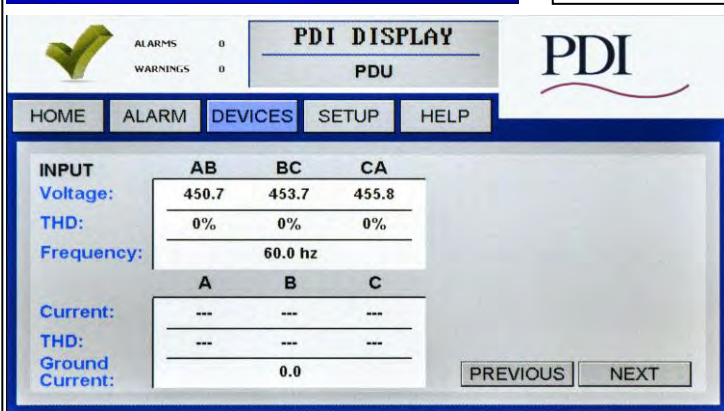

**INPUT** to the PDU transformer:

**Voltage:** AB BC CA  
**THD** (total harmonic distortion):  
AB BC CA  
**Frequency:** in Hz

**Current** A B C (optional)  
**THD** A B C (optional)  
**Ground Current**

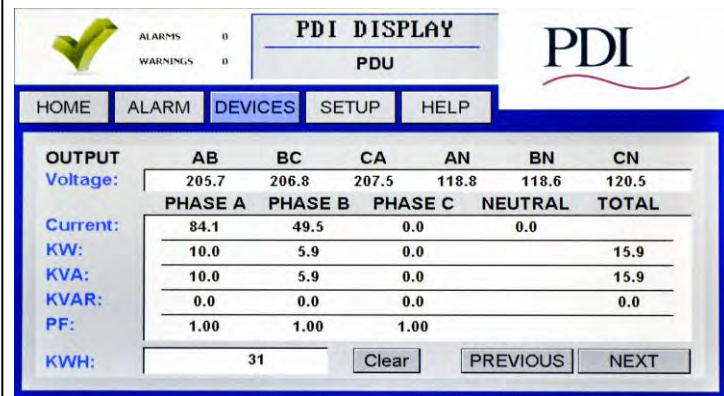

**OUTPUT** from the PDU transformer:

Instantaneous measurements:  
**Voltage:** AB BC CA AN BN CN

ABC(N) phase readings and totals:  
**Current**  
**KW**  
**KVA**  
**KVAR**  
**PF**

Cumulative Measurement:  
**KWH**  
Touch **Clear** to set KWH to 0.