


The optional **SPDs** are mounted in the Controls Compartment of the main cabinet.

Status Lights are on the device. You must open the front compartment door to see the lights:

- A **green** status light indicates normal operation.
- A **red** status light indicates loss of protection and SPD may need replacing.
- **Non-illuminated** status light indicates loss of power.

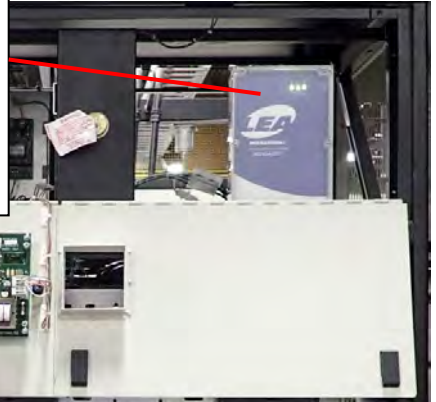

Status Lights for
each phase ABC

