

## External Permissive Signal


Dry contact (NO)  
Closed = enable

OR

120 VAC signal  
ON = enable

Enable/disable  
Color Monitor synch signal

## Internal Permissive Signal

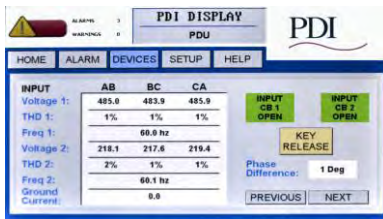

Color Monitor:  
1. Check for  
synchronization.  
2. Operator  
releases SKRU  
key using Sync  
Screen.