

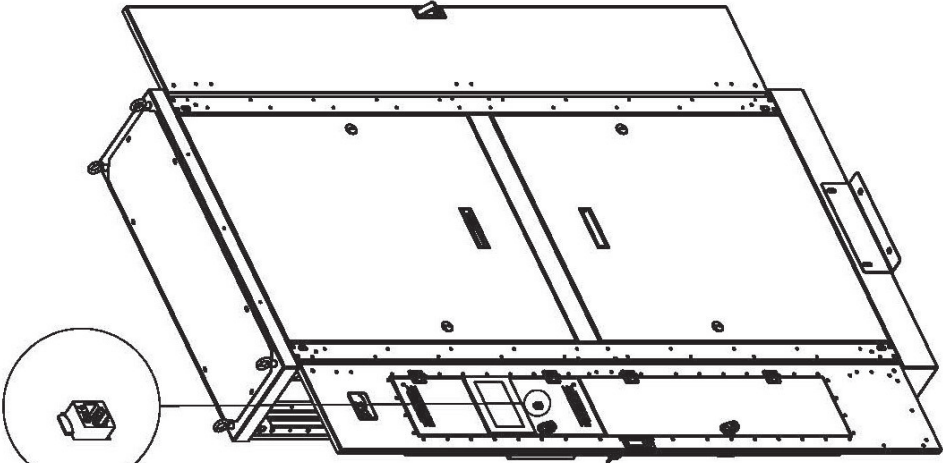


DOORS OPEN RIGHT SIDE VIEW

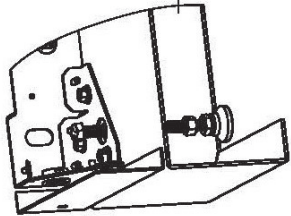

DETAIL F
SCALE 1 : 2
RJ45
CONNECTOR

DOORS OPEN LEFT SIDE VIEW

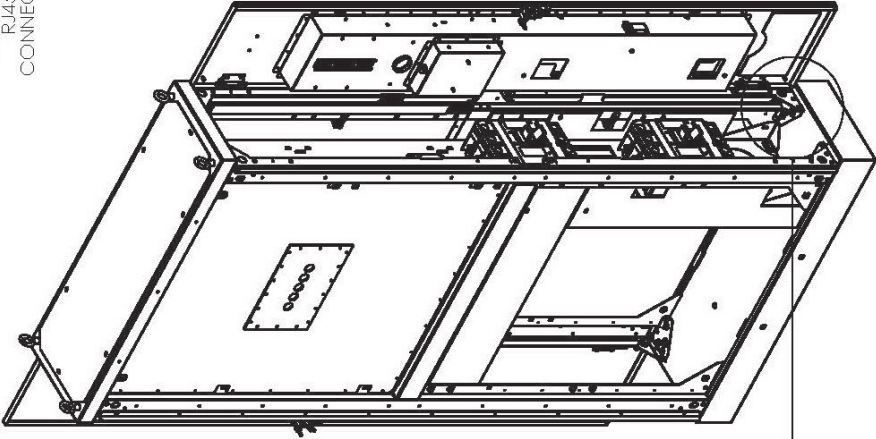

SCALE 1 : 4

DETAIL E
SCALE 1 : 2

- TO ACTIVATE INTERLOCK
1. SET RPP AND RESERVE SWITCH HANDLE TO OPEN.
 2. DEPRESS LATCH TO UNLOCK INTERLOCK.
 3. SLIDE INTERLOCK TO DESIRED COURSE.
 4. RELEASE RESERVE SWITCH HANDLE TO CLOSED.

MECHANICAL INTERLOCK SYSTEM

